

Revised 4-21-10

(Note - There is a stereo only version of this product.
See www.studiohub.com/legacy.php)

JU1

Install to connect XLR pins to chassis ground

JU2



Install to connect XLR pins to
power ground



Install to connect XLR pin 1 to
shield ground

JU3, JU4

Install for left and right in parallel
Remove for left only

