


When programmed for stereo operation:


L & R XLR feed both RJ45's in stereo.

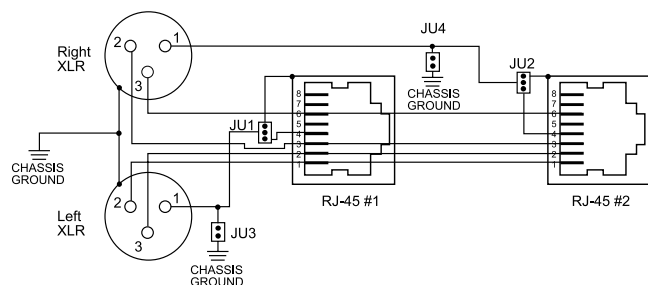

When programmed for Mono Operation:

Left XLR feeds RJ45-1, pins 1 & 2 only.

Right XLR feeds RJ45-2, pins 1 & 2 only.

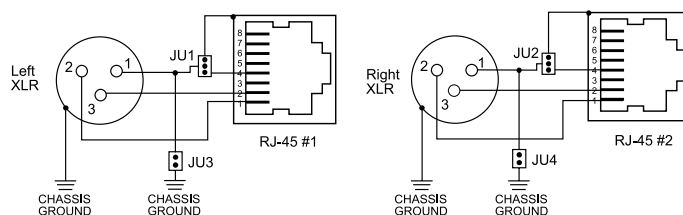

To configure for stereo operation

JU5 
 JU6 
 JU7, JU8, JU9, JU10 

XLR PIN1 select jumper

Install JU3 to connect
 Left XLR pin 1 to chassis ground

Install JU4 to connect
 Right XLR pin 1 to chassis ground



StudioHub+ RJ45 "A" for mono only
 or stereo operation

StudioHub+ RJ45 "B"
 for stereo operation

To configure for mono operation

JU5 
 JU6 
 JU7, JU8, JU9, JU10 

RJ45 shield and ground select jumpers

Left Right
 JU1 JU2  Install to connect
 XLR Pin 1 to RJ-45 shield
 JU1 JU2  Install to connect
 XLR Pin 1 to RJ-45
 power ground (RJ-45 pin 4)



Part # **SH-2XLR StudioHub+ Dual XLR Female Adapter Mono/Stereo**

+1 (615) 763-3033 • www.studiohub.com