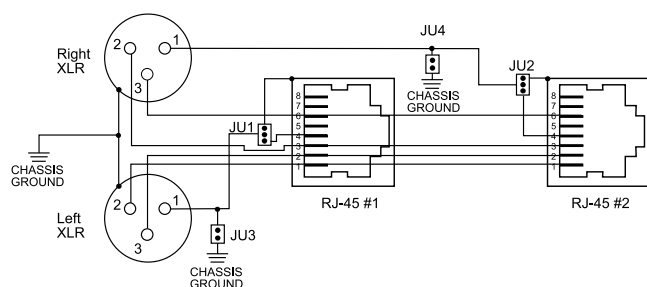



When programmed for stereo operation:

L & R XLR feed both RJ45's in stereo.

**When programmed for mono operation:**

Left XLR feeds RJ45-1, pins 1 & 2 only.

Right XLR feeds RJ45-2, pins 1 & 2 only.

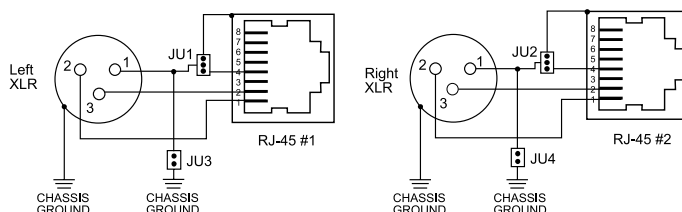**To configure for stereo operation**

JU5

JU6

JU7, JU8, JU9, JU10

XLR PIN1 select jumperInstall JU3 to connect
Left XLR pin 1 to chassis groundInstall JU4 to connect
Right XLR pin 1 to chassis groundStudioHub+ RJ45 "A" for mono only
or stereo operationStudioHub+ RJ45 "B"
for stereo operation**To configure for mono operation**

JU5

JU6

JU7, JU8, JU9, JU10

RJ45 shield and ground select jumpers

Left	Right	
JU1	JU2	Install to connect
		XLR Pin 1 to RJ-45 shield

JU1	JU2	Install to connect XLR Pin 1
		to RJ-45 power ground
		(RJ-45 pin 4)

