

How it works?



The **INOGENI REMOTE** is a device that can control the mixing function of **SHARE2/SHARE2U** and the switching function of **CAM-300** devices. You just need to apply correct wiring between the REMOTE and the INOGENI device. You will then be able to communicate with the device using the push buttons at the top of the device.

Connectivity

For SHARE2

Use a simple RJ45 cable

RS-232 (RJ-45 to RJ-45)

Do not plug the cable to the LAN connection of the SHARE2. Plug it to the RS232 port.

For SHARE2U and CAM-300

Use a RJ45 cable to a terminal block plug.

RS-232 (Terminal Block to RJ-45)

Do not plug a RJ45 cable between the SHARE 2U or CAM300 device and the REMOTE.

INOGENI device side

Pin 1: Receive
Pin 2: GND
Pin 3: Transmit
Pin 4: 5V supply

REMOTE side

Regarding +5V supply for REMOTE:



Under SHARE2/SHARE2U and CAM300, make sure to put switch number 6 to ON position.

Technical support

If you need any support on how to operate this device, contact us at info@btx.com for further assistance.