

# FS2

## Frame Synchronizer/Converter



## Installation and Operation Guide

Version 3.0r1  
Published December 2, 2022



# Notices

---

## Trademarks

---

AJA® and Because it matters.® are registered trademarks of AJA Video Systems, Inc. for use with most AJA products. AJA™ is a trademark of AJA Video Systems, Inc. for use with recorder, router, software and camera products. Because it matters.™ is a trademark of AJA Video Systems, Inc. for use with camera products.

Corvid Ultra®, Io®, Ki Pro®, KONA®, KUMO®, ROI® and T-Tap® are registered trademarks of AJA Video Systems, Inc.

AJA Control Room™, KiStor™, Science of the Beautiful™, TruScale™, V2Analog™ and V2Digital™ are trademarks of AJA Video Systems, Inc.

All other trademarks are the property of their respective owners.

## Copyright

---

Copyright © 2022 AJA Video Systems, Inc. All rights reserved. All information in this manual is subject to change without notice. No part of the document may be reproduced or transmitted in any form, or by any means, electronic or mechanical, including photocopying or recording, without the express written permission of AJA Video Systems, Inc.

## Contacting AJA Support

---

When calling for support, have all information at hand prior to calling. To contact AJA for sales or support, use any of the following methods:

Telephone	+1.530.271.3190
FAX	+1.530.271.3140
Web	<a href="https://www.aja.com">https://www.aja.com</a>
Support Email	<a href="mailto:support@aja.com">support@aja.com</a>
Sales Email	<a href="mailto:sales@aja.com">sales@aja.com</a>

# Contents

---

Notices . . . . .	2
Trademarks . . . . .	2
Copyright . . . . .	2
Contacting AJA Support . . . . .	2
<b>Chapter 1 – Introduction . . . . .</b>	<b>7</b>
Overview . . . . .	7
Video Features . . . . .	7
Audio Features . . . . .	8
Other Features . . . . .	8
Typical Applications . . . . .	8
Video Format Conversion . . . . .	9
FS2 Control . . . . .	9
Front Panel Control . . . . .	9
Remote Web Browser Control . . . . .	10
GPI Inputs and Outputs . . . . .	10
SNMP Interface Monitoring . . . . .	10
Optional FS2 Features . . . . .	10
Fiber I/O . . . . .	10
Dolby E Decoder Card . . . . .	10
Technical Description . . . . .	10
Video Processors . . . . .	11
Audio Processors . . . . .	12
In This Manual . . . . .	12
<b>Chapter 2 – Controls, Indicators, and Connections . . . . .</b>	<b>13</b>
Front Panel Description . . . . .	13
Alphanumeric Display . . . . .	13
Pushbuttons . . . . .	14
Control Knobs . . . . .	16
LED Indicators . . . . .	17
Incompatibility Alarms . . . . .	18
Rear Panel Description . . . . .	19
Connectors . . . . .	19
About Inputs and Outputs . . . . .	21
<b>Chapter 3 – Installation &amp; Configuration . . . . .</b>	<b>22</b>
Installation Overview . . . . .	22
Installation Summary . . . . .	23
Unpacking . . . . .	23
Shipping Box Contents . . . . .	23
Installing Optional Fiber Optic I/O Modules . . . . .	24
Installing Optional Cards . . . . .	24
FS2 Chassis Installation . . . . .	25
Physical Requirements for Mounting the Chassis . . . . .	25
Power Requirements . . . . .	26
Networking . . . . .	26
FS2 Default Network Settings . . . . .	27
Networking Using DHCP or Default Static IP . . . . .	27
Networking the FS2 Using Your Own Static IP . . . . .	28
Using Ping to Test the Network Connection . . . . .	29
Web Browser Control . . . . .	30
Software Update Installation . . . . .	30
Download the Latest FS2 Software . . . . .	30
Unpack the Software . . . . .	31
Uploading and Installing the Software to the FS2 . . . . .	31
System Cabling . . . . .	32
System Video/Audio Cable Connections . . . . .	32

GPI Connections . . . . .	32
FS2 Audio Level Choices—Pro or Consumer, US or EBU . . . . .	32
Computer Video Formats. . . . .	33
Physical Connection . . . . .	33
Menu Setup . . . . .	33
Scaling. . . . .	34
Genlocking . . . . .	34
Getting Your Computer Working with the FS2 . . . . .	34
<b>Chapter 4 – Display Menus . . . . .</b>	<b>36</b>
Controlling the FS2 via Front Panel Display Menus . . . . .	36
Parameter Menus. . . . .	36
Menu Group Buttons . . . . .	36
SELECT and ADJUST Knobs. . . . .	37
Menu Operation Examples . . . . .	37
Status Pages . . . . .	37
Simple Menu: Config Format Alarm Filters . . . . .	37
Multiple Parameter Menus: Video 1 ProcAmp. . . . .	38
Multiple Field Parameters: IP Address . . . . .	39
STATUS Menu Group . . . . .	40
S.1 I/O Status . . . . .	40
S.2 Vid1 Format Status. . . . .	40
S.3 Vid1 Format Alarm Status . . . . .	40
S.4 Vid2 Format Status. . . . .	41
S.5 Vid2 Format Alarm Status . . . . .	41
S.6 Output Status . . . . .	41
S.7 Power/Temp Alarm . . . . .	41
S.8 Caption Status . . . . .	41
S.9 Dolby Status . . . . .	42
S.10 Dolby Framer Status . . . . .	42
S.11 System Name . . . . .	42
REMOTE Menu Group. . . . .	42
1 Remote Control. . . . .	42
1.1 Authentication . . . . .	43
2.1–4 GPI IN 1–4 Response . . . . .	43
3.1–4 GPI 1–4 OUT . . . . .	44
Interaction of Presets and GPIs . . . . .	44
CONFIG Menu Group . . . . .	44
1 System Name . . . . .	44
2.1 IP Config . . . . .	45
2.2 IP Address . . . . .	45
2.3 Subnet Mask . . . . .	45
2.4 Default Gateway . . . . .	45
3 MAC Address (view only) . . . . .	46
SNMP Menu Parameters . . . . .	46
5 Power Supply Alarm. . . . .	46
6.1 Vid1 Format Alarm. . . . .	47
6.2 Vid2 Format Alarm. . . . .	47
7 Reference Alarm . . . . .	47
8 Hidden Menus. . . . .	47
9 Screen Saver . . . . .	47
10 Display Intensity. . . . .	47
11 Fan Speed. . . . .	48
12 Serial Number (view only). . . . .	48
13 Software Version (view only). . . . .	48
14 Reboot. . . . .	48
PRESET Menu Group . . . . .	48
1 Factory Preset . . . . .	48
1.1-1.40 Presets #1-#40. . . . .	49
Interaction of Presets and GPIs . . . . .	49
SYSTEM Menu Group . . . . .	49

1 Component In Format . . . . .	49
2 Component Out Format . . . . .	50
3 Analog Audio Std. . . . .	50
4 SDI1 3G Detect . . . . .	50
5 SDI2 Input Protect . . . . .	51
6 Fiber1 3G Detect . . . . .	51
7 Fiber2 Input Protect . . . . .	52
8 Genlock Source . . . . .	52
9 Frame Rates . . . . .	52
10 NTSC Standard. . . . .	52
11 Composite Downconv. . . . .	53
12 HDMI RGB Range . . . . .	53
14.0 AES/EBU SRC Mode . . . . .	53
14.1–14.8 AES/EBU SRC . . . . .	54
15 Dolby Decoder Input . . . . .	54
16 Dolby Decoder Mode . . . . .	55
17 Dolby Decoder Aux Out. . . . .	55
18 Dolby Decoder Aux Mode . . . . .	55
OUTPUT Menu Group. . . . .	56
1.1 SDI1 Video Out . . . . .	56
1.2 SDI2 Video Out . . . . .	56
2.1 Fiber1 Video Out . . . . .	56
2.2 Fiber2 Video Out. . . . .	56
3 HDMI Video Out . . . . .	57
4 Component Out . . . . .	57
5 Composite Out . . . . .	57
6 HDMI Audio Out . . . . .	57
7 AES/EBU Audio Out . . . . .	57
8 Analog Audio Out . . . . .	57
9.1 SDI1 3G Config . . . . .	58
9.2 SDI2 3G Config . . . . .	58
10.1 Fiber1 3G Config . . . . .	58
10.2 Fiber2 3G Config . . . . .	58
VIDEO 1 and VIDEO 2 Menu Groups. . . . .	58
Video Input and Output. . . . .	58
Background Fill . . . . .	60
Loss of Input . . . . .	60
Upconvert and Downconvert . . . . .	60
Aspect Ratio . . . . .	63
Sidebars. . . . .	64
Matte of Background Fill . . . . .	65
Proc Amp Controls (YUV) . . . . .	65
Color Corrector (RGB) . . . . .	66
Custom Conversion Settings. . . . .	67
Region of Interest (ROI) . . . . .	69
Timing and Delay . . . . .	70
Video Legalizer . . . . .	70
AFD. . . . .	71
Closed Captioning . . . . .	73
Input Scan and PsF. . . . .	74
SD Line 21Closed Caption Blanking . . . . .	74
Test Pattern . . . . .	75
Freeze . . . . .	75
AUDIO 1 and AUDIO 2 Menu Groups . . . . .	75
1.0 Audio Input . . . . .	76
1.1–1.16 Audio Map Ch1–16. . . . .	77
1.17–1.24 Audio Map Ch 1/2–15/16 . . . . .	77
2 Embedded Audio Out. . . . .	78
3 Audio Follow Video . . . . .	78
4 Audio Signal Gen. . . . .	78
Audio Delay Controls . . . . .	79

Audio Output Level Controls . . . . .	80
Audio Output Phase Controls . . . . .	80
Dolby Frammer Controls . . . . .	81
<b>Chapter 5 – Browser Remote Control . . . . .</b>	<b>83</b>
Remote FS2 Control Via a Web Browser . . . . .	83
General Web Browser Screen Description . . . . .	83
Controlling Multiple FS2s. . . . .	84
Resetting Values To Factory Settings . . . . .	85
Drop Down Parameter Operation . . . . .	85
Slider Operation . . . . .	85
Video Format Display . . . . .	85
Network Pane and Network Configuration Screen . . . . .	86
IP Address Type . . . . .	86
IP Address . . . . .	87
Netmask. . . . .	87
Default Gateway . . . . .	87
Alarm Configuration Screen. . . . .	88
Status Screen . . . . .	89
System Screen . . . . .	90
Config Screen . . . . .	91
System Name . . . . .	91
SNMP Parameters. . . . .	91
Hidden Menus. . . . .	92
Display Intensity . . . . .	92
UPnP Host . . . . .	92
UPnP Proxy. . . . .	92
Presets Screen . . . . .	93
Presets Screen Controls. . . . .	93
Interaction of Presets and GPIs . . . . .	94
Output Screen . . . . .	95
Video 1 & 2 Screens . . . . .	96
Audio 1 and 2 Screens . . . . .	97
Remote Screen . . . . .	98
Firmware Screen . . . . .	98
<b>Chapter 6 – SNMP. . . . .</b>	<b>100</b>
FS2 Simple Network Management Protocol . . . . .	100
SNMP Configuration . . . . .	100
Front Panel Screens . . . . .	100
Web Browser. . . . .	101
SNMP Configuration Parameters. . . . .	102
4.0 SNMP Enable . . . . .	102
4.1 SNMP Trap Destination 1 . . . . .	102
4.2 SNMP Trap Port 1. . . . .	102
4.3 SNMP Trap Destination 2. . . . .	103
4.4 SNMP Trap Port 2. . . . .	103
<b>Appendix A – Specifications . . . . .</b>	<b>104</b>
<b>Appendix B – FS2 Pinouts. . . . .</b>	<b>108</b>
GPI Pinouts . . . . .	108
Audio Connection Pinouts. . . . .	109
Analog Audio . . . . .	109
Digital Audio. . . . .	109
<b>Appendix C – Safety &amp; Compliance. . . . .</b>	<b>110</b>
<b>Warranty and Liability Information . . . . .</b>	<b>118</b>
<b>Index. . . . .</b>	<b>119</b>

# Chapter 1 – Introduction

---



## Overview

---

Featuring a flexible, “anything-in, anything-out” architecture, the dual-processor FS2 Universal Video/Audio Frame Synchronizer and Format Converter simultaneously works with two independent channels of 10-bit broadcast quality video and two independent groups of 16-channel audio.

The FS2 can be used as two separate Frame Synchronizers/Format Converters, or the two channels can be combined in many powerful ways—for example, sidebar keying where both the video and background graphics can be upconverted and combined.

The FS2 supports analog and digital I/O, with full input and output crosspoint matrices, allowing any I/O port to be assigned to either processor. With support of all broadcast video formats, the FS2 makes matching up disparate video and audio systems simple—one converter box does it all.

## Video Features

---

- The FS2 handles a wide variety of video formats. See ["Appendix A Specifications" on page 104](#) for a complete list.
- Dual video format converters, each featuring SD/HD (up/down), SD-to-SD (aspect ratio), and HD-to-HD (720/1080 cross) conversions.
- Dual video processors supporting proc amp and color correction.
- Dual frame synchronizers.
- Dual video/key framestores downloadable from the local area network.
- User-specified custom format conversion and scaling with variable crop, size, aspect, position, and Region of Interest parameters.
- Dual flexible keyers for video/key overlays or sidebar keying from the two video processors, the two internal video/key framestores, or internal matte generators.
- Closed captioning support, featuring true conversion between EIA 608 and 708 (SD and HD) CC formats.
- Active Format Description (AFD) support.
- Scan convert computer formats via a DVI-to-HDMI cable
- Dual 3G/HD/SD SDI I/O with embedded audio.

- Dual 3G/HD/SD Optical Fiber I/O (optional).
- HDMI I/O supporting 3D HDMI output.
- Component/Composite analog HD/SD video I/O, 12-bit.
- Looping reference input with flexible genlock.

## 3G Support

---

The FS2 supports several types of 3G video (and some associated embedded audio):

- 1080p59.94/1080p50 in both SMPTE level A or level B
- Muxed 3G Video: two separate 720p/1080i video signals muxed into one 3G level B signal
- Dual-Link Video in the form of 1080p59.94/1080p50 video on two 1.5G SDI cables.

In the case of Dual Link Video, the FS2 input processing can demux the two signals and send them (each with their associated 16-channel audio) to the two processors. For output, the FS2 can mux together the two video signals (and their audio) from the two processors into a Dual Stream 3G video output.

Control of 3G functionality can be set to automatic (using ANC data format ID), or with full manual control via the user interface.

## Audio Features

---

- Dual audio processors, each supporting 16-channel audio with full channel mapping.
- 16-channel AES/EBU, 8-channel balanced analog I/O.
- 16-channel embedded audio I/O with full mapping.
- AFV (audio follows video) support.

## Other Features

---

- Built-in front panel control via scrolling alphanumeric and graphical menu.
- Front panel LED status indicators for at-a-glance system monitoring.
- Linux operating system supporting full network compatibility, including Web-based remote control over 10/100/1000 Ethernet via an internal web server.
- Two fully redundant power supplies standard.
- Five-year international warranty with unlimited technical support.

## Typical Applications

---

The FS2 can be used in a very wide variety of video and audio signal conversion, adaptation, timing, and processing applications:

- Up/down/cross conversion between many SD and HD formats, including 1080p50/60.
- General purpose video frame synchronization.
- Analog-to-Digital and Digital-to-Analog audio/video conversion.
- Mux or Demux two separate HD signals from one 3G SDI signal.
- Convert 3G/HD/SD video over fiber to/from SDI (BNC).
- Use the built-in video processing amplifiers to adjust and/or color correct.
- Synchronize the timing of key and fill signals by putting both through the parallel FS2 video processors and adjusting their timing independently. Then key them using one of the two FS2 keyers or an external keyer.



- Use the HDMI input and a DVI-to-HDMI cable to scan-convert popular computer video formats to SD or HD, including full proc-amp functionality and aspect ratio adjustment.
- HD sidebar keying including using both SD video and SD sidebar graphics (analog or digital), upconverting both, and combining—all in the FS2.

## Video Format Conversion

---

The FS2 can convert almost any input format to nearly any output format, as long as the frame rates are of the same family. The three families are:

- 59.94/29.97/23.98
- 50/25
- 60/30/24

Available input and output formats are listed later in this appendix.

### Conversion Exceptions

---

- The following frame rates are not supported for input or output:
  - 720p23.98/24/25/29.97/30.
- The FS2 cannot convert a 29.97 or 59.97 input to 23.98 Hz.
- The FS2 cannot convert a 30 Hz or 60 Hz input to 24 Hz.
- Outputs of 23.98 or 24 Hz can be derived only from 23.98 or 24 Hz inputs.
- Component I/O does not support 1080p.
- The FS2 does not support reverse 3:2 pulldown.
- The FS2 does not accept or produce 4:4:4 YCbCr, RGB, or XYZ inputs or outputs.
- The FS2 does not accept or produce YCbCr 4:2:2 12-bit inputs or outputs.
- The FS2 does not support embedded audio output for the following formats:
  - 2K1080p 29.97 or 2K1080p 30
  - 2K1080p 59.94 or 2K1080p 60 when 3G Config is set to 3 Gb Level B or 1.5 Gb DualLink.
- The FS2 does not convert NTSC to PAL-M, or vice versa.

## FS2 Control

---

FS2 operation can be monitored and changed in a number of ways. Feature sets in each of the control methods vary, although the front panel and web browser interfaces offer many of the same features.

### Front Panel Control

---

The FS2 front panel offers the most direct control, ideal for use in machine rooms or wherever quick changes and status checks must be made. The buttons and knobs control menus in the display, allowing you to fully configure the system according to your purposes. You can control inputs, outputs, processing paths, keying, and much more.

## Remote Web Browser Control

---

The FS2 internally contains an optimized web server that allows remote monitoring and parameter setting via an Ethernet 10/100/1000 network-attached computer running a web-browser. Networks can be closed local area networks, a straight computer-to-FS2 cable, or for greatest flexibility, exposed through a firewall to a broadband WAN. From a network-connected computer you can communicate with one or more FS2 devices, even getting them to identify themselves via LEDs on the front and rear panel.

## GPI Inputs and Outputs

---

General Purpose Inputs and Outputs are available on the FS2 back panel to provide contact closure control. Using the inputs, an external contact closure activates a specified function on the FS2. Using the outputs, specific FS2 functions can produce a contact closure to activate any desired function on external equipment. The functions to be activated by an input or that can activate an output are set using the front panel and browser menus.

## SNMP Interface Monitoring

---

SNMP offers remote network monitoring of alarm conditions.

## Optional FS2 Features

---

### Fiber I/O

---

The FS2 supports optional AJA Optical Fiber I/O modules as follows:

- Single Input, LC connector
- Single Input SC connector
- Single Output LC connector
- Single Output SC connector
- Dual Input LC connectors
- Dual Output LC connectors

FS2's Fiber I/O supports the 3G/HD/SD SDI protocol. Only AJA modules are supported; use of other manufacturers' modules is not supported and may void the warranty.

### Dolby E Decoder Card

---

The current FS2 software supports a Dolby E Decoder option in the right-hand option slot under the option top cover.


## Technical Description

---

The FS2 features an incredibly flexible architecture offering two identical Video/Audio processing units, both of which can access any input or drive any output. For Video processing, each processor can also access the other video processor for sidebar keying or other functions that involve both video signals. For audio

processing, each audio processor has access to any audio input for full channel mapping capability, and each audio processor outputs a 16-channel group that can be embedded in the SDI/HDMI/Fiber outputs and/or sent to the AES or Analog outputs.

Figure 1. FS2 Simplified Block Diagram

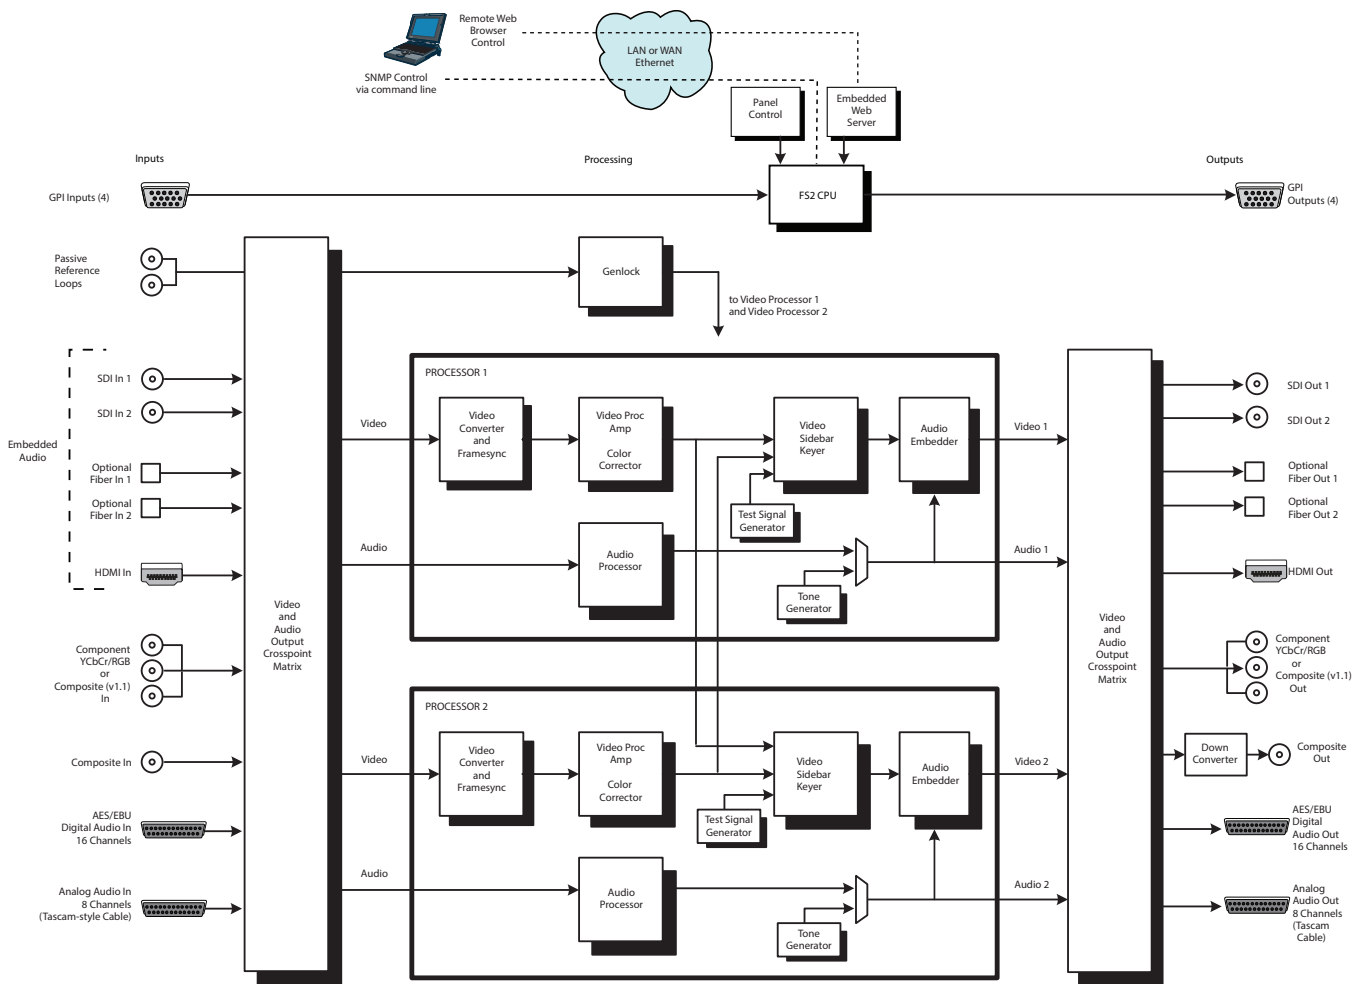

## Video Processors

The two Video Processors are identical and perform format conversion, frame synchronization, signal processing, and keying operations. Each video processor has access to any video input from the Input Crosspoint Matrix.

Up, down, or cross conversion is done with very high quality scalars. De-interlacing is performed with high quality motion-adaptive processing including diagonal filters. The Processing Amplifier and Color Correctors support video signal adjustment with standard Proc Amp controls and RGB-style color correction.

The keys in each video processor can operate in several modes:

- Add a background for HD sidebar upconversion. The background can be Black, a user-configurable matte, video from the other video processor (which itself can be upconverted), or a video still (future firmware release) from the internal stillstore.
- Add a video/key graphic from the internal graphic stillstore (future firmware release)
- Combine the two video processors in various ways, such as creating a live “over-the-shoulder” key.

The Video Processors can also be used as a still store and output full screen stills or test patterns.

## Audio Processors

---

The two audio processors accept analog, digital, or embedded audio inputs as chosen by the input crosspoint matrix. Inputs can be selected from Embedded (SDI, Fiber, or HDMI), AES, or Balanced Analog and full channel mapping supports any mixture of the inputs. Each audio processor processes and outputs 16 channels. The output of each processor can be embedded in its respective Video processor output (SDI, Fiber, or HDMI), or sent to the AES or Balanced outputs. For 3G and Dual link Inputs, the Audio processors can have access to all 32 channels.

## In This Manual

---

Chapter 1: Introduction provides an overview and a list of box contents.

Chapter 2: Controls, Indicators, and Connections describes controls, indicators, and connections.

Chapter 3: Installation and Configuration provides complete instructions for installing and configuring the FS2.

Chapter 4: Display Menus explains how to use the FS2 controls and display menus.

Chapter 5: Browser Control explains how to use the FS2 remotely via a web browser on a network-attached computer.

Chapter 6: SNMP discusses FS2 support of SNMP.

Appendix A: Specifications presents a list of technical specifications for the product.

Appendix B: Pinouts explains the FS2 rear panel connector pinouts.

Appendix C: Safety & Compliance provides regulatory compliance statements, advisories and warnings.

Warranty and Index

# Chapter 2 – Controls, Indicators, and Connections




**NOTE:** The AJA FS2 should be plugged into 3-wire 100-240 VAC 50/60 Hz power (autosensing) before you make connections to other equipment. The AC cords provide a path to ground for accidental static discharge to protect system equipment. The FS2 has two fully independent and redundant power supplies and will operate with one or both AC power cords plugged into the unit. However, fault-tolerance exists only if both power supplies are connected and plugged into separate branch circuits. Then if power is lost on a branch or one of the supplies, the FS2 will continue to operate on the remaining circuit and power supply.



**Warning!** To meet safety regulations for leakage current and to ensure redundancy in the event that a branch circuit breaker shuts off a branch, connect the FS2 dual power supplies to separate branch circuits.

## Front Panel Description

Figure 2. AJA FS2 Front Panel Controls and Indicators

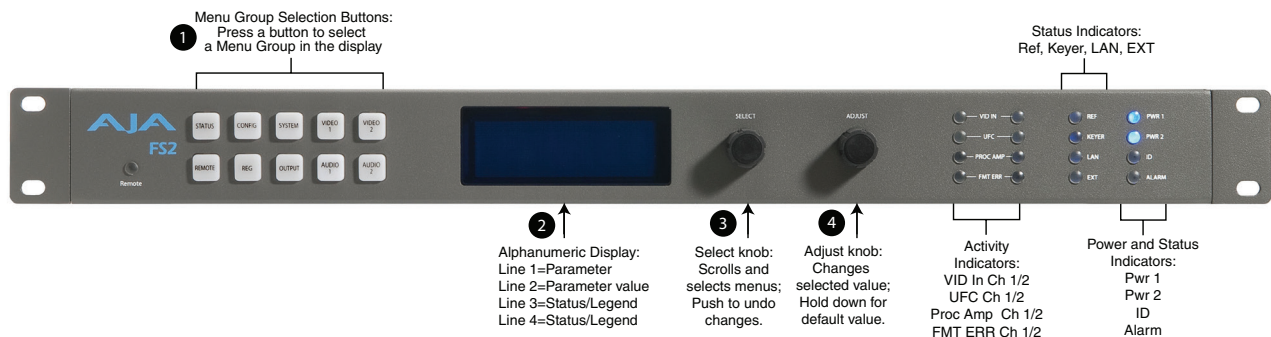

## Alphanumeric Display

The FS2's control system is designed to be quick and easy to use. The four-line alphanumeric display shows menus that are numbered and grouped by function. The menu groups are easily accessed using pushbuttons which correspond one-to-one with the groups (one button per menu group). The menu lines, which are 23 characters wide, display the following information:

- First line—parameter number and name.
- Second line—the editable value set for a parameter.
- Third and fourth lines—current status, labels, or prompts.

When you edit a parameter containing multiple values, such as the IP address, the value currently being edited blinks.

## Operational Summary

---

The 10 front panel pushbuttons allow you to select display menu groups. The two knobs allow you to change menus and set parameters within the menu groups. These functions can be summarized as follows:

- Select a menu group: Press one of the ten pushbuttons.
- Scroll through menus in a group: Turn SELECT.
- Edit a menu parameter: Stop SELECT on the menu.
- Change a parameter value: Once the parameter is selected with SELECT, turn ADJUST to set the value. Changes apply in a few seconds.
- To edit a multiple part parameter, such as the IP address, push the ADJUST knob momentarily (the value blinks). To save the whole parameter after editing, push ADJUST momentarily again.
- Coarse adjust a value (for use with parameters that have more than 10 selections):
  - 10x speed - Hold down the menu group button (the button turns blue) and turn ADJUST. The values will change in 10x increments.
  - 100x speed (available for extremely wide-range parameters, like Audio Delay) - After enabling 10x speed above, momentarily release and press that group button a second time (the button turns light blue). Turning ADJUST will now change the value in 100x increments.
- Undo a change (restore previous setting): Push SELECT momentarily.
- Reset to factory default: Hold down ADJUST for 4 seconds.

## Pushbuttons

---

These are the general rules of Menu Group button operation:

- Press one of the ten Menu Group buttons to access the associated menu group. The SELECT and ADJUST knobs control the display menus.
- The selected Menu Group button lights and the other buttons turn off.
- Each menu group returns to the last menu changed when you select the button. After a reboot, each group displays its first menu.
- Hold down a button (turns blue) to make coarse adjustments using the Adjust knob. Release the button to make fine adjustments.

The following text briefly lists the functions accessed by each pushbutton:

### STATUS

---

Displays the Status Menu Group, which shows current machine status and error conditions:

- Video 1, Video 2, and Caption status
- Reference and Genlock status
- Output Status
- Power and Temperature status
- System Name display
- Alarms

### REMOTE

---

Displays the Remote Menu Group, which lets you select how to control the FS2:

- Control by local front panel, remote devices, or local and remote
- GPI input and output behavior

## CONFIG

---

Displays the Config Menu Group, which lets you configure the FS2 for your environment:

- System Name setting
- IP and SNMP settings, MAC address
- Alarm control
- Hidden Menus and Display intensity (brightness)
- System serial number and software version
- System reboot

## PRESET

---

Displays the Reg Menu Group, which accesses the memory registers:

- Store, Recall, and edit the names of Presets
- Factory Preset (defaults)

## SYSTEM

---

Displays the System Menu Group, which lets you change or enable FS2 video and audio input and system functions:

- Video input format settings, including 3G setup
- Audio input format and sample rate conversion settings
- Genlock reference source selection
- Frame rate selection and NTSC standard (North America/Japan)
- Input downconversion setting (HD to SD)
- HDMI RGB Range

## OUTPUT

---

Displays the Output Menu Group, which selects output sources:

- Composite downconversion
- Video output selections
- Audio output selections
- 3 G output configuration
- HDMI video and audio configuration

## VIDEO 1 and 2

---

Displays the Menu Groups that access Video Processor video input, format, and conversion selections and adjustments (separate buttons access Video Processor 1 and Video Processor 2):

- Video Processor Input Source and Background Fill selections
- Video Processor Output Format and Mode
- Loss of Input
- Video Processor Up, Down, Aspect, Edge, and Custom Conversions
- Video Processor Matte Adjustments
- Video Processor H and V timing
- Video Processor Proc Amp, Color Corrector, and Legalizer
- AFD embedding, input scan format (i or p), and caption translation
- Video Processor Test Patterns
- Freeze Output

## AUDIO 1 and 2

Displays the Audio 1 Menu Group, which allows you to set Audio Processor 1 selections and adjustments:

- Audio Processor input selection, output embedding, and Audio Follow Video (AFV)
- Audio Signal Generator Selection
- Audio1 channel and stereo mapping
- Audio1 level, phase, and delay adjustments

## Control Knobs

These are the general rules of SELECT and ADJUST knob operation:

### SELECT

Turning the SELECT knob performs these actions:

- Turn SELECT in either direction to scroll through the menus.
- Stop on a menu to enter that menu for editing.
- Turn SELECT within a menu to scroll through multiple parameters.
- Pause on a parameter to select it for editing. For multiple fields in a parameter, use SELECT to move through the fields (after pressing Adjust to enter field editing mode).
- Push SELECT momentarily to undo and restore the previous setting.

### ADJUST

Turning the ADJUST knob performs these actions:

- Turn ADJUST to change the values of a selected parameter.
- In most cases, leaving a value in place for a moment sets that value.
- To perform special actions, such as recalling a register, push the knob to confirm the displayed value. Display line 4 indicates such special actions.
- Some parameters having multiple fields, such as IP Address require you to push the ADJUST knob to select a field, and push again to save changes.
- Hold down the knob to reset a value to the factory default; for multiple field values, all fields are reset to the default.

*Table 1. SELECT and ADJUST Knob Operation Summary*

Function	Knob Action
Scroll through menus. Scroll through parameters in a multiparameter menu. Scroll through numerals or letters in a parameter.	Turn SELECT backwards or forward.
Enter edit mode for a menu. Enter edit mode for a parameter. Enter edit mode for values, numerals, or letters. Advance to the next value, numeral, or character to edit.	Turn and stop SELECT on the item to edit. (For some multiple parameter menus, push ADJUST so that the selected parameter blinks.)
Increment/decrement a value.	Turn ADJUST.
Coarse adjust a value.	10x speed - Hold down button (turns blue) and turn ADJUST. - or - 100x speed - Hold down button (turns blue), momentarily release and press button again (turns light blue) and turn ADJUST.
Reset a value to the factory default value. Set a number to the default value (typically zero). Set a letter to a default value (typically space).	Hold down ADJUST.



Function	Knob Action
Take (commit) a change to an edited parameter.	Automatic after a few seconds for most parameters. For multiple field parameters, push ADJUST momentarily to save.
Abandon (undo) a change before committing.	Push SELECT momentarily.
Take (commit) a special action, such as a preset recall.	Push ADJUST momentarily.

## LED Indicators

Indicators on the front panel are multi-state LEDs that light when a condition is present. They are conveniently arranged in groups to show specific subjects. For example, indicators for the two video processors are aligned in two columns with 1 and 2 labeling the tops of the columns.

The indicators and the conditions that cause them to light are as follows:

### REMOTE

A multicolor LED that indicates the current control mode:

- Green = Local Only (front panel control only)
- Red = Remote Only (remote browser or panel control only)
- Amber = Local + Remote (front panel and remote control both enabled)

### VID IN 1/2 (blue)

An active video input signal is detected for Channel 1 or 2.

### UFC 1/2 (blue)

The Universal Format Converter has been changed from the default setting for Channel 1 or 2.

### PROC AMP 1/2 (blue)

The Proc Amp has been changed from the default setting for Channel 1 or Channel 2 (it's no longer at unity).

### FMT ERR 1/2 (blue)

The selected input and output formats are incompatible for Channel 1 or Channel 2.

### REF (blue)

The REF connector has an external reference video source applied.

### KEYER (blue)

Reserved for future use.

### LAN (blue)

The FS2 is connected to an operational local area network. This indicator lights momentarily when web browser selections are changed.

### EXT (blue flashing)

Flashes when a remote control source (remote panel or GPI) has initiated a change in the system.

### PWR 1/2 (blue)

---

Power Supply 1 or 2 is operational and receiving power. Both PWR 1 and PWR 2 LEDs must be lit to indicate redundant power is available.

### ID (blue)

---

Flashes when you right-click on an FS2 system name and choose Identify in the web interface Network list. This action helps identify which FS2 you're controlling when multiple FS2 units are operated from a single computer. The ID LEDs on the front and rear panels perform the exact same function. No matter which side of a rack you're facing, you'll be able to see one of the LEDs.

### ALARM (red)

---

An alarm event has been detected. Press the STATUS button for information. The Alarm LED may light because of a disconnected or failed power supply, other hardware failure, video incompatibilities, or genlock loss. (Any of these conditions may be suppressed using the Alarm Suppress parameters, CONFIG 5, 6.1, 6.2, and 7.)

## Incompatibility Alarms

---

The FS2 produces signal incompatibility alarms for a number of reasons. When incompatible I/O formats are detected, an alarm can be triggered with these results:

- Lights the relevant alarm LED on the front panel (FMT ERROR, 1 or 2).
- Displays an alarm in the browser user interface.
- Influences selection of the first-displayed status screen.
- Generates an SNMP trap (if configured).
- Triggers a GPI Output (if configured).

The following tables explain how to interpret the alarms.

## Incompatible Video Formats

---

The table below shows conversions that the FS2 cannot do and which will cause video format alarms to be generated.

*Table 2. Incompatible Video Formats*

<b>Input</b>	<b>Incompatible Output Formats</b>
525i59.94	1080p(&PsF)23.98
1080i59.94	1080p(&PsF)23.98
720p59.94	1080p(&PsF)23.98
1080p29.97	1080p(&PsF)23.98
1080PsF29.97	1080p(&PsF)23.98
625i60	1080p(&PsF)24
1080i60	1080p(&PsF)24
720p60	1080p(&PsF)24
1080p30	1080p(&PsF)24

## Example Reference and Video Incompatibility Alarms


---

Video incompatibilities that the FS2 may detect include the following:

Table 3. Video Incompatibility Examples

Video Incompatibility Detected	Alarm Status screen will show		
Genlock Source is set to "Reference", but no Reference signal is detected.	VID1 BKGD GEN OUT	SDI 1 Matte Reference	525i59.94  No Input 1080i59.94
Genlock Source signal format is not compatible with selected Input Format.	VID1 BKGD GEN OUT	SDI 1 Matte Reference	Incompat  Incompat 1080i59.94
Genlock Source signal format is not compatible with selected Output Format.	VID1 BKGD GEN OUT	SDI 1 Matte Reference	525i59.94  Incompat Incompat
Input signal is not compatible with selected Output Format.	VID1 BKGD GEN OUT	SDI 1 Matte Reference	Incompat  1080i59.94 Incompat

## Rear Panel Description

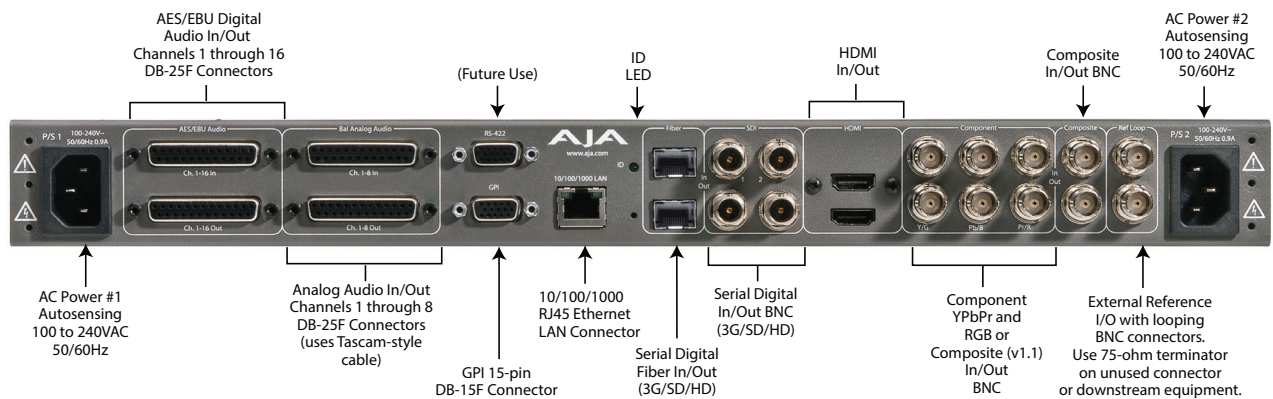

## Connectors

### P/S 1 and P/S 2

Two 3-pin grounded connectors provide AC power to the two independent power supplies. The supplies are autosensing for 100–240 VAC, 50/60 Hz. Only one connection is required for operation, but both connectors must be plugged into AC power for redundant power protection.

### AES/EBU Digital Audio

16-Channel, 24-bit AES Input and Output on separate DB-25 connectors (Tascam pinout, see ["Audio Connection Pinouts" on page 109](#)).

### Analog Audio Ch.1-8 In/Out

8 channel Balanced Analog Audio Input and Output on separate DB-25 connectors (Tascam pinout, see ["Audio Connection Pinouts" on page 109](#)). Audio A/D and D/A converters are 24 bit.

## RS-422

---

DB-15 connector reserved for future use.

## GPI

---

The GPI DB-15 connector provides connection to external equipment or circuits via an isolated TTL-compatible interface. Four GPI inputs and four outputs are available. See ["GPI Pinouts" on page 108](#).

Using the REMOTE menu group, you can program the actions of the GPI inputs and outputs individually. Contact closures on the inputs can trigger a wide variety of FS2 functions. Alarms or loss of video can trigger the GPI outputs.

## 10/100/1000 LAN

---

This RJ45 connector provides an Ethernet 10/100/1000 port for connection directly to a computer or to a LAN through an Ethernet hub or switch.

## SDI Fiber In/Out (optional)

---

Two optional Optical Fiber SFP modules support single- or dual-channel Fiber Input and/or Output. 3G/HD/SD SDI protocol is supported. Only AJA Optical Fiber SFP modules are supported—use of other manufacturer's modules is not supported and may void warranty.

## SDI In/Out

---

Digital video with embedded audio. Two SDI Input and two SDI Output BNCs. 10 bit 3G/HD/SD SDI is supported.

## HDMI In/Out

---

HDMI In and Out is supported on HDMI connectors. Standard SD and HD video formats are supported, including support for 8 channel embedded audio. Also supports standard computer DVI video formats (input via a DVI to HDMI cable). HDCP (copy protected) HDMI video is not supported.

## Component In/Out YPbPr/RGB Video

---

Component Analog Video is supported on 3x BNCs for Input and Output. Video A/D and D/A converters are 12-bit and support both SD and HD. YPbPr format is supported or the outputs can be switched to RGB. Additionally, with v 1.1 firmware composite analog video is supported.

## Composite In/Out

---

Composite NTSC or PAL standard definition Input and Output. Composite Video A/D and D/A converters are 12-bit.

## Ref Loop

---

The Reference Loop BNCs accept an Output timing reference signal. The reference can be SD Blackburst or HD tri-level sync. Examples of permissible reference video input signals:

- 525 Color Black
- 625 Color Black
- 1080i Tri-level Sync
- 720p Tri-level Sync

The 2 BNCs are a passive loop: one BNC is for the Input, and the remaining BNC can be connected to another piece of equipment in the reference chain or terminated.

*NOTE: For proper operation the input Reference signal must be stable and properly terminated using a 75-ohm terminator on either the unused loop connector or the last piece of downstream equipment to which the Ref Video is connected.*

## About Inputs and Outputs

---


To operate the FS2, first select an Output Video Format (In the Video 1 or 2 menu); then select an Input port. The FS2 will automatically determine the selected input video format and convert it (if necessary) to the selected Output Video Format.

Any Video or Audio Input can be selected by either Processor 1 or Processor 2, and either processor's output can be sent to any output port.

The composite Video Output has a dedicated Downconverter so it can always display an output even if it is selected to output an AV Processor that is set to output HD.

# Chapter 3 – Installation & Configuration

---

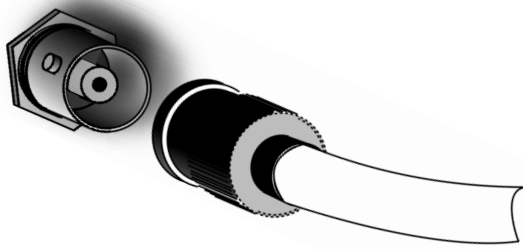

## Installation Overview

---

The installation and set up of an FS2 is very simple. Plug both AC supply cords into AC mains power (separate branch circuits for redundancy), connect the LAN connector to a LAN, WAN or local computer with a web-browser, and then connect source and destination video and audio equipment.



**Hazard!** High Voltage. This situation or condition can cause injury due to electric shock.



**Warning!** Do not open the chassis. There are no user-serviceable parts inside. Opening the chassis will void the warranty unless performed by an AJA service center or licensed facility



**Warning!** Disconnect the external AC power supply line cord(s) from the mains power before moving the unit.



**Warning!** Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.



**Warning!** Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the device.



**Warning!** Since the Mains plug is used as the disconnection for the device, it must remain readily accessible and operable.



**Warning!** Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the device.



**Warning!** To meet safety regulations for leakage current, connect the FS2 dual power supplies to separate branch circuits.



**Warning!** Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.

## Installation Summary

---

All the steps of installation and configuration are documented in this chapter and are summarized as follows:

1. Unpack the shipping box, removing the FS2 and two power cords.
2. Install any physical options, such as fiber optic I/O modules or Dolby I/O cards.
3. Mount the physical chassis as desired: front rack, rear rack, or desk mount. If you are mounting multiple FS2 units, try to place them visually in the same area so you can use an attached computer to turn on and see the ID LED of the FS2 you're communicating with. For physical installation details, see "[FS2 Chassis Installation](#)" on page 25.
4. Connect the two FS2 power cords to mains AC. For redundancy, use both power supplies and connect them to separate branch circuits so that the FS2 will continue to operate even if a circuit breaker opens on one branch.
5. If you plan to use remote control, connect your computer to the FS2 directly using an Ethernet cable, or connect both the computer and the FS2 to a local area network through an appropriate hub or router. Also set the FS2 IP address in the menus, and then use a computer to test (ping) the FS2 over the network connection to verify communication. For details, see "[Networking](#)" on page 26.
6. Install a web browser on the computer, if not already present, for accessing the FS2 web pages. You can access the pages simply by entering the FS2 IP address in the browser address field. See "[Web Browser Control](#)" on page 30 for details.
7. Connect the FS2 to system audio and video sources, including VTRs, monitors, DVD players, video switchers, and audio mixers. For details, see "[System Cabling](#)" on page 32.
8. Test the FS2 with all of your devices to verify everything is working.

## Unpacking


---

### Shipping Box Contents

---

An FS2 chassis is shipped with two AC power cords and any late-breaking news bulletins (if applicable). Chassis rackmount brackets are provided as part of the chassis with screws.

Figure 3. Shipping Box Contents

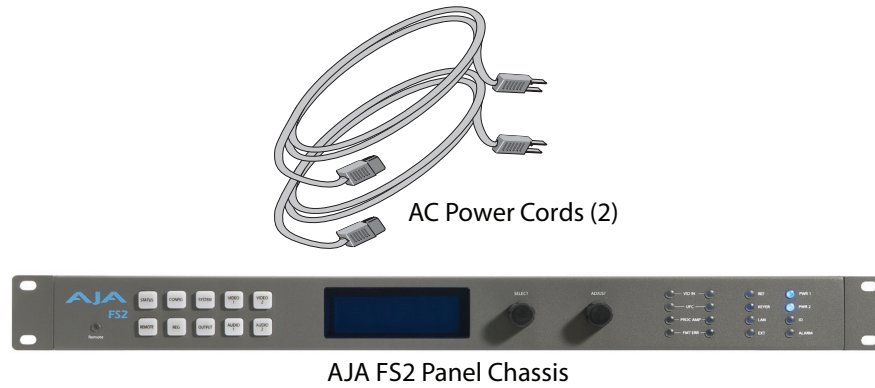

As you unpack the shipping box, carefully examine the contents. Ensure you received everything and that nothing was damaged during shipment. If you find any damage, immediately notify the shipping service and supply them with a complete description of the damage. AJA will repair or replace damaged items.

If you find shipping damage, contact your AJA dealer or distributor for details on how to have your FS2 repaired or replaced.

**NOTE:** Save packing materials and the shipping box. If your FS2 ever requires service or you move your system, use the packaging materials and box for safe shipment.

## Installing Optional Fiber Optic I/O Modules

The optional AJA Fiber Optic I/O modules are purchased separately from the FS2. These AJA fiber modules work with the FS2:

- Single-channel LC connector modules
- Single-channel SC connector modules
- Dual-channel LC connector modules



**Caution!** Only AJA fiber optic I/O option modules may be inserted into the FS2 Fiber slots. DO NOT USE fiber modules from other manufacturers; they will damage the FS2 connectors and circuits..

Install the optional fiber I/O modules by inserting them into the rectangular holes marked Fiber on the back panel with the electrical connectors facing downward. Press gently but firmly until the modules seat in the inside connectors. For additional installation and operation details, see the instructions provided with the fiber modules.


## Installing Optional Cards

Optional cards install in the two option slots on the FS2 circuit board. Access them by removing the small top cover as explained and illustrated below:

1. Disconnect AC power.
2. Remove the four screws securing the small cover on top of the FS2.
3. Insert the cards into the card-edge connectors on the FS2 circuit board.
4. Insert the two supplied screws (with washers) through the holes in the cards into the mounting standoffs. Tighten the screws, being careful not to over tighten and damage the cards.
5. Replace the small cover and tighten down the screws holding it in place



Figure 4. Option Card Installation

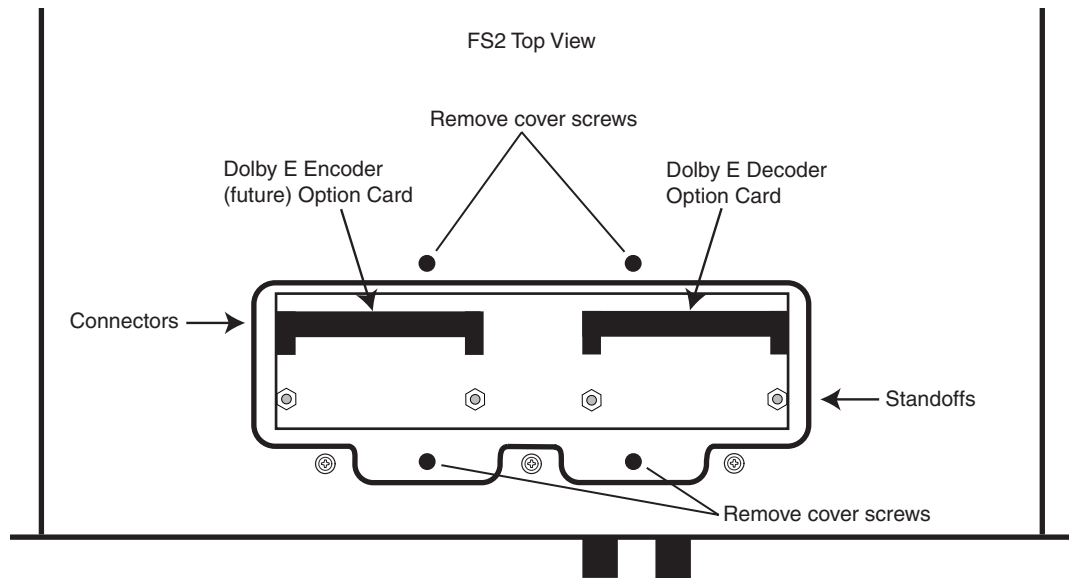

## Dolby Decoder Installation

The v1.1 software release supports Dolby Decoder cards in the right-hand option card slot. Disconnect AC power, remove the top panel option cover, and install the card in the right-hand slot as described above.

After installation, access the front panel or browser menus, and set these parameters as you prefer for the Dolby option:

- System parameters 15, 22.2, 22.3, and 22.4
- Audio 1 and Audio 2 parameters 1.0–1.24

## FS2 Chassis Installation

### Physical Requirements for Mounting the Chassis

You can mount the FS2 chassis in two ways:

- Rackmounting—attach the FS2 (rear or front mounted) to a standard 19-inch wide equipment rack. The chassis occupies only one vertical rack unit.
- Desktop—lay it on a horizontal flat surface.

### Chassis Dimensions

When planning the equipment location, consider the chassis dimensions:

- Height—1 rack unit, 1.75 inches (4.5 cm)
- Depth—16 inches (40.65 cm)
- Width—17.5 inches (44.45cm)
- Weight—7.85 pounds, 3.56 kilograms

### Cabling and Cooling Requirements

Observe these precautions when placing your FS2:

- Plan adequate space for cable routing from the back of the chassis. Ensure that cable connectors are not stressed and cables are not bent or crimped.

- When rack mounting or stacking multiple FS2 chassis, ensure adequate airspace for cooling around the FS2 units. Note the location of cooling vents on all equipment next to the FS2 and ensure none are obstructed.

*NOTE: FS2 units can be stacked vertically without limit as long as there is an adequate supply of cool air around the FS2 vents.*

## Power Requirements

---

The FS2 requires the following input voltage and power.

- Input Voltage—Chassis: autosensing 100VAC to 240VAC, 50/60Hz, fully redundant with both power supplies diode isolated.
- Power Consumption—55 Watts.

## Networking


---

You can network the FS2 directly to a laptop or other desktop computer using a single Ethernet cable (straight or cross-over), or connect it to a local area network (LAN). In either case, the FS2 connects via its 10/100/1000 Base-TX Ethernet connector. A LAN is a shared network that includes other Ethernet devices all attached via a hub or digital switch. LANs may be divided into zones separated by software or hardware routers. Routers may also be used to connect the LAN to an outside wide area network (WAN) such as the internet.

Devices on a LAN have IP addresses which may be fixed and permanent or dynamically assigned by the network (DHCP). When attaching the FS2 to a LAN, talk to your network administrator to find out how they want it connected (static IP or DHCP). Your IT department will be able to supply the information you need to install the FS2 on a LAN.

The following illustration shows a network connection example; your installation may differ.

Figure 5. FS2 Network Example, Two FS2s on a LAN, with Laptop for Remote Control

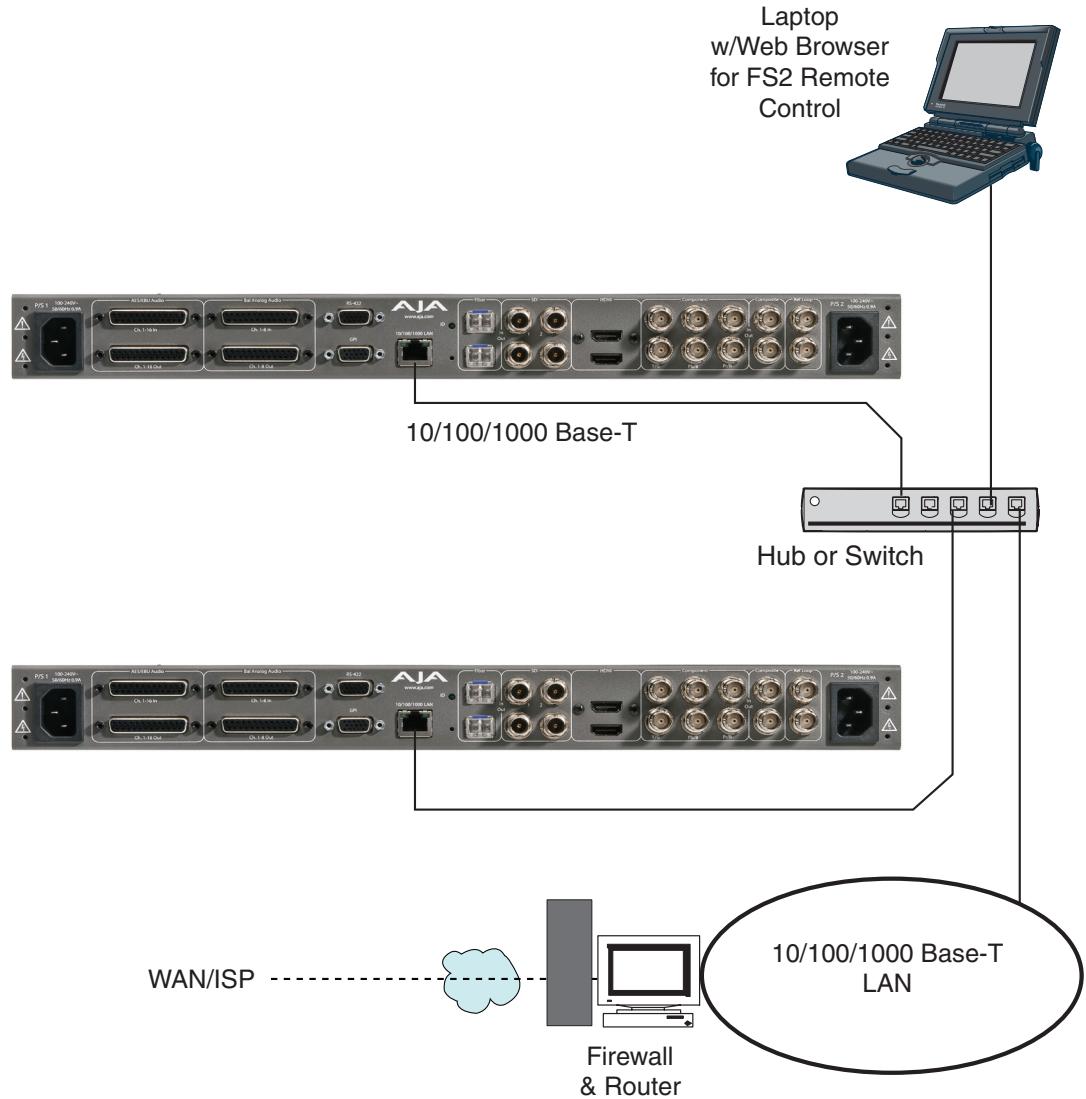

## FS2 Default Network Settings

The FS2 ships from the factory set for DHCP networking, and can be manually reset to the following default network settings:

IP Address	192.168.0.2
Subnet Mask	255.255.255.0
Gateway	192.168.0.1

## Networking Using DHCP or Default Static IP

The FS2 factory default configuration automatically looks for a DHCP server to issue an IP address. If your network includes a DHCP server, plug the FS2 into the network and connect with the FS2 as follows:

1. Press the CONFIG button.
2. Turn the SELECT knob to navigate to config parameter 2.2. Note on a piece of paper the DHCP-supplied IP address shown.

3. With your laptop or desktop computer connected to the same LAN as the FS2 and DHCP enabled, type the IP address you noted into the browser address field and press Enter. You should now see the FS2's browser Status screen.

If the FS2 cannot get an address from the network DHCP server, the FS2 will automatically use a preset factory static IP address of 192.168.0.2. You can access the FS2 using the default static address as follows:

1. Set your computer's IP address to whatever address you prefer.
2. Set the computer's Subnet mask to 255.255.255.0 (most PCs default to the proper netmask when the address is set).
3. Set the gateway address, if used, to match the FS2 default: 192.168.0.1. Alternatively, change the FS2 gateway address to match your gateway:
  - A. Press CONFIG, turn SELECT to 2.4 Default Gateway, push and then turn ADJUST to change the first group of digits.
  - B. Turn SELECT to advance to the next set of numbers, and turn ADJUST to set these numbers.
  - C. Continue using SELECT and ADJUST to set the full address.
  - D. When finished, push ADJUST momentarily to save the address.
4. Run a browser on the computer and type "192.168.0.2" (the factory static IP address). You should now see the FS2's browser status screen.

When you can access the FS2 screens, see "[Chapter 5 Browser Remote Control](#)" on [page 83](#) for details about configuring the FS2 using a browser.

## Networking the FS2 Using Your Own Static IP


---

If you don't want to use DHCP or the default static IP address, you can set your own static IP address:

1. Select the CONFIG button and use the SELECT knob to navigate to parameter 2.1 IP CONFIG. Use the ADJUST knob to select Static.
2. Turn SELECT to navigate to parameter 2.2 IP ADDRESS. The display shows the default static IP address: 192.168.0.2.
3. Change the IP address as follows.
  - A. Push the ADJUST knob momentarily so that the first octet (set of numbers) blinks, and then turn ADJUST to change the numbers.
  - B. Turn SELECT to advance to the next set of numbers, and turn ADJUST to set these numbers.
  - C. Continue using SELECT and ADJUST to set the full address.
  - D. When finished, push ADJUST momentarily to save the address.
4. Turn SELECT to advance to 2.3 Subnet Mask. Use the SELECT and ADJUST knobs as in the previous step to set the desired subnet mask.
5. Turn SELECT to advance to 2.4 Default Gateway. Use the SELECT and ADJUST knobs as in the previous step to set the desired gateway address.
6. Run a browser on the computer and type in the IP address you set for the FS2. You should now see the FS2's Status screen.

When you can access the FS2 screens, turn to "[Chapter 5 Browser Remote Control](#)" on [page 83](#) for details about configuring the FS2 using a browser.

Figure 6. Setting FS2 Static IP Address

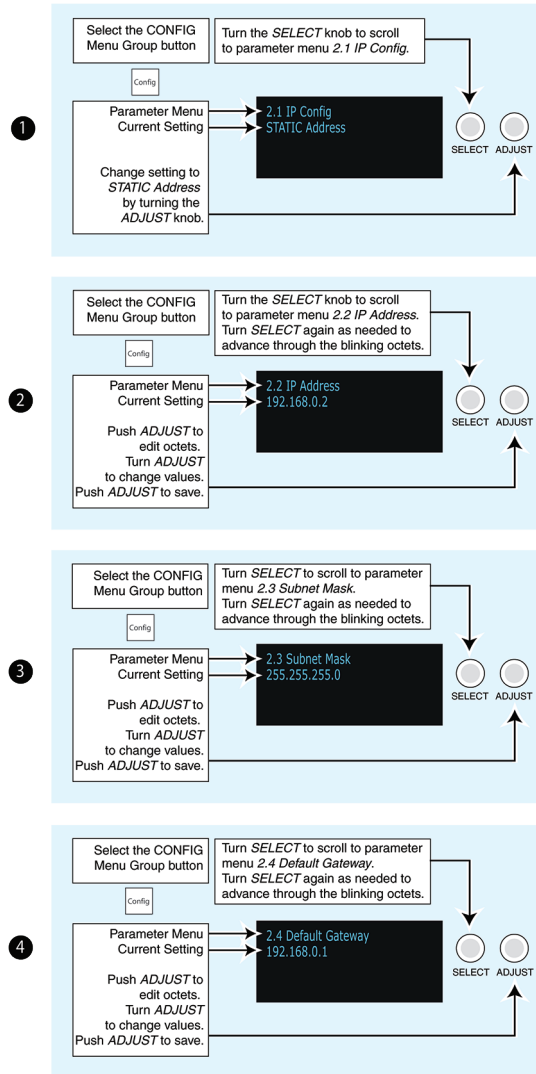

## Using Ping to Test the Network Connection

If you have connected the FS2 to a computer and set up the IP address and still do not see the FS2 screens in your browser, you can ping the network to verify the connection. Simply run the Ping utility from a Mac OS X or Windows PC computer attached directly or on the same LAN as the FS2 as described below:

### Mac Ping Procedure

1. Find the Utilities Folder inside of the Applications Folder.
2. Locate the "Terminal" utility application and double-click it.
3. On the FS2, select the CONFIG button and go to parameter menu 2.2 to read the IP address.
4. At the Mac terminal prompt, enter ping and the IP address noted in step 3. For example: ping 192.168.0.2
5. If successful, the ping utility will respond that packets were sent, received and how long it took. For example:  
64 bytes from 192.168.0.2: icmp\_seq=0 ttl=64 time=0.590 ms

6. If unsuccessful, check the FS2 network settings and resolve the problem with your IT administrator.

## Windows PC Ping Procedure

---

1. From the Start button, select the All Programs menu.
2. Select Accessories/Command Prompt from the All Programs list.
3. On the FS2, select the CONFIG button and go to parameter menu 2.2 to read the IP address.
4. In the PC Command Prompt utility, enter ping and the IP address noted in step 3. For example: ping 192.168.0.2
5. If successful, the ping utility will respond that packets were sent, received and how long it took. For example:  
64 bytes from 192.168.0.2: icmp\_seq=0 ttl=64 time=0.590 ms
6. If unsuccessful, check the FS2 network settings and resolve the problem with your IT administrator.

## Web Browser Control

---

To control the FS2 from a web browser on a network attached computer, enter the FS2 IP address as a URL in the browser. For example, if the FS2 IP address were "90.0.6.31", you would then type into the web browser: <http://90.0.6.31>. This topic is explained in greater detail in Chapter 5: Browser Remote Control.

*NOTE: The web UI (browser GUI) will keep up with most changes initiated at the front panel. However, the web UI may not reconnect (displays "Disconnected") when network changes are initiated at the FS2 front panel. To manually reconnect, type the new IP address into the browser, or click the browser Refresh button. Sometimes the browser caches the old FS2 address. If you can't get the browser to connect, try clearing the Browser history to clear the cache, and then enter the new address again.*

## Software Update Installation

---

Although the FS2 comes from the factory pre-installed with software, it may not be as up-to-date as software posted on our AJA website. This topic describes the steps required to update the software in your AJA FS2.

### Download the Latest FS2 Software

---

Current and past releases of FS2 software are available on the World Wide Web from AJA's website. To get the software, point your browser to the FS2 support page, which will contain helpful FS2 information and links to the updates.

<https://www.aja.com/en/products/fs2/#support>

Once you're at the update page, you can select FS2 software files to download to your Mac or PC for upgrading your local FS2 machine.

*IMPORTANT: FS2 hardware requires different firmware, depending on serial number. See [Table 4 on page 31](#) for compatible firmware versions. Attempts to install the incorrect version will post a Firmware Failed Verification message on the FS2 webpage.*

Table 4. Compatible Firmware for FS2 Hardware

FS2 Serial Number Range	1FF000500 thru 1FF009999	1FF010000 and up
Firmware Version	v2.x.x.x	v3.x.x.x

## Unpack the Software

FS2 software update files are “ZIP” files that you can open with a number of standard and third party file compression applications. The software image that you’ll install on the FS2 is a file with a name like FS2\_ver\_1.0.0.0.bin or similar.

*NOTE: Depending on your PC or Mac operating system settings, the “.bin” extension may not be visible to you in a file directory.*

## Uploading and Installing the Software to the FS2

Uploading and installing the software update requires a PC or Mac that can “see” the FS2 via its Ethernet connection. Follow this procedure to install the software:

1. Point your browser at the FS2’s upgrade page by clicking on the Update Firmware link at the bottom of the navigation box on the left-hand side of any FS2 web page.

Figure 7. Update Firmware Browser Screen for 3.x Firmware


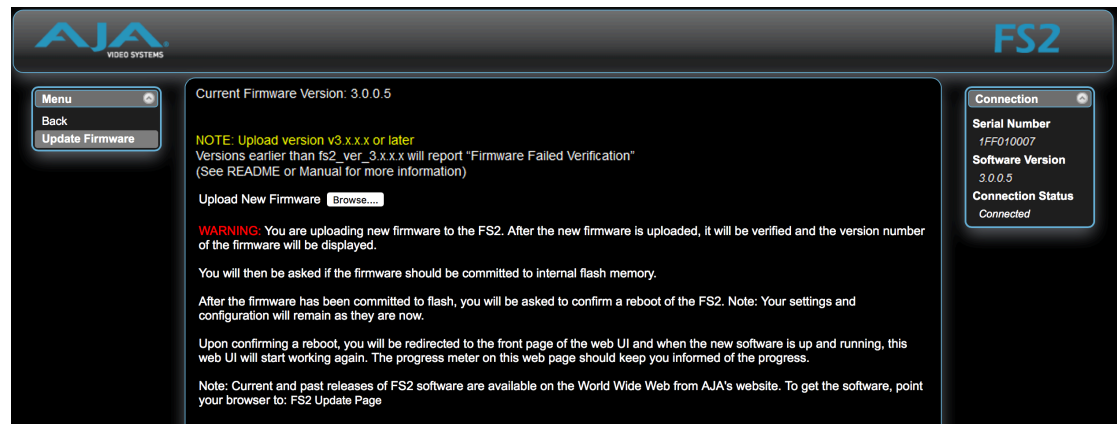


Figure 8. Update Firmware Browser Screen for 2.x Firmware

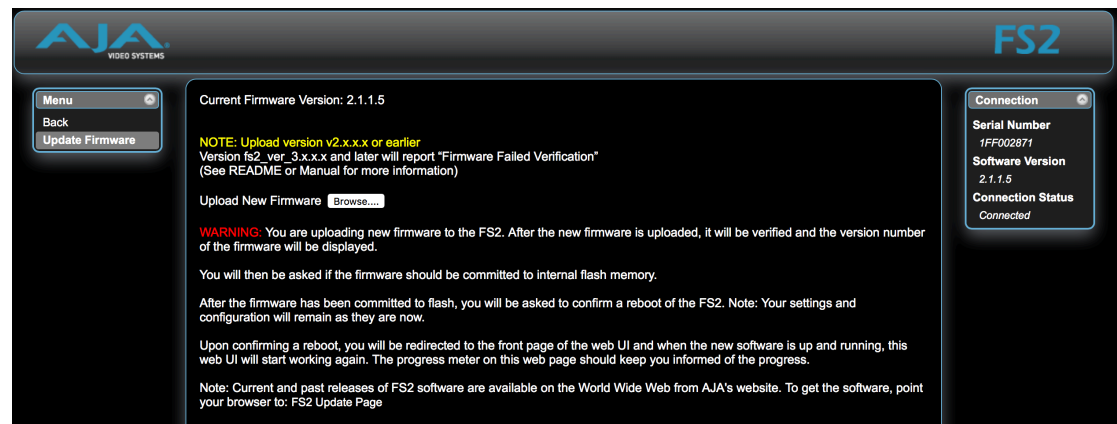

2. Click the Browse... button to find and select the downloaded file. For example: FS2\_ver\_1.0.0.10.bin contained in the file downloaded from AJA.
3. Click OK when asked if you want to Upload Firmware. The file uploads to the FS2 and is tested for validity. Incomplete, corrupted, or non-FS2 files

are rejected. Wait for the procedure to complete—it will take only a few minutes. Progress bars show upload progress.

4. Click Commit Uploaded Firmware when prompted after the upload is finished. Progress bars show progress as the file is written to flash memory.
5. Click Restart FS2 with New Firmware to restart the FS2. This will take the FS2 offline for a minute or two. During the restart, progress is shown in the connection area in the upper right corner of the FS2 Status screen. After restart, the FS2 will be running the new software.
6. Once these steps are complete, the FS2 will be running the software, and the Software Version on the Status screen shows the new version number. Check that the new software is running by bringing up the FS2 web page again; the software version is displayed at the top of all FS2 web screens. If the FS2 did not update successfully, run through the update steps again.

*NOTE: The configuration of the FS2 prior to the upgrade is preserved. The unit returns to service exactly as it was before the upgrade.*

If there is a power outage or glitch during the software download, the FS2 will boot the older software version and you can restart the upgrade process. This happens because the FS2 has been designed with a safety feature where an internal “safe” copy of the previous software is retained in the event the updating process fails.

## System Cabling

---

### System Video/Audio Cable Connections

---

When installing your system, you'll make video and audio input/output connections. These connectors are explained individually in Chapter 2.

### GPI Connections

---

The FS2 has four GPI inputs and four GPI outputs. The GPI inputs and outputs are electrically isolated from the power and ground on the FS2 frame. Electrical isolation is provided for up to four pieces of external equipment.

See ["GPI Pinouts" on page 108](#) for information on how to wire the GPI connector to work with external devices that you want to use to control the FS2 or that you want the FS2 to control.

### FS2 Audio Level Choices—Pro or Consumer, US or EBU

---

Since the FS2 handles both digital and analog audio and can convert between the two, it provides analog and digital audio level settings in the front panel menus and the remote web browser. Standard practice typically sets the maximum audio level approximately 20 db above the operating (alignment) level, allowing enough headroom to handle peaks without clipping. Because different countries and equipment types use different operating and maximum levels, the FS2 has several audio level settings. These settings allow you to set the relationship between the analog and digital audio levels to accommodate the equipment and audio operating standards you use.

The FS2 offers four settings shown in the following table. The analog audio levels listed in the table are defined in reference to 0 dBFS (where FS = full scale), which is the maximum level that can be represented digitally. Note that the test method for these levels uses a 1kHz sine wave.



Table 5. FS2 Audio Level Settings

FS2 Audio Setting	Meaning
+24 dBu analog = 0 dBFS maximum audio level	<b>SMPTE standard (US)</b> With digital audio at the maximum possible level (before clipping), the expected analog audio input level is +24 dBu, and the output is scaled to this level. Typically, the US Standard Operating Level is +4 dBu analog or -20 dBFS digital. The FS2 +24 dBu setting allows 20 dB of headroom (+4 to +24 dBu) per the SMPTE RP-155 standard.
+18 dBu analog = 0 dBFS maximum audio level	<b>EBU standard (EU)</b> With digital audio at the maximum possible level (before clipping), the expected analog audio input level is +18 dBu, and the output is scaled to this level. Typically, the EU Alignment Level is 0dBu analog or -18 dBFS digital. The FS2 +18 dBu setting allows 18 dB of headroom (0 to +18 dBu) per the EBU R68 standard.
+15 dBu analog = 0 dBFS maximum audio level	<b>German standard</b> With digital audio at the maximum possible level (before clipping), the expected analog audio input level is +15 dBu, and the output is scaled to this level.
+12 dBu analog = 0 dBFS maximum audio level	<b>Consumer equipment</b> With digital audio at the maximum level (before clipping), the analog audio input level is +12 dBu, and the output is scaled to this level. These levels are provided for consumer equipment that outputs lower audio levels than professional equipment. Consumer audio units are often given in dBV, with +12.2dBu equivalent to +10dBV. The standard operating level corresponds to -10dBV (-7.8dBu). The FS2 +12dBu setting provides approximately 20 dB of headroom (+10 to -10 dBV).

## Computer Video Formats

The AJA FS2 accepts non-broadcast video input signals with the introduction of software version 2.0. These signals, known as “computer,” “VESA,” or “DVI” formats, can be applied to the HDMI input connector. Computer signals applied to the HDMI input must be digital video signals compatible with single-link DVI, which covers the range of display sizes from 640x480 (VGA) to 1920x1200 (WUXGA). For a list of accepted computer video formats, please see [“Appendix A Specifications” on page 104](#).

Note: The FS2 does not accept analog computer video inputs because HDMI connectors do not have pins assigned for analog signals. The FS2 also does not accept dual-link DVI inputs.

## Physical Connection

To connect a computer video input to the FS2 HDMI connector, use a passive DVI-to-HDMI adapter (user supplied). To prevent strain on the FS2 HDMI connector, AJA recommends that you convert from DVI to HDMI at the video source, such as the computer display card, and run an HDMI cable from the source to the FS2 input. You can also use a cable adapter that has a DVI connector on one end of the cable and an HDMI connector on the other. The FS2 HDMI input connector is a terminating input and does not have a “loop-through” output.

## Menu Setup

To enable a computer input in the FS2 menu system, select HDMI as the input using Video Menu 1 for the Video Processor channel you plan to use. The FS2 will automatically detect the frame format of the incoming video and scale/convert the input to the selected output format. You can select the same HDMI input for both Video Processors and independently convert the input to separate video output formats.

## Scaling

If the DVI source video frame aspect ratio is not the same as the output video format frame aspect ratio, the FS2 scales the input frame size based on the current Upconvert (Video Menu 6) or Downconvert (Video Menu 7) mode selection.

If the FS2 output format is set to a Standard Definition (SD) format (525i/59.94 or 625i/50), the current Downconvert mode is used to determine the frame scaling mode.

If the FS2 output format is set to a High Definition (HD) format (anything other than SD), the current Upconvert mode will be used to determine the frame scaling mode.

*Table 6. Scaling Applied With Downconvert or Upconvert Mode Selected*

<b>Downconvert Mode</b>	<b>Upconvert Mode</b>	<b>Frame Scaling</b>
Letterbox	4x3 Pillar	Scale the input frame until the longer dimension (H or V) touches the output raster edges. The shorter dimension is filled with background video. Maintains the original pixel aspect ratio.
Crop	Wide Zoom	Scale the input frame until the shorter dimension (H or V) touches the output raster edges. The longer dimension is cut off (cropped) to fit the output frame. Maintains the original pixel aspect ratio.
Anamorphic	Full Screen	Scale the input frame independently in H and V until both dimensions fill the output raster. No cropping or background fill is required, but the original pixel aspect ratio may be "stretched" to fill the output raster.
14x9	14x9 Pillar	Compromise between Letterbox and Crop modes: some background fill may be required in the shorter dimension to fill the output raster (but not as much as Letterbox mode), and some cropping may be required in the longer dimension to fit the output raster (but not as much as Crop mode). Maintains the original pixel aspect ratio.
Auto AFD	LB to Full	When used with "computer format" inputs these modes default to Letterbox / 4x3 Pillar behavior.

## Genlocking

The FS2 does not genlock (synchronize) to computer format video inputs.

If a computer video input feeds Video Processor 1 or 2 and the current Genlock Source (System Menu 8) is set to Vid1 Input or Vid 2 Input, the system automatically defaults to Free Run mode. You can select Reference as the Genlock Source and apply a broadcast video signal to the Reference input if you wish to genlock to video rather than use Free Run mode.

## Getting Your Computer Working with the FS2

Getting your computer to work with the FS2 is much like getting your computer to work with a second monitor. Here's the recommended procedure:

1. Turn off the computer and the FS2.
2. Connect the computer video output to the FS2 HDMI input.
3. Turn on the FS2 and wait for it to boot completely.
4. Turn on the computer and wait for it to boot completely.
5. In the Windows 7 "Display" Control Panel, navigate to "Screen Resolution," and confirm that a second monitor for the FS2 is displayed. Click on the "FS2" monitor and adjust the settings as desired.

6. For Mac OS computers, open the System Preferences application, and click on the "Display" icon (in the Hardware row). Click the FS2 monitor window and adjust the settings as desired.

## Achieving the Highest Output Quality

---

To achieve the highest quality FS2 video output from a computer input, two processes must work together: (1) the computer display card must be set to scale the computer video output to the highest possible resolution and image size, and (2) the FS2 must be set to convert the computer video to the closest matching resolution in a broadcast format. If the computer is set for a small video output format, such as 640x480 VGA, and the FS2 converts that to 1080i, the result is a scale down by the computer card followed by a scale up in the FS2, causing a loss of resolution. Your results will be much better if you use a high resolution computer output and a closely matching FS2 conversion format.

# Chapter 4 – Display Menus

---

## Controlling the FS2 via Front Panel Display Menus

---

There are three ways to control the FS2: (1) direct control using the front panel buttons, knobs, and display menus, (2) remote control using a web browser, and (3) remote control using an optional remote panel. This chapter describes the first, using the front panel controls, which is the most direct and all-inclusive way to configure and use an FS2. The other methods are described in subsequent chapters.

### Parameter Menu

---

The front panel menu display contains four lines. These four lines present parameter menu “pages” used to configure and operate the FS2.


Each parameter menu page presents the following information:

**First line** - parameter number and name.

**Second line** - the editable value or values set for a parameter.

**Third line and Fourth Lines** - status, legends, or prompts. Not always used.

*Figure 9. Four Lines of the Front Panel Display*

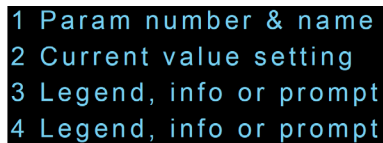

```
1 Param number & name
2 Current value setting
3 Legend, info or prompt
4 Legend, info or prompt
```

The FS2 display presents five major types of menu pages:

- Status pages—present status information that cannot be changed.
- Simple parameter menus—contain a parameter number and name on line 1 and its current value setting on line 2. The line 2 value can be changed using SELECT and ADJUST. Example: Output Format.
- “Take action” parameter menus—contain a parameter number and name on line 1, and the value to “take” on line 2. A “take” prompt may appear on line 3. The line 2 value can be changed using SELECT and ADJUST, and the take or switch to the new value occurs when you press ADJUST momentarily. Examples: Preset Save/Recall.
- Multi-parameter menus—contain a parameter number and name on line 1 and multiple parameter values on line 2, each of which can be set separately using SELECT and ADJUST. In order to set all parameters, you must move to each parameter and set its value individually. Example: Proc Amp (to set Gain, Black Level, and Hue, you must select three separate parameters).
- Multiple field parameter menus—contain a parameter number and name on line 1 and its current value setting on line 2, consisting of multiple letter or number fields that must each be set individually. The line 2 fields can be changed using SELECT and ADJUST. Example: IP Address

### Menu Group Buttons

---

You enter a Menu Group whenever you push one of the ten Menu Group pushbuttons: STATUS, CONFIG, SYSTEM, VIDEO 1, VIDEO 2, REMOTE, REG, OUTPUT, AUDIO 1, and AUDIO 2. When you push a Menu Group button, the display changes to the selected menu group and shows the last viewed parameter menu.

Holding down any button enables coarse adjustment of the current parameter using the ADJUST knob.

## SELECT and ADJUST Knobs

The SELECT and ADJUST knobs operate as follows:

- Scroll menus—Turn SELECT to scroll menus within the selected Menu Group.
- Edit a menu—Stop SELECT on a menu to select it for editing. If multiple values may be edited, such as an IP address, push ADJUST momentarily and then turn the SELECT knob to scroll through the values and select one for editing. The value blinks to indicate it is the one selected.
- Change a value—Turn ADJUST to change a value, number, or letter. Turning ADJUST forward (clockwise) or backward (counterclockwise) changes the value up or down, respectively. When you reach the end of the available values, the list starts over again at the beginning.
- Make a coarse adjustment—Holding down a Menu Group button enables coarse adjustment using ADJUST for wide-ranging values.
- Undo a change—Push SELECT during value editing to abort the edit and restore a value to its previous setting, if it has not already been saved.
- Set factory default value—Push and hold ADJUST for 4 seconds to set the parameter to its factory default value.
- Save changes—Parameter value changes are saved within a few seconds. For multiple values, such as IP addresses, push ADJUST momentarily (less than 4 seconds) to save or take parameter changes.


## Menu Operation Examples

The following examples demonstrate typical menu operation.

### Status Pages

These steps explain how to surf the STATUS menus.

1. Press the STATUS Menu Group button.
2. Turn the SELECT knob forward and backward to display the Status pages. The display scrolls through the pages as you turn the knob. The Status displays simply show the status of important FS2 operational parameters.

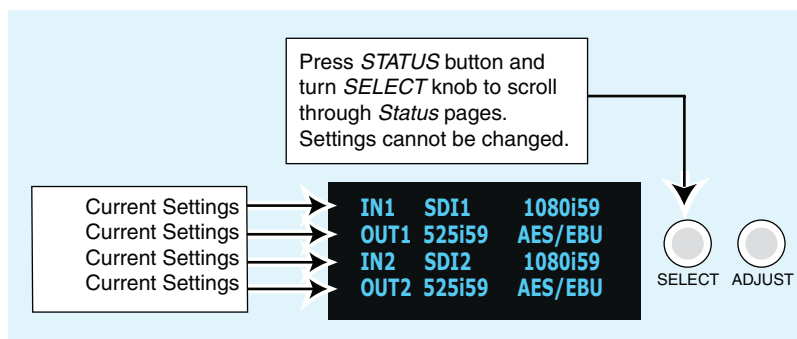


### Simple Menus: Config Format Alarm Filters

These steps explain how to surf and change simple menus, such as the Power Supply Alarm Filters.

1. Press the CONFIG Menu Group button.


2. Turn the **SELECT** knob to access menu 5 Pwr Supply Alarm. The default alarm setting is Normal.
3. Turn the **ADJUST** knob one click clockwise to change the setting to Suppress, which turns off the alarm so that it will never come on.
4. Turn the **SELECT** knob clockwise again to access menu 6.1 Vid1 Format Alarm. Changing menus confirms the new Pwr Supply Alarm setting.
5. Now change the Vid1 setting, using the **ADJUST** knob.
6. Continue by turning **SELECT** one click to access the 6.2 Vid2 Format Alarm setting and again one click to access the 7 Reference Alarm setting. Change the settings using the **ADJUST** knob, if you wish.

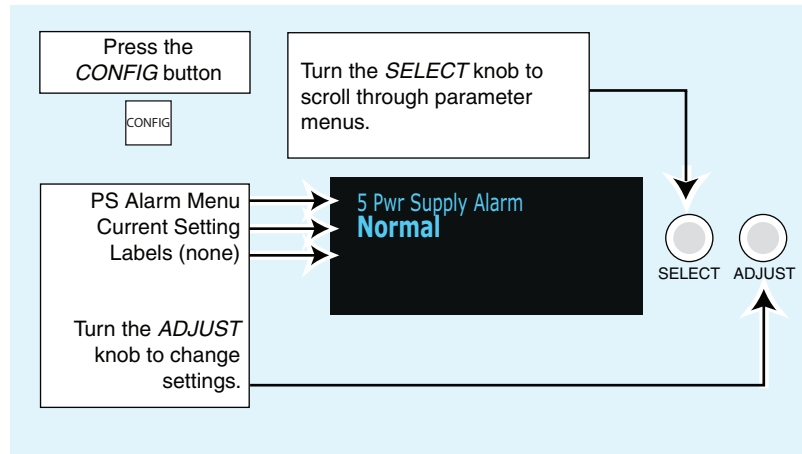

## Multiple Parameter Menus: Video 1 ProcAmp

These steps explain how to surf and change multiple parameter menus, such as the Vid1 ProcAmp settings.

1. Press the **VIDEO 1** Menu Group button.
2. Turn the **SELECT** knob as necessary to display menu 11.0 ProcAmp.
3. Turn the **ADJUST** knob to change the value setting from OFF (default) to ON.

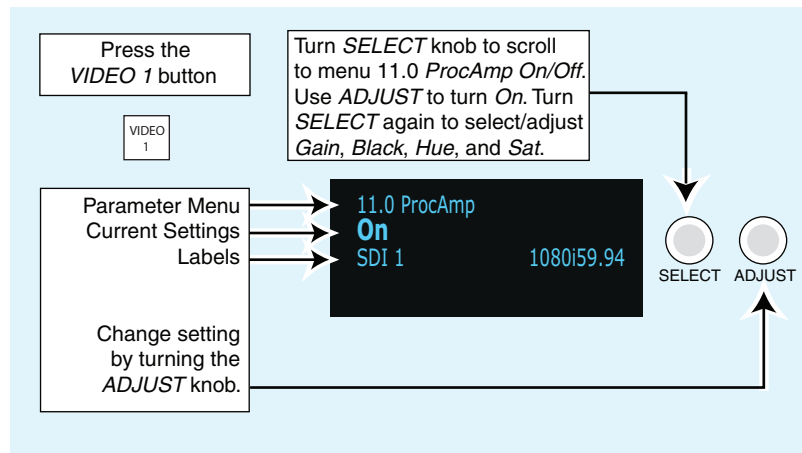


4. Turn the **SELECT** knob clockwise to access menu 11.1 ProcAmp Gain and set the Gain as desired using the **ADJUST** knob.
5. Turn the **SELECT** knob one click clockwise to confirm the setting and advance to the 11.2 ProcAmp Black menu. Turn **ADJUST** to set the black level.

6. Turn the SELECT knob clockwise again one click to confirm the setting and advance to the 11.3 ProcAmp Hue menu. Turn ADJUST to set the hue.
7. Turn the SELECT knob clockwise again one click to confirm the setting and advance to the 11.4 ProcAmp Sat menu. Turn ADJUST to set the saturation.

## Multiple Field Parameters: IP Address

These steps explain how to surf and change multiple field parameter menus, such as the IP Address settings, where there are multiple fields to set within the value.

1. Press the CONFIG Menu Group button. The Config menus appear.
2. Turn the SELECT knob clockwise to access the 2.1 IP Config menu. Turn the ADJUST knob to change the setting to Static Addr. This setting allows you to manually set the IP address in the following steps.
3. Turn the SELECT knob clockwise one click to access menu 2.2 IP Address. The current IP address appears on the second line. For example: 10.2.42.8
4. Push the ADJUST knob momentarily to highlight the first field, which is the octet (group of numbers) to the left of the first period. The numbers blink to indicate they are ready for editing.
5. Turn the ADJUST knob to change the blinking field value.
6. Turn the SELECT knob to highlight the next field, a group of numbers to the right of the first period. The field will blink when they are ready for editing.
7. Turn the ADJUST knob to change the blinking field value. For coarse adjustment of wide-ranging values, hold down CONFIG and turn ADJUST.
8. Repeat this process of selecting fields and changing them until all fields have been changed as desired.
9. Push the ADJUST knob quickly to confirm all settings. Alternatively, you can scroll counterclockwise back through the fields, stopping on any of them to change them. They must be blinking before they can be changed.

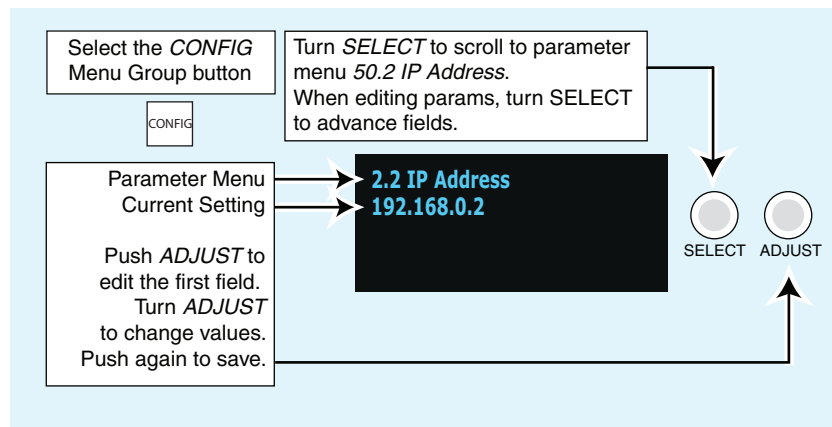

### Other Actions

- To begin editing the first field in the parameter, push ADJUST momentarily.
- To confirm (save) edits, push the ADJUST knob momentarily again. This saves the edits and exits the edit mode.
- To undo edits to all of the fields before the changes are confirmed, push the SELECT knob. This returns all fields to their previous settings.
- To reset the entire parameter to the factory default value, push in and hold down the ADJUST knob for at least 4 seconds.

# STATUS Menu Group

The Status Menu Group contains a series of Status display pages that you can scroll using the SELECT knob. The various Status pages are actually just displays, not menus, since they don't include menu numbers or editable values. The ADJUST knob doesn't affect the Status display pages.

When you press the STATUS button, the display shows the first menu unless there is an active alarm. If an alarm is active, the relevant alarm status page is displayed first. If more than one alarm is active, the highest priority alarm page is displayed first.

*NOTE: When displaying video format status, the following convention differentiates between SMPTE video formats (broadcast) and computer (VESA/DVI) formats (non-broadcast formats originating from a computer). The SMPTE formats are shown as height (in lines), scan-format (progressive or interlaced), and frame-rate, such as 1080i59. The VESA formats are shown as a size only, with an x in the middle, such as 640x480.*

## S.1 I/O Status

This menu shows the current primary settings for Processors 1 and 2.

Display			Description
IN1	Sel Video	Format	Processor 1 selected video input and detected format.
OUT1	Sel Video	Audio	Processor 1 video output format and selected audio input.
IN2	Sel Video	Format	Processor 2 selected video input and detected format.
OUT2	Sel Video	Audio	Processor 2 video output format and selected audio input.

## S.2 Vid1 Format Status

This menu shows the current primary settings for Processor 1.

Display			Description
VID1	Input Source	Format	Selected Processor 1 video input source and format.
BKGD	Backgd Source		Selected Background video source.
GEN	Genlock Source	Format	Selected Genlock source and format.
OUT		Format	Selected Processor 1 output format.

## S.3 Vid1 Format Alarm Status

This menu shows the Processor 1 alarm status. Absence of alarm shows as OK. If selections are incompatible, the status of the affected signal shows incompat.

Display			Description
VID1	Input Source	Status	Selected Processor 1 video input source alarm status.
BKGD	Backgd Source	Status	Selected Background video source alarm status.
GEN	Genlock Source	Status	Selected Genlock source alarm status.
OUT		Status	Selected Processor 1 output format/alarm status.



## S.4 Vid2 Format Status

This menu shows the current primary settings for Processor 2.

Display			Description
VID2	Input Source	Format	Selected Processor 2 video input source and format.
BKGD	Backgd Source		Selected Background video source.
GEN	Genlock Source	Format	Selected Genlock source and format.
OUT		Format	Selected Processor 2 output format.

## S.5 Vid2 Format Alarm Status

This menu shows the Processor 2 alarm status. Absence of alarm shows as OK. If selections are incompatible, the status of the affected signal shows incompat.

Display			Description
VID2	Input Source	Status	Selected Processor 2 video input source alarm status.
BKGD	Backgd Source	Status	Selected Background video source alarm status.
GEN	Genlock Source	Status	Selected Genlock source alarm status.
OUT		Status	Selected Processor 2 output format/alarm status.

## S.6 Output Status

This menu shows the video source selected for each of the video outputs.

Display		Description
SDI1	Selected Video Processor	Selected Processor feeding the SDI 1 output.
SDI2	Selected Video Processor	Selected Processor feeding the SDI 2 output.
Fiber1	Selected Video Processor	Selected Processor feeding the Fiber 1 output.
Fiber2	Selected Video Processor	Selected Processor feeding the Fiber 2 output.
HDMI	Selected Video Processor	Selected Processor feeding the HDMI output.
Cmpn	Selected Video Processor	Selected Processor feeding the Component output.
Cmpn	Selected Video Processor	Selected Processor feeding the Composite output.

## S.7 Power/Temp Alarm

This menu shows the power supply status of the FS2 and the temperature status. If a power supply is unplugged, the display top line indicates PS OFF or PS Error.

Display		Description
PS1 Alarm	Status	Displays the state of the PS1 power supply (OK or ERROR).
PS2 Alarm	Status	Displays the state of the PS 2 power supply (OK or ERROR).
TmpAlarm	Status	Displays a temperature alarm if the FS2 overheats.

## S.8 Caption Status

This menu shows what type of closed caption data is selected and whether closed caption data is present on the selected video input.

Display		Description
VID1CC	Caption Type & Presence	Processor 1 selected caption type (SD/HD/Invalid) and presence (Detected/Not detected/Pass through).
VID2CC	Caption Type & Presence	Processor 2 selected caption type (SD/HD/Invalid) and presence (detected/not detected/Pass through).

## S.9 Dolby Status

This menu shows the FS2's Dolby Decoder settings.

Display	Description
DolbyDec	Status
DolBDecM	Status
DolBDAX0	Status
DolBDAXM	Status

Dolby Status: Unknown, NotInstl, DolbyE, DlbyDgtl or PCM.  
Dolby Decoder Mode setting: Auto, Dolby E or Dolby D.  
Decoder Aux Out setting: Program1 (through) Program8.  
Decoder Aux Mode setting: Lt/Rt, Lo/Ro, Mono, Mute.

## S.10 Dolby Framer Status

This menu shows the current Dolby Framer status for Processors 1 and 2.

Display	Description
Aud1 State Status	Processor 1 Audio Dolby E Framer sync: Off, On, or Offset. For On or Offset, shows the selected channel pair.
Frm1 Status	Processor 1 Audio Dolby E Framer: Locked or Unlocked.
Aud2 State Status	Processor 2 Audio Dolby E Framer sync: Off, On, or Offset. For On or Offset, shows the selected channel pair.
Frm2 Status	Processor 2 Audio Dolby E Framer: Locked or Unlocked.

## S.11 System Name

This menu shows the FS2's System Name, IP address and mask, and version number.

Display	Description
System Name	Displays the System Name as set in Config menu 1.
IP addr value	Shows the FS2's IP address.
IP Mask value	Shows the FS2's IP mask.
Version value	Shows the FS2's software version number.

# REMOTE Menu Group

The REMOTE Menu Group lets you set up how you want the FS2 to be controlled. Control options include the front panel, a remote computer running a browser, and GPI inputs and outputs.

*NOTE: The Remote Menu Group parameters available on the front panel interact with the browser parameters available on an attached computer, and vice versa. For example, the Remote Control parameter can only be changed from the front panel, and when set to Local Only will deactivate all browser remote control parameters.*

## 1 Remote Control

This parameter determines whether the FS2panel responds to controls locally from the front panel, from a network attached computer with a web browser, or both. The selected mode is indicated by the color of the REMOTE LED.

Local + Remote (default)	Control the FS2 from the front panel, a remote control panel, or a network-attached browser. The REMOTE LED lights amber.
Local Only	Control the FS2 only from the front panel (browsers cannot change parameters). The REMOTE LED lights green.
Remote Only	Control the FS2 only from a network attached browser or remote control panel. The REMOTE LED lights red.

## 1.1 Authentication

This parameter enables or disables an authentication login requirement. By default this parameter is set to Disabled.

When you select Login via the front panel parameter, you must then go to the browser interface to perform a login each time you access the FS2. The browser presents the login screen first, requiring you to log in before you can access any other browser screens. The password is initially set to the default value, but you can change it using the Remote browser screen.

The default password is password.

**NOTE:** *If authentication is used, it provides only a minimum security safeguard against unauthorized use of the FS2. The authentication mechanism is simple and does not provide robust security.*

Disabled ( <i>default</i> )	Disables the requirement for a login password. No password is needed.
Login	Login is required via the web browser interface before changes can be made in FS2 configuration.

## 2.1–4 GPI IN 1–4 Response

The setting of this parameter determines what happens when a GPI trigger is received at the FS2's GPI Inputs (1–4). A GPI Trigger is defined as a TTL low voltage level (0 to 0.8V with respect to its isolated ground pin). The GPI interface pinout and specifications are discussed in "[GPI Pinouts](#)" on page 108. Input video sources selected by GPI trigger remain selected until the trigger is released. GPI Inputs light the front panel EXT LED when triggered.

No Action ( <i>default</i> )	Performs no action.
PRESET 1–10	Recalls the specified PRESET configuration.
Vid1 Freeze	Freezes the current video frame at its outputs. Freezing stops when the GPI trigger is released.
Vid1 SDI1 In	Selects SDI1 as the Vid1 video input.
Vid1 SDI2 In	Selects SDI2 as the Vid1 video input.
Vid1 SDI DLink	Selects Dual-Link mode for the SDI input.
Vid1 Fiber1 In	Selects Fiber1 as the Vid1 video input.
Vid1 Fiber2 In	Selects Fiber2 as the Vid1 video input.
Vid1 Fbr DLink	Selects Dual-Link mode for the Fiber input.
Vid1 HDMI In	Selects HDMI In as the Vid1 video input
Vid1 Cmpst In	Selects Composite In as the Vid1 video input.
Vid1 Cmpnt In	Selects Component In as the Vid1 video input.
Vid1 ARC Off	Turns Off SD to SD aspect ratio conversion.
Vid1 ARC LTBX	Converts 16:9 anamorphic video to letterbox.
Vid1 ARC H CP	Converts 16:9 anamorphic video to 4:3 standard (H crop—crops left and right edges of video).
Vid1 ARC PLBX	Converts 4:3 standard video to 16:9 anamorphic (pillarbox).
Vid1 ARC V CP	Converts letterbox video to 16:9 anamorphic (V crop).
Vid1 ARC 14x9	Converts 16:9 anamorphic video to 14:9 cropped.
Vid1 DC Crop	Downconverts HD source to cropped 4x3 picture.
Vid1 DC ANA	Downconverts HD source to anamorphic picture.
Vid1 DC 14x9	Downconverts HD source to 14x9 picture.
Vid1 DC Auto AFD	Downconverts HD source automatically using the best mode for the input video Active Format Description (AFD) code.
Vid1 DC LTBX	Downconverts HD source to letterbox picture.
Vid1 UC 4x3 PB	Upconverts SD source to 4x3 pillarbox.
Vid1 UC 14x9 PB	Upconverts SD source to 14x9 pillarbox.
Vid1 UC FLSCR	Upconverts SD source to full screen.
Vid1 UC LB FUL	Upconverts SD source from letterbox to full.
Vid1 UC WZM	Upconverts SD source to a wide zoom.
Vid2...	Repeat the above for Vid2 except that UC Wide Zoom is replaced by Vid2 UC CSTM, which Upconverts an SD source to a user-specified format.

## 3.1–4 GPI 1–4 OUT

---

The setting of this parameter determines whether certain FS2 events will generate a GPI trigger output at GPI outputs 1, 2, 3, or 4. The GPI interface pinout is presented in "[GPI Pinouts](#)" on page 108.

No Action ( <i>default</i> )	Does not trigger a GPI output regardless of event.
Alarm	Generates a GPI out trigger if an internal alarm condition occurs.
No Video 1	Generates a GPI out trigger if no video is detected at the input.
No Video 2	Generates a GPI out trigger if no video is detected at the input.
No Ref	Generates a GPI out trigger if no video is detected at the Ref input.

## Interaction of Presets and GPIs

---

If you use a GPI input trigger to recall a preset, the recall changes the GPI IN Response setting to whatever GPI IN Response setting the preset contains. As the following examples explain, this feature offers both the power of serial recalls and the possibility of triggering a recall that changes GPI IN Response to something unintended.

### Example of a Serial Recall

---

The advantage of using GPI IN Response with presets is that you can trigger a series or even a looping series of preset recalls. For example, suppose GPI IN 1 Response in Preset 1 is set to Preset 2, and GPI IN Response in Preset 2 is set to Preset 1. Triggering the GPI will toggle between the two presets.

### Example of an Unintended Recall

---

Suppose you trigger GPI IN 1 while the current GPI IN 1 Response parameter is set to Preset 1. This recalls Preset 1 as expected. However, suppose Preset 1 contains a stored GPI IN 1 Response setting of No Action. If you trigger GPI IN 1 later, expecting to recall Preset 1 again, the FS2 instead performs No Action. To prevent unexpected changes in the GPI IN Response parameters, set these parameters as desired before storing presets; in the example, set GPI IN 1 to Preset 1 before you store Preset 1.

## CONFIG Menu Group

---

The CONFIG Menu Group includes parameters for setting up the FS2's network, system name, SNMP, alarm, and screen saver configurations.

### 1 System Name

---

This parameter defines a unique name for the FS2. This same name is used both when displaying systems via the web interface and when displaying the FS2's screen saver.

Variable	Set the system name, up to 20 characters. Default: aja-fs2
----------	--

### Name Entry Procedure

---

Set the name as follows:

1. Push ADJUST momentarily to enter character editing mode.
2. Turn SELECT to advance the blinking cursor to each character.

3. Turn ADJUST to scroll through the choices for each character. These characters are allowed: A through Z (uppercase), a through z (lowercase), numerals, hyphen (-), period (.), and space (blank). Leave the desired character selected and advance to the next one.
4. Push ADJUST to save and activate the name after all characters are defined.
  - To abandon changes before saving, push SELECT.
  - To return to the default name at any time, hold down ADJUST.

*NOTE: To eliminate trailing characters to shorten an existing system name, overwrite them with a hyphen (-) or space.*

## 2.1 IP Config

This parameter determines the type of TCP/IP network configuration used by the FS2. Consult your network administrator about how to set this value.

DHCP (default)	Select automatic IP address assignment from the LAN DHCP server. If the FS2 cannot find a DHCP server, it fails over to the static IP address.
Static Addr	Assign a static IP address manually (using parameters 2.2, 2.3, and 2.4). The factory default static IP address: 192.168.0.2

## 2.2 IP Address

This parameter determines the static IP address used by the FS2 for TCP/IP networking. Consult your network administrator about how to set this value.

IP Address variable	If 2.1 is set to <i>DHCP</i> dynamic addressing (default), the IP Address is set automatically by the network's DHCP server. If 2.1 is set to <i>Static Addr</i> , manually enter an IP address. If 2.1 is set to <i>DHCP</i> and there is a DHCP failure, the IP address is set to the static IP address. The factory default static IP address is 192.168.0.2.
---------------------	--

## Octet Value Entry Procedure

Set the octets (numbers between periods) values as follows:

1. Push ADJUST momentarily to enter edit mode.
2. Turn SELECT to select the octet you want to edit, indicated by blinking.
3. Turn ADJUST to enter the new value.
  - If you need to revert to the previous setting (undo changes), push SELECT.
4. Push ADJUST momentarily to save and activate the new setting.
  - If you want to revert to the default value, hold down ADJUST for 4 seconds.

## 2.3 Subnet Mask

This parameter determines the subnet mask used by the FS2 for TCP/IP networking. Consult your network administrator about how to set this value.

Subnet Mask variable	Enter a subnet mask compatible with your LAN. This is only needed for Static IP configurations. If 2.1 is set to DHCP, the Subnet Mask is set by the DHCP server and cannot be changed by the user. If 2.1 is set to <i>Default Addr</i> , the default <i>Subnet Mask</i> is 255.255.255.0
----------------------	--

## 2.4 Default Gateway

This parameter determines the gateway or router used on your LAN for TCP/IP networking. Consult your network administrator about how to set this value.

Without a properly configured default gateway (whether you have a router/gateway or not), the FS2 will be unable to see other FS2s on the network, although you may still be able to control this FS2 via a web browser. Also, without a proper gateway defined, the discovery feature “Available FS2s—Click to Refresh” on the Network web page will fail to list other FS2s on the network.

Gateway Address variable	Enter the address of the gateway or router used to connect the FS2 to the network. <i>Default: 192.168.0.1</i>
--------------------------	--

### 3 MAC Address (view only)

Selecting this parameter allows you to view the FS2 MAC address. The MAC address is a unique value associated with the FS2’s internal network adapter. MAC addresses are also known as hardware addresses or physical addresses. MAC addresses uniquely identify an Ethernet adapter on a LAN.

MAC address format: MM:MM:MM:SS:SS:SS

The value is 12-digit hexadecimal, where the first half identifies the manufacturer and the second half identifies the unique serial number.

### SNMP Menu Parameters

The following parameters are used to setup the FS2 SNMP (Small Network Management Protocol) feature.

- 4.0 SNMP Enable
- 4.1 SNMP Trap Destination 1
- 4.2 SNMP Trap Port 1
- 4.3 SNMP Trap Destination 2
- 4.4 SNMP Trap Port 2

In addition, the following parameters described below may affect SNMP messages:

- 5 Power Supply Alarm
- 6.1 Vid1 Format Alarm
- 6.2 Vid2 Format Alarm
- 7 Reference Alarm

Refer to "[Chapter 6 SNMP](#)" on page 100 for a description of SNMP and how the FS2 supports it.

### 5 Power Supply Alarm

This parameter controls how the FS2 alarm responds to power supply disconnection or failure. If the FS2 will be connected using only one power cord and supply, you can suppress the alarm. Changes to this setting are automatically saved.

Normal (default)	Alarm triggers if either internal power supply experiences a failure or is disconnected from mains power.
Suppress	Alarm will not be triggered by a power supply failure or disconnection from power.

## 6.1 Vid1 Format Alarm

---

When set to Normal (default), an alarm is triggered whenever the selected input video signal format of Video Proc 1 is incompatible with the selected output format (refer to the matrix of inputs and compatibilities presented in Chapter 2). If you want the FS2 alarm to only trigger on hardware failures, you can suppress the Format Alarm. The front panel Vid 1 FMT ERR LED lights when format errors are detected even if this parameter is set to Suppress. Changes to this setting are automatically saved.

Normal (default)	Alarm triggers if the format of the selected input video signal is incompatible with the selected output format.
Suppress	Alarm will not be triggered by a format incompatibility.

## 6.2 Vid2 Format Alarm

---

This parameter operates the same as 6.1 Vid1 Format Alarm above, but applies to the input video signal format of Video Proc 2.

## 7 Reference Alarm

---

This parameter controls how the FS2 responds when one of the Video Processors has a format that is incompatible with the Reference video signal. When set to NORMAL, the alarm triggers if the Reference signal is not detected or is incompatible with the processor format. If you want the FS2 Reference alarm to trigger only on hardware failures, you can suppress the alarm. Changes to this setting are automatically saved.

Normal (default)	Alarm triggers if the reference signal is not detected or is incompatible with the processor format.
Suppress	Alarm will not be triggered by reference errors.

*NOTE: For proper operation the Input reference signal must be stable and properly terminated using a 75-ohm terminator on either the unused loop connector or the last piece of downstream equipment to which the Ref Video is connected.*

## 8 Hidden Menus

---

This parameter lets you choose whether to hide or show inactive menus.

Hide Inactive (default)	Hides menus that are not in use.
Show All	Shows all menus, even those that are not in use.

## 9 Screen Saver

---

This parameter lets you choose the menu screen saver.

On (AJA Logo) (default)	AJA logo screen saver is displayed
Off	Screen saver is turned off.
System Name	Screen saver displays the system name.

## 10 Display Intensity

---

This parameter determines the brightness of the alphanumeric display and front panel LEDs.

Variable	Dim or brighten the alphanumeric display and activity indicator LEDs in steps from 1 (dim) to 8 (brightest). Default: 6
----------	---

## 11 Fan Speed

---

This parameter determines the speed (and sound level) of the FS2's internal cooling fans. To prevent system damage, this setting may be overridden temporarily, and the fan can be set to a higher speed if the system detects very high internal temperatures. Changes to this setting are automatically saved

Variable	Changes the fan speed in steps from 1 (slow) to 10 (fast). Default is 10.
----------	---

## 12 Serial Number (view only)

---

This parameter displays the FS2's unique serial number.

## 13 Software Version (view only)

---

This parameter displays the FS2's software version number.

## 14 Reboot

---

This parameter lets you reboot the FS2. Press and hold in both front panel knobs simultaneously to reboot.

During reboot, the display shows [Rebooting], goes dark momentarily, and then shows the percentage of progress as the system reboots. Rebooting takes a couple of minutes.

# PRESET Menu Group

---

The PRESET Menu Group provides the means of saving, editing the names of, and loading FS2 presets. A preset is a set of all System, Video 1/2, Audio 1/2, and Output parameters as they were set at the time the preset was stored.



**Caution!** When you recall a Preset Configuration, the recalled preset immediately replaces the system's existing configuration. All previous settings are lost unless you have previously stored them in another preset configuration or an exported file.

During recall, the display reads, Recalling until the recall is finished. On recall completion, the displays shows the success or failure: Recalled, Failed, or Empty. A failed or empty recall does not recall anything and leaves the FS2 as it was. (Preset registers are empty until you store something in them.)

During a store, the display reads Storing until the store is finished. On store completion, the display shows Complete or Failed. A failed store does not store anything and leaves the preset register as it was. To retry a failed store, turn SELECT to another preset number and then back to the desired preset number.

## 1 Factory Preset

---

This parameter recalls a read-only Factory Preset.

Factory Recall	Recalls factory values. Push ADJUST momentarily to perform (take) the recall. The display reports "Loading" and "Complete" during the recall. User preferences, network settings, and existing Presets are not affected by recalling the Factory Preset.
----------------	--



## 1.1-1.40 Presets #1-#40

---

These parameters let you recall, edit the name of, and store an FS2 preset configuration for the selected storage register. Forty storage registers are available.

Preset #1-#40	Shows the currently selected preset register number. Turn SELECT choose the desired register. Then turn ADJUST to choose Recall, Edit Name, or Store for the selected register.
[Preset Name]	Shows the name of the selected preset register, which can be edited.
Recall	Recalls that preset. Push ADJUST momentarily to perform (take) the recall. The display reports "Loading" and "Complete" during the recall.
Edit Name	Enables editing the name of the preset register. Push ADJUST to enable editing (blinking character), use the SELECT and ADJUST knobs to edit the name and then press ADJUST to save the edited preset register name.
Store	Stores the current set of all System, Video 1/2, Audio 1/2, and Output parameters to the selected preset register.

## Interaction of Presets and GPIs

---

Triggering presets using GPI inputs offers considerable power but also requires some care to avoid unexpected results. If you plan to trigger presets using GPIs, please see the information about the ["Interaction of Presets and GPIs" on page 44](#).

## SYSTEM Menu Group

---

The SYSTEM Menu Group includes parameters for setting up various FS2 system related features (video formats, audio level standards, etc).

### 1 Component In Format

---

This parameter configures the format of the Component video input for SMPTE, Beta, or Composite. Selecting Composite (Y) programs the Component (Y/G) input to accept a composite signal. In this case, all parameters set to a value of Component are subject to and influenced by the composite signal on the Component Y/G input. For example, in the VIDEO menu, setting Video1 Input to the value of Component, switches the composite signal on the Component Y/G input into the Video 1 Processor.

SMPTE YPbPr (default)	Configure the Component Video Input source as SMPTE YPbPr. This is the default for HD component video.
Beta YPbPr	Configure the Component Video Input source as Beta YPbPr (standard definition).
Composite (Y)	Configure the Component Video Input source as composite, providing a second composite input (requires version 1.1 firmware).

## 2 Component Out Format

This parameter configures the format of the Component video output for SMPTE, Beta, RGB, or Composite. Selecting Composite (Y) programs the Component (Y/G) output to deliver a composite signal. In this case, all parameters set to a value of Component are subject to and influenced by the composite signal on the Y/G Component output. For example, in the OUTPUT menu, Component Out, selecting Processor2 will switch the composite signal from Video Processor 2 to the Component Y/G connector.

SMPTE YPbPr (default)	Configure the Component Video Output as SMPTE YPbPr. This is the default for HD component video.
Beta YPbPr	Configure the Component Video Output as Beta YPbPr (SD).
RGB	Configure the Component Video Output as RGB.
Composite (Y)	Configure the Component Video Output source as composite, providing a second composite output (requires version 1.1 firmware).

## 3 Analog Audio Std

This parameter sets the Analog Audio Input and Output levels of the FS2 with reference to full scale digital (0 dBFS). Selections range from consumer levels (+12 dBu) to SMPTE professional (+24 dBu).

+24 dBu (default)	Select +24 dBu as the expected analog audio level.
+18 dBu	Select +18 dBu as the expected analog audio level.
+15 dBu	Select +15 dBu as the expected analog audio level.
+12 dBu	Select +12 dBu as the expected analog audio level.
	(Above settings correspond to maximum amplitude–0 dBFS)

*NOTE: See Chapter 3 FS2 Audio Level Choices—Pro or Consumer regarding audio levels.*

## 4 SDI1 3G Detect

This parameter configures 3G operation of the SDI 1 video input.


Auto Detect (default)	Automatically detects presence of 1080p50/60 or Dual Stream video.
1080p50/60	Configures the SDI1 input for 1080p50/60 (single) video.
Dual Stream	Configures SDI 1 for Dual Stream 3G video (uses SDI 1 and SDI 2 in Input Crosspoint matrix).

In Auto Detect mode, the hardware looks for SMPTE 352 Payload ID ANC data on the video inputs to determine whether there are two independent 1080i signals (Dual Stream) or a single 1080p50/60 signal. If there is no SMPTE 352 data, the default is to assume 1080p50/60 (single), but you can manually instruct the FS2 to always assume either 1080p50/60 or Dual Stream by selecting one of those choices.

In 1080p50/60 mode, the system always assumes that the input is a single 1080p50/60 signal (even if there is SMPTE 352 data to the contrary).

In Dual Stream mode, the system always assumes (even if there is SMPTE 352 data to the contrary) that the input consists of two multiplexed independent 3G video streams. The signals are demuxed as shown.

Figure 10. Dual Stream 3G Mode Schematic

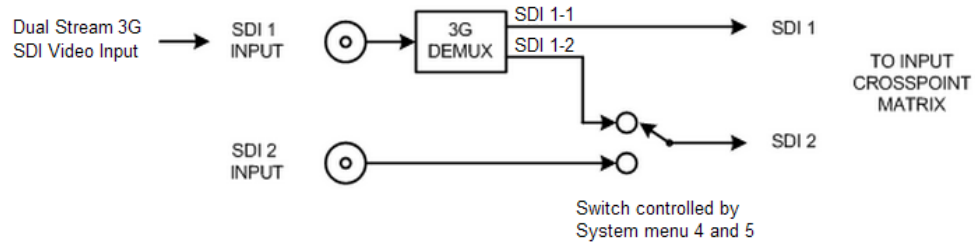

## 5 SDI2 Input Protect

This parameter allows you to protect Input SDI 2 from being taken by a Dual Stream selection made with parameter 4 above.

Normal (default) Dual Stream	SDI2 cannot be used by Dual Stream 3G SDI video on SDI Input 1. Allows SDI2 to be used by a Dual Stream 3G SDI input present on SDI 1.
---------------------------------	--

In the Normal setting (default), the SDI 2 video signal always comes from the SDI 2 physical input. Choosing Auto Detect or Dual Stream in parameter 4 does not switch away from the physical input.

In the Dual Stream setting, the FS2 assumes both channels of Dual Stream 3G video are muxed onto a single wire at the SDI1 input. The SDI 2 video signal is then taken internally from the SDI 1 Stream 2 signal instead of the SDI2 In connector.

The following table shows the selections and their results. In the table, SDI1-1 and SDI1-2 are the two muxed streams entering the SDI1 Input.

4 SDI-3G Detect Setting	5 SDI2 Input Protect Setting	1 Video Input Setting	Resulting Input to Crosspoint Matrix
Dual Video	Dual Stream	SDI1	SDI1-1
		SDI2 (unused)	SDI1-2
	Normal	SDI1	SDI1-1
		SDI2	SDI2
Single Video	Dual Stream	SDI1	SDI1
		SDI2	SDI2
	Normal	SDI1	SDI1
		SDI2	SDI2

## 6 Fiber1 3G Detect

This parameter configures 3G operation of the Fiber 1 video input. The input can be set for 1080p50/60 (single video), Dual Stream 3G SDI (two muxed videos), or Auto-Detect whether the input is 1080p50/60 single or Dual Stream 3G video (requires SMPTE Format ID to be present in the SDI Input). See parameter 4 SDI 1 3G Detect for an illustration and details.

Auto Detect (default) 1080p50/60 Dual Stream 3G	Automatically detects presence of 1080p50/60 or muxed video. Configures the Fiber 1 input for 1080p50/60 video. Configures Fiber 1 for Dual Stream 3G Video (uses SDI1 and SDI2 in Input Crosspoint matrix).
---	--

## 7 Fiber2 Input Protect

This parameter allows you to protect Input Fiber 2 from being taken by a Dual Stream selection made in 6 Fiber1 3G Format Detect setting.

Normal (default)	Fiber 2 cannot be used by Dual Stream 3G SDI video present on Fiber 1.
Dual Stream	Allows Fiber 2 to be used by a Dual Stream 3G SDI input present on Fiber 1.

In the Normal setting (default), the Fiber 2 video signal always comes from the SDI 2 physical input. Choosing Dual Stream video in parameter 6 does not switch away from the physical input.

In the Dual Stream setting, the FS2 assumes both channels of Dual Stream 3G video are muxed onto a single wire at the Fiber 1 input. The Fiber 2 video signal is then taken internally from the Fiber 1 Channel 2 signal instead of the Fiber 2 Input connector.

## 8 Genlock Source

This parameter selects the source of reference video used to genlock to, either automatically or explicitly.

Reference (default)	Use the signal on the <i>Ref</i> connector as the genlock source.
Vid1 Input	Use the <i>Vid1</i> input signal as the genlock source.
Vid2 Input	Use the <i>Vid2</i> input signal as the genlock source.
Free run	Free run mode (FS2 syncs to its own timebase, not locked to an external source).

*NOTE: HDMI can be used as a reference (with SYSTEM 8 Genlock Source set to Vid1 Input or Vid2 Input), but HDMI is not a valid reference source when the signal on the HDMI input originates from a VESA-format computer DVI signal.*

## 9 Frame Rates

This parameter selects the HD video frame rate associated with the video standard.

59.94/23.98 (default)	Select 59.94/23.98 if your desired rate is either 59.94 or 23.98.
50/25	Select 50/25 if your desired rate is either 50 or 25 (PAL).
60/24	Select 60/24 if your desired rate is either 60 or 24.

*NOTE: Changing the Frame Rates selection automatically selects a new value for 2 Output Format. Each Frame Rates selection remembers its own Output Format settings.*

## 10 NTSC Standard

This parameter selects the NTSC video standard. This setting only applies when parameter 9 Frame Rate is "59.94/23.98".

NTSC (default)	Select NTSC for North America.
NTSC Japan	Select NTSC for Japan.
PAL M	Select PAL-M for Brazil.

The NTSC standard applies to both the Output video standard, and the expected Input video standard. The FS2 does not convert NTSC to PAL-M, or vice-versa.

## 11 Composite Downconv

This parameter selects the type of Downconversion performed on the incoming selected HD source input for the analog Composite (NTSC or PAL) video output.

Crop (default)	Image is cropped to fit new screen size.
Anamorphic	HD image is converted to full-screen SD with a 16x9 aspect ratio (anamorphic).
14x9	Image is reduced slightly with aspect ratio preserved. Black is added top and bottom, and the left and right sides are cropped.
Auto AFD	Automatically selects the best Downconvert mode based on the input video's Active Format Description (AFD) code. If the input video is not carrying an AFD VANC code, the Downconverter defaults to the mode specified in parameter menu <i>16.3 Downconvert AFD Default</i> .
Letterbox	Image is reduced with black top and bottom added to image area, with the aspect ratio preserved.

This parameter is used only when the Video Processor feeding the Composite output (Output parameter 5 Composite Out) is producing HD. If that Video Processor is producing SD, the Composite Downconverter is not needed, and the format on the Composite output is the same as seen on the other outputs (controlled by parameter 7 Downconvert Mode for that Video Processor).

*NOTE: Using the Downconverter adds a frame of video delay and causes the analog Composite output to be one frame behind the other outputs.*

## 12 HDMI RGB Range

This parameter selects the output range for HDMI YCbCr. Full allows a range of 0-255 and SMPTE limits the range to 16 to 235 (see note for details).

YCbCr luminance (Y) channel data ranges nominally between 16 (black) and 235 (white). Values outside of this range are typically clamped to the valid range. This may cause confusion because JPEG JFIF YCbCr values range between 0 and 255. Mixing these values causes video contrast shifts. You can avoid these shifts if you maintain one range of values throughout your system.

Full (default)	Selects an HDMI luminance output range of 0-255.
SMPTE	Selects an HDMI luminance output range of 16-235.

## 14.0 AES/EBU SRC Mode

This parameter controls the mode of the audio sample rate converters for AES/EBU input audio pairs.

In Manual mode, the sample rate converters are enabled manually for each AES pair using parameters 14.1 through 14.8.

In Auto mode, the system decides how to handle sample rate conversion. Normal PCM audio passes through the Sample Rate Converters and gets converted, as appropriate. AES channels in which the non-audio flag is set in the Channel Status Word are automatically detected and allowed to bypass the Sample Rate Converters; the signal passes unaltered and the existing data is preserved.

Auto (default)	The signal bypasses the Sample Rate Converters for audio channels containing a non-audio flag in the Channel Status Word. If the non-audio flag is not set, the signal passes normally through the Sample Rate Converters.
Manual	The FS2 determines what to do about audio sample rate conversion on a channel pair-by-pair basis, determined by settings 14.1-14.8. If a channel pair is set to On, sample rate conversion is applied to that channel pair. If a channel pair is set to Bypass, the FS2 leaves embedded audio as is, bypassing sample rate conversion; this is useful for Dolby® 5.1 embedded audio and other applications where you do not want sample rate conversion to occur.

## 14.1–14.8 AES/EBU SRC

This group of parameters controls audio sample rate conversion on AES/EBU input audio channel pairs 1/2, 3/4, 5/6, 7/8, 9/10, 11/12, 13/14, and 15/16.

When 14.0 AES/EBU SRC Mode is set to Auto, no settings per channel are required; sample rate conversion occurs normally for all channels unless the non-audio flag is set in the Channel Status Word, in which case sample rate conversion gets bypassed and the signal is passed through unaltered.

When 14.0 AES/EBU SRC Mode is set to Manual, each channel pair can be set manually to On or Bypass. using parameters 14.1–14.8.

On is the default setting in which audio is rate-converted and synced with video (SRC is applied).

Bypass is available for use when Dolby® 5.1 and similar schemes need to be preserved and the audio data passed unaltered (no SRC is applied).

Set these parameters to Manual (14.0) and Bypass (14.1-14.8) only if BOTH the following items are true:

- You want to pass unaltered digital encoded audio from either an embedded or AES Input to an embedded and/or AES Output.
- You have the embedded or AES input genlocked to the FS2 output. In other words, the encoded audio will not survive the frame-sync function (dropping or repeating frames) so it needs to be set to lock to the input. You can lock to a reference only if that reference is driving both the FS2 and the upstream source of the embedded or AES input to the FS2.

On (default)	Audio sample rate conversion (SRC) is applied to the affected channel pairs and keeps the video and audio synchronized.
Bypass	Audio sample rate conversion (SRC) is NOT applied to the affected channel pairs. The signal is passed through unaltered, which is useful for preserving Dolby® 5.1 embedded audio and other applications where existing data on the input must be preserved and passed to the output.

## 15 Dolby Decoder Input

This menu selects the audio input pair used to feed compressed data to the Dolby Audio Decoder (option).

Input Pair	AES Ch1/2	SDI 1 Ch1/2	Fiber 1 Ch1/2
	AES Ch3/4	SDI 1 Ch3/4	Fiber 1 Ch3/4
	AES Ch5/6	SDI 1 Ch5/6	Fiber 1 Ch5/6
	AES Ch7/8	SDI 1 Ch7/8	Fiber 1 Ch7/8
	AES Ch9/10	SDI 1 Ch9/10	Fiber 1 Ch9/10
	AES Ch11/12	SDI 1 Ch11/12	Fiber 1 Ch11/12
	AES Ch13/14	SDI 1 Ch13/14	Fiber 1 Ch13/14
	AES Ch15/16	SDI 1 Ch15/16	Fiber 1 Ch15/16
		SDI 2 Ch1/2	Fiber 2 Ch1/2
		SDI 2 Ch3/4	Fiber 2 Ch3/4
		SDI 2 Ch5/6	Fiber 2 Ch5/6
		SDI 2 Ch7/8	Fiber 2 Ch7/8
		SDI 2 Ch9/10	Fiber 2 Ch9/10
		SDI 2 Ch11/12	Fiber 2 Ch11/12
		SDI 2 Ch13/14	Fiber 2 Ch13/14
		SDI 2 Ch15/16	Fiber 2 Ch15/16

## 16 Dolby Decoder Mode

This parameter determines the Dolby Decoder “Bitstream Detect Mode” on the Dolby Decoder Card. In Auto mode, the Dolby Decoder decodes Dolby E, Dolby Digital, or Dolby DigitalPlus bitstreams. If none of the above are detected, the card passes the incoming audio as PCM.

In Dolby E mode, the Dolby Decoder only decodes Dolby E bitstreams, and mutes its outputs if it detects anything else.

In Dolby D mode, the Dolby Decoder only decodes Dolby Digital or Dolby DigitalPlus bitstreams, and mutes its outputs if it detects anything else.

Auto (default) Dolby E Dolby D	Automatically decode Dolby E, Dolby digital, Dolby DigitalPlus, or PCM. Decode Dolby E only. Decode Dolby Digital or Dolby DigitalPlus only.
--------------------------------------	--

## 17 Dolby Decoder Aux Out

The Dolby Decoder outputs eight channels of decoded audio, plus an additional Aux output which is a 2-channel (stereo) mixdown of one of the selected Dolby Programs (1-8). This parameter determines which of the Programs is used for the Aux mixdown.

In this context, Program is not the same as a physical input channel. To Dolby, a Program is a related set of audio channels. For example, a 5.1 audio source requires 6 channels and is considered one Program. Consequently, there may be a varying number of Programs available on a given Dolby E bitstream. It is possible to have up to eight Programs on a single bitstream if eight discrete mono channels were encoded.

Program 1 (default)	Set the Dolby Aux Output to a mixdown of Program 1
Program 2	Set the Dolby Aux Output to a mixdown of Program 2
Program 3	Set the Dolby Aux Output to a mixdown of Program 3
Program 4	Set the Dolby Aux Output to a mixdown of Program 4
Program 5	Set the Dolby Aux Output to a mixdown of Program 5
Program 6	Set the Dolby Aux Output to a mixdown of Program 6
Program 7	Set the Dolby Aux Output to a mixdown of Program 7
Program 8	Set the Dolby Aux Output to a mixdown of Program 8

## 18 Dolby Decoder Aux Mode

The Dolby Decoder outputs eight channels of decoded audio, plus an additional Aux output which is a 2-channel (stereo) mixdown of one of the selected Dolby Programs. This parameter determines how the Aux mixdown is produced. Lt/Rt produces a stereo mixdown which takes rear surround channels into account (when available).

Selecting Lo/Ro produces a stereo mixdown using only the front channels, Mono produces a mono mixdown, and Mute produces full quality, high fidelity silence.

Lt/Rt	Produces an Aux stereo mixdown including the rear surround channels.
Lo/Ro	Produces an Aux stereo mixdown using only the front channels.
Mono	Produces an Aux mono mixdown.
Mute	Produces full quality high fidelity silence.

# OUTPUT Menu Group

This menu group selects the video and audio outputs that are routed to the rear panel connectors.

## 1.1 SDI1 Video Out


This parameter selects which video processor output is sent out the SDI 1 output.

Processor1 (default)	Sends the output of Processor 1 to the SDI1 output.
Processor2	Sends the output of Processor 2 to the SDI1 output.
Proc1+Proc2	Sends multiplexed Proc1 & 2 to the SDI1 output (Dual Stream 3G).

The default is to send the output of Processor 1 to SDI1 Out.

The Proc1+Proc2 selection multiplexes two separate 1.5 Gb HD video signals from both video processor outputs into a Dual Stream 3G SDI (muxed) output as illustrated below. This selection will only make valid video if both video processors are set to output the same HD video format and that format is not 1080p50/60.

Figure 11. Dual Stream 3G Output

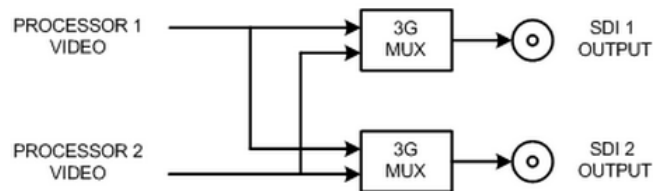

## 1.2 SDI2 Video Out

This parameter selects which video processor output is sent to the SDI2 output, and is similar to ["1.1 SDI1 Video Out" on page 56](#). The default is to send the output of Processor2 to SDI2 Out.

Processor1	Sends the output of Processor 1 to the SDI2 output.
Processor2 (default)	Sends the output of Processor 2 to the SDI2 output.
Proc1+Proc2	Sends multiplexed Proc 1 & 2 to the SDI2 output (Dual Stream 3G).

## 2.1 Fiber1 Video Out

This parameter selects which video processor output is sent to the optional Fiber1 output, and is similar to ["1.1 SDI1 Video Out" on page 56](#). The default is to send the output of Processor 1 to Fiber1 Out.

Processor1 (default)	Sends the output of Processor 1 to the Fiber1 output.
Processor2	Sends the output of Processor 2 to the Fiber1 output.
Proc1+Proc2	Sends multiplexed Proc 1 & 2 to the Fiber1 output (Dual Stream 3G).

## 2.2 Fiber2 Video Out

This parameter selects which video processor output is sent to the optional Fiber2 output, and is similar to ["1.1 SDI1 Video Out" on page 56](#). The default is to send the output of Processor 2 to the Fiber2 Output.

Processor1	Sends the output of Processor 1 to the Fiber2 output.
Processor2 (default)	Sends the output of Processor 2 to the Fiber2 output.
Proc1+Proc2	Sends multiplexed Proc 1 & 2 to the Fiber2 output (Dual Stream 3G).



### 3 HDMI Video Out

---

This parameter selects which video processor output is sent to the HDMI output.

Processor1 (default)	Sends the output of Processor 1 to the HDMI output.
Processor2	Sends the output of Processor 2 to the HDMI output.

### 4 Component Out

---

This parameter selects the video processor output to be sent out the Component analog output.

Processor1 (default)	Sends the output of Processor 1 to the Component output.
Processor2	Sends the output of Processor 2 to the Component output.

### 5 Composite Out

---

This parameter selects the video processor output to be sent out the Composite analog output. If an HD output is sent to the Composite Output, a separate Downconverter dedicated to the Composite Output will provide an SD output.

Processor1 (default)	Sends the output of Processor 1 to the Composite output.
Processor2	Sends the output of Processor 2 to the Composite output.

### 6 HDMI Audio Out

---

This parameter selects which audio processor output channels (1–8 or 9–16) are embedded in the HDMI output. The Audio Processor associated with the selected Video Processor for the HDMI output is used as the audio source (Video Proc 1 = Audio Proc 1, Video Proc 2 = Audio Proc 2); this parameter selects which channels of that source are embedded.

Channels 1-8 (default)	Selects audio channels 1-8 to embed in the HDMI output.
Channels 9-16	Selects audio channels 9-16 to embed in the HDMI output.

### 7 AES/EBU Audio Out

---

This parameter selects the audio processor output to be sent out the AES/EBU digital audio output.

Processor1 (default)	Selects Audio Processor 1 output to send to the AES/EBU output.
Processor2	Selects Audio Processor 2 output to send to the AES/EBU output.

### 8 Analog Audio Out

---

This parameter selects which group of channels (1–8 or 9–16) from which audio processor output (1 or 2) will be sent to the Analog Audio output.

Audio1 Ch1-8 (default)	Sends Audio Proc1 output Ch1-8 to the Analog Audio output.
Audio1 Ch9-16	Sends Audio Proc1 output Ch9-16 to the Analog Audio output.
Audio2 Ch1-8	Sends Audio Proc2 output Ch1-8 to the Analog Audio output.
Audio2 Ch9-16	Sends Audio Proc2 output Ch9-16 to the Analog Audio output.

## 9.1 SDI1 3G Config

---

The SDI13G Config parameter determines how 1080p50/60 signals are formatted for the SDI 1 output. The first two choices select either “Level A” or “Level B” as described in the SMPTE 425 standard. The third selection ties SDI 1 Out and SDI 2 Out together into a single 1.5 Gb Dual-link 1080p50/60 output. In this case, the SDI2 Video Out and SDI2 Audio Out selections are ignored.

3 Gb-Level A (default)	Formats 3G SDI Output as Level A.
3 Gb Level-B	Formats 3G SDI Output as Level B.
1.5 Gb Dual Link	Formats SDI 1 and SDI 2 as 1.5Gb “Dual Link.”

## 9.2 SDI2 3G Config

---

The SDI2 3G Config parameter determines how 1080p50/60 signals are formatted for the SDI 2 output. The two choices select either “Level A” or “Level B” as described in the SMPTE 425 standard. (If the SDI1 selection is Dual Link, these SDI2 settings are ignored because the SDI 2 output is used for dual link.)

3 Gb-Level A (default)	Formats 3G SDI Output as Level A.
3 Gb-Level B	Formats 3G SDI Output as Level B.

## 10.1 Fiber1 3G Config

---

The Fiber1 3G Config parameter determines how 1080p50/60 signals are formatted for the Fiber 1 output. The first two choices select either “Level A” or “Level B” as described in the SMPTE 425 standard. The third selection ties Fiber 1 Out and Fiber 2 Out together into a single 1.5 Gb Dual-link 1080p50/60 output. In this case, the Fiber2 Video Out and Fiber2 Audio Out selections are ignored.

3 Gb-A (default)	Sends 3 Gb format A 1080p 50/60 to the Fiber1 output.
3 Gb-B	Sends 3 Gb format B 1080p 50/60 to the Fiber1 output.
1.5 Gb Dual Link	Sends dual-link 1.5 Gb 1080p 50/60 to the Fiber1 and Fiber2 outputs. The signals and outputs are tied together.

## 10.2 Fiber2 3G Config

---

The Fiber2 3G Config parameter determines how 1080p50/60 signals are formatted for the Fiber 2 output. The two choices select either “Level A” or “Level B” as described in the SMPTE 425 standard. (If the Fiber1 selection is Dual Link, these Fiber2 settings are ignored because the Fiber 2 output is used for dual link.)

3 Gb-Level A (default)	Formats 3G SDI Output as Level A.
3 Gb-Level B	Formats 3G SDI Output as Level B.

# VIDEO 1 and VIDEO 2 Menu Groups

---

The following descriptions explain the Video 1 and 2 Menu Groups. Because the selections for the video processors are identical, both are described here.

## Video Input and Output

---

This parameter performs input video source selection for the selected Video Processor (1 or 2). Multiple input sources are available at the connectors on the FS2 rear panel, but the active input source routed to the selected Video Processor is the one you select here.

## 1 Video Input

SDI1 ( <i>default</i> )	Select SDI1 as the input source.
SDI2	Select SDI2 as the input source.
SDI DualLink	Select SDI DualLink, linking both SDI inputs as the input source.
Fiber1	Select Fiber1 as the input source.
Fiber2	Select Fiber2 as the input source.
Fiber DualLink	Select Fiber DualLink, linking both Fiber inputs as the input sources.
HDMI	Select the HDMI input as the input source.
Composite	Select Composite as the input source.
Component	Select Component as the input source.

### Source Memory

Changing the Video Input selection automatically selects new values for Proc Amp parameters (11.1 through 11.4) and Color Corrector (RGB) parameters (12.0 through 12.9). Each video source remembers its own Proc Amp and Color Corrector settings. This is referred to as Source Memory.

### Audio Source Memory

If AUDIO 3 Audio Follow Video is set to On, changing the Video Input selection will also automatically select new values for all audio parameters associated with Audio Follow Video (see the list provided in the description of parameter AUDIO 3 Audio Follow Video). Audio Source Memory is enabled only when AUDIO 3 Audio Follow Video is set to On.

### Dual Link

Dual Link referred to here is 1080p50/59.94 on two 1.5 Gb HD-SDI connections. Selecting Dual Link as the Video Input for Video Processor 1 or 2 will allocate both SDI Inputs for Dual Link use. Both Processors can use the Dual Link Input, or if only one Processor is using it, the other Processor is free to select another input. The Fiber inputs operate the same way.

## 2 Output Format

This parameter defines the output format of the Video Processor (1 or 2). Available choices depend on the frame rate selection. The frame rate is set by the Frame Rates parameter (System menu 9).

Follow INPUT ( <i>default</i> )	Follow the format of the selected input.
Follow REF	Follow the format of the reference input (Ref).
525/625<frame rate>	Select 525/625 SD as the Video Processor output.
720p<frame rate>	Select 720p HD as the Video Processor output.
1080i<frame rate>	Select 1080i HD as the Video Processor output.
1080PsF<frame rate>	Select 1080PsF HD as the Video Processor output.
1080p<frame rate>	Select 1080p HD as the Video Processor output.
2K1080p<frame rate>	Select 2K1080p HD as the Video Processor output.

### Output Format Selection Constraint

Available frame rates depend on System 9 Frame Rates parameter setting.

### Output Timing Memory

Changing the Output Format selection automatically selects new values for H & V timing parameters (14.1 Output Timing H, 14.2 Output Timing V and 14.3 Analog Output Fine). Each Output Format mode remembers its own H and V timing settings.

## Output Format Mapping

---

The Output Format selection is remembered for each of the frame rates. If you change the frame rate selection, the Output Format associated with the newly selected frame rate is recalled.

## 2K1080p Audio

---

The FS2 does not support embedded audio output for the following formats:

- 2K1080p 29.97 or 2K1080p 30
- 2K1080p 59.94 or 2K1080p 60 when 3G Config is set to 3 Gb Level B or 1.5 Gb DualLink.

## 3 Video Output Mode

---

The parameter sets the final video output of the Video Processor to normal video or the test pattern generator. Alarms occur if conflicting video formats are selected.

Normal (default) Test Pattern	Normal video output from the processors. The output of the test pattern generator.
----------------------------------	---

## Background Fill

---

This parameter selects the background source used to fill any part of the processor output raster not filled with video from the main input video. For the Video Processor 1 menu, the second selection is Video 2. For the Video Processor 2 menu, the second selection is Video 1. Using this feature, you can key Video 2 into Video 1 or vice versa

## 4 Background Fill

---

Black (default) Video 1/2 Matte	Selects black as the background fill video. Selects Vid1 or Vid2 as the background fill video. Selects matte as the background fill video.
---------------------------------------	--

## Loss of Input

---

This parameter selects the automatic action that occurs if the video input is lost. The Black selection (default) cuts the video to black. The Freeze selection freezes video on the last available good frame.

## 5 Loss of Input

---

Black (default) Freeze	Switches to black if input video is lost. Freezes on the last available good video frame if input is lost.
---------------------------	---

## Upconvert and Downconvert


---

These parameter select the type of Upconversion the Video Processor performs on the selected SD source input. They are in effect only when the input is SD (525i or 625i) and the selected output format is HD (720p, 1080i, or 1080p), or when the input is HD (720p, 1080i, or 1080p) and the output is 2K (2048 x 1080). When upconverting to 2K, the selections do not precisely describe the resulting picture. For example, 4x3 pillar is not precisely 4x3, and 14x9 is not precisely 14x9. However, picture scaling is such that the visual effect closely resembles an SD-to-HD upconvert.

## 6 Upconvert Mode

4x3 Pillar 14x9 Pillar ( <i>default</i> )	Results in 4x3 image at center screen with black sidebars. Results in 14x9 image, zoomed slightly to fill a 14x9 image with black sidebars.
Full Screen LB to Full Wide Zoom	Anamorphic full screen display. Image is zoomed to fit the full screen (letterbox). Using a combination of zoom and stretch, the image is sized to fit a 16x9 screen (this can introduce a small aspect ratio change).

### Upconvert Illustrations

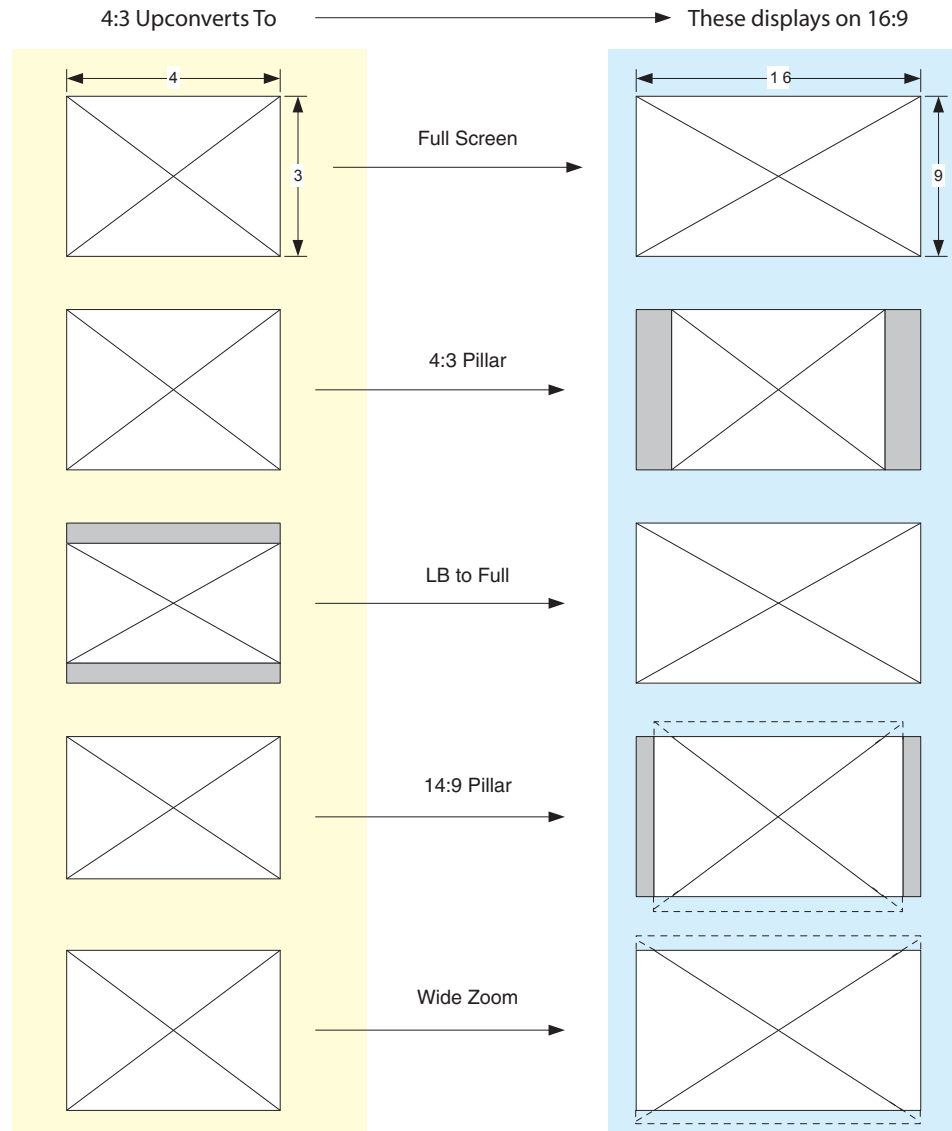

## 7 Downconvert Mode

This parameter selects the type of Downconversion performed by the Video Processor on the selected HD source input. See the following Downconvert Illustrations for Downconversion examples. This parameter is in effect only when the input is HD (720p, 1080i, or 1080p) and the output format is SD (525i or 625i),

or when the input is 2K (2048 x 1080) and the output is HD (720p, 1080i, or 1080p). When downconverting from 2K, the selections do not precisely describe the resulting picture. For example, 14x9 is not precisely 14x9. However, picture scaling is such that the visual effect closely resembles an HD-to-SD downconvert.

Crop ( <i>default</i> )	Image is cropped to fit new screen size.
Anamorphic	HD image is converted to full-screen SD with a 16x9 aspect ratio (anamorphic).
14:9	Image is reduced slightly with aspect ratio preserved. Black is added top and bottom, and the left and right sides are cropped.
Auto AFD	Automatically selects the best Downconvert mode based on the input video's Active Format Description (AFD) code. If the input video is not carrying an AFD VANC code, the Downconverter defaults to the mode specified in parameter menu 16.3 <i>Downconvert AFD Default</i> .
Letterbox	Image is reduced with black top and bottom added to image area, with the aspect ratio preserved.


Active Format Description (AFD) codes are carried in the vertical ancillary (VANC) portion of HD SDI video signals, specified in SMPTE 2016 as follows: "AFD information is intended to guide DTV receivers and/or intermediate professional video equipment regarding the display of video of one aspect ratio on a display of another aspect ratio."

In the FS2 Downconverter, the AFD code on the video input can be used to guide the Downconverter in choosing which mode to use to best display the important content of the input 16:9 HD video on the 4:3 SD output. For example, if the input AFD code is 10 (Full Frame), it means that the input video has important picture information throughout the full 16:9 frame, so the Downconverter should use Letterbox mode to be sure none of the content is cropped off. An AFD code of 9 (Pillarbox) says that the input video only has content within the center 4:3 area of the picture (usually because it originally came from an Upconverted SD signal) so the Downconverter Crop mode would be the best choice. There are 16 possible HD AFD codes, of which 8 are in common use. The FS2 does not process or use SD AFD codes.

FS2 AFD processing (passing, removing, and re-inserting) occurs based on the setting of parameters 7, 5.4, 16.1, and 16.2.

Auto AFD mode fully defines the size, position, and aspect ratio of the output raster. Thus, when in Auto AFD mode (Output Format set to an SD format, with an HD video input, and Downconvert Mode set to Auto AFD), any Custom Size/Pos settings are ignored, and those menus (13.0 - 13.8) are hidden. Likewise, when in Auto AFD mode, any Region Of Interest settings are ignored, and those menus (14.0 - 14.4) are hidden.

## Downconvert Illustrations

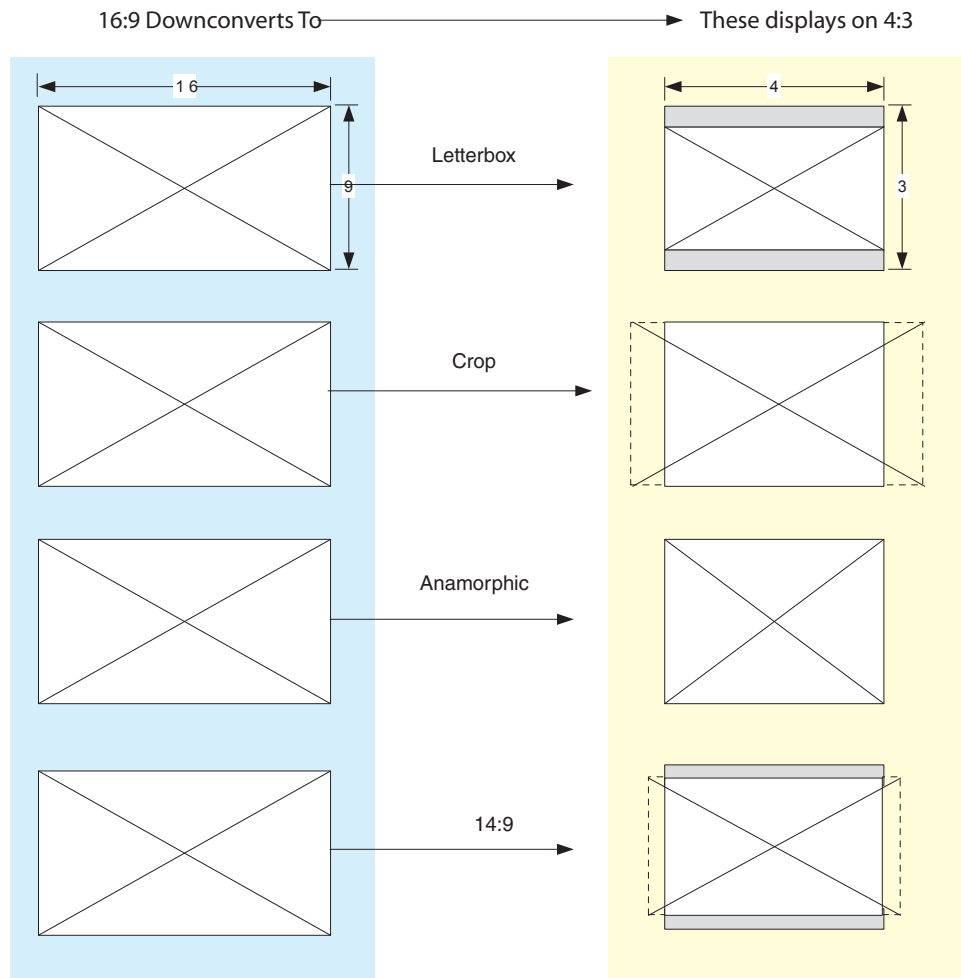


## Aspect Ratio

This parameter selects the type of SD-to-SD Aspect Ratio Conversion (ARC) performed on an incoming selected SD source. This parameter is in effect only when the input and output are both SD (525i or 625i). (In Europe 16:9 anamorphic video is also known as "wide screen" video.)

## 8 SD Aspect Ratio Convert

Off (default)	Turns aspect ratio conversion Off.
Letterbox	Converts 16:9 Anamorphic video to Letterbox video.
H Crop	Converts 16:9 Anamorphic video to 4:3 Standard video (crops left and right edges of video).
Pillarbox	Converts 4:3 Standard video to 16:9 Anamorphic video.
V Crop	Converts Letterbox video to 16:9 Anamorphic video.
14:9	Converts 16:9 Anamorphic video to 14:9 Cropped video.

## SD Aspect Ratio Conversion Illustrations

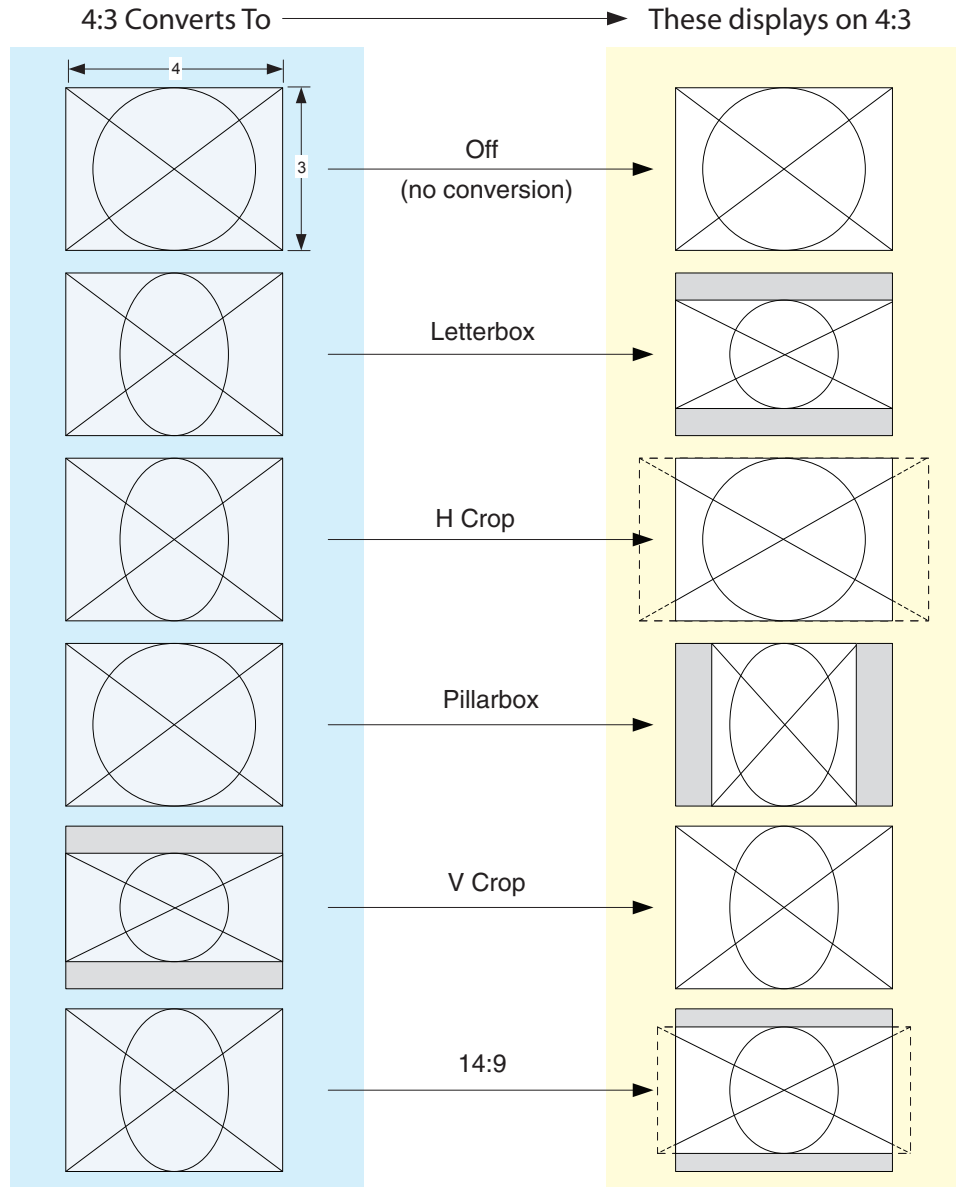

## Sidebars

The parameter, which is hidden if 3 Video Output is not set to Sidebars, adjusts the sidebar position where the center video meets the pillarbox background video on both sides. The underlying hardware feature is the same as Custom Right Crop and Custom Left Crop. This is effectively an extra handle on the Left Crop and Right Crop parameters.

The Crop and Sidebar Edge controls are additive; increasing Sidebar Edge (making the sidebars larger and the center-video smaller), equates to setting Left and Right Crop values to smaller percentages. The Sidebar Edge can be set to 0 through +128. A value of 0 produces a 4:3 center. Positive values produce wider sidebars (and a narrower center).



## 9 Sidebar Edge

---

0 (default) 0 to +128 (Variable)	Defaults to 0. Select a width value from 0 through +128 to expand or shrink the sidebars, which are filled with Background video (4 Background Fill). Selecting a larger value causes the center picture to become narrower while the sidebars expand.
-------------------------------------	--

## Matte of Background Fill

---

### 10.1 Matte Luma

---

This parameter determines the Matte Luma level of the background fill.

50% (default) 0–100% (Variable)	Sets the matte luminance level to the default 50% value. Sets the matte luminance level from 0–100%.
------------------------------------	---

### 10.2 Matte Chroma

---

This parameter determines the Matte Chroma level of the background fill.

50% (default) 0–100% (Variable)	Sets the matte chrominance level to the default 50% value. Sets the matte chrominance level from 0–100%.
------------------------------------	---

### 10.3 Matte Hue

---

This parameter determines the Matte Hue of the background fill.

0 degrees (default) 0–359 degrees (Variable)	Sets the matte hue to the default 0 degrees (red). Sets the matte hue to a value between 0 and 359 degrees.
---	--

*NOTE: On the FS2 front panel, as you turn the Matte Hue ADJUST knob the values wrap from 359 back to 0 degrees.*

## Proc Amp Controls (YUV)

---

### 11.0 Proc Amp (YUV)

---

This parameter turns the Proc Amp On and Off for signals composed of YUV components. When it is On, you can set additional parameters (11.1 to 11.4) to control video Gain, Black Level, Hue, and Saturation. Proc Amp parameter settings are independently kept for each separate input: SDI 1, SDI 2, Fiber 1, Fiber 2, Composite, HDMI, and Component.

Off (default) On	Sets the YUV Proc Amp to Off. Sets the YUV Proc Amp to On.
---------------------	---

#### Source Memory

---

Independent analog output timing values are kept for all available output formats.

## 11.1 Proc Amp Gain

---

This parameter adjusts the video gain from 0 to 1.5 times luma in 0.01 steps

Variable	Adjusts Proc Amp Gain from zero to 1.5 in 0.01 steps. <i>Default (unity): 1.0</i>
----------	--

## 11.2 Proc Amp Black

---

This parameter adjusts the video black level from -20 IRE to +20 IRE in 0.5 steps.

Variable	Adjusts Proc Amp Black level from -20 IRE to +20 IRE in 0.5 steps. <i>Default (unity): 0 IRE</i>
----------	---

## 11.3 Proc Amp Hue

---

This parameter adjusts the video color hue through 360 degrees (color wheel) in 1 degree steps.

Variable	Adjusts Proc Amp Hue from -179 to +180 in steps of 1 degree. <i>Default (unity): 0 degrees</i>
----------	---

## 11.4 Proc Amp Sat

---

This parameter adjusts the video color saturation from black and white to 1.5 times chroma in steps of 0.01.

Variable	Adjusts Proc Amp Saturation from 0 (black & white) to 1.5 (Chroma) in steps of 0.01. <i>Default: 1.0</i>
----------	--

## Color Corrector (RGB)

---

### 12.0 Color Corrector (RGB)

---

This parameter turns the RGB Color Corrector On and Off. When it is On, you can set additional parameters (12.1 to 12.9) to control RGB video Gain, Black Level, and Gamma. When set to Off, all RGB Color Corrector settings are programmed for unity (or bypass).

Off (default)	Sets the RGB Color Corrector to Off.
On	Sets the RGB Color Corrector to On, enabling parameters 12.1-12.9.

#### Source Memory

---

RGB Color Corrector values are independently kept for each separate input: SDI 1, SDI 2, Fiber 1, Fiber 2, Composite, HDMI, and Component.

### 12.1 Color Red Gain

---

This parameter adjusts the RGB Red Gain.

Variable	Adjusts Red Gain from zero to 1.5 in 0.01 steps. <i>Default (unity): 1.0</i>
----------	---

## 12.2 Color Red Black Level

---

This parameter adjusts the RGB Red Black level.

Variable	Adjusts Red Black level from -20 IRE to +20 IRE in 0.5 steps. <i>Default (unity): 0 IRE</i>
----------	--

## 12.3 Color Red Gamma

---

This parameter adjusts the RGB Red Gamma.

Variable	Adjusts Red Gamma level from -1.0 to +1.0 in 0.01 steps. <i>Default (unity): 0</i>
----------	---

## 12.4 -12.6 Color Green

---

This set of parameters adjusts the Gain, Black Level, and Gamma for color Green, same as Color Red described above.

## 12.7-12.9 Color Blue

---

This set of parameters adjusts the Gain, Black Level, and Gamma for color Blue, same as Color Red described above.

## Custom Conversion Settings

---

The custom settings determine the image size and shape for Upconvert and Downconvert modes 6 and 7 if you choose the Custom selection for those modes.

Custom settings are stored separately for each Conversion Mode. Values for each of the Upconvert modes, Downconvert modes (excluding AFD), and SD Aspect Ratio modes (excluding OFF), plus no conversion (or HD CrossConvert), are independently stored (per Vid Proc).

*NOTE: If a Custom Setting parameter is not unity (100%) for the current mode, the front panel UFC LED lights.*

## 13.0 Custom Size/Pos

---

This parameter turns custom image settings 13.1–13.8 On or Off.

On the front panel, when Hide Inactive is on, the Custom controls 13.1–13.8 are only displayed when Custom Size/Pos is On. When Custom Size/Pos is Off, parameters 13.1–13.8 are skipped in the menu system, and the UFC hardware is programmed for unity.

This menu is also not displayed when Active Format Description (AFD) is in control of the Conversion Mode. While downconverting, with Downconvert Mode set to Auto AFD, any values assigned for Custom Size/Pos parameters are ignored, and the menus are hidden.

Off (default) On	Sets this parameter and related custom size/pos parameters to off. Enables this parameter and related custom size/position parameters.
---------------------	---

### 13.1 Custom Size

---

This parameter changes the H and V size of the output picture by the specified percentage (%) while maintaining the current aspect ratio.

100% (default) 10% to 200%	Maintains 100% picture size for the selected format. Enables changing the picture size.
-------------------------------	--

### 13.2 Custom Aspect

---

This parameter changes the H/V aspect ratio of the output picture while maintaining the current V size (Aspect < 0) or H size (Aspect > 0).

0.000 (default) -0.500 to +0.500	Maintains the normal 100% aspect ratio for the selected format. Enables changing the aspect ratio.
-------------------------------------	---

### 13.3 Custom H Position

---

This parameter changes the H position of the output picture.

0% (default) -100% to +100%	Maintains the normal horizontal position of the selected format. Enables changing the horizontal position.
--------------------------------	---

### 13.4 Custom V Position

---

This parameter changes the V position of the output picture.

0% (default) -100% to +100%	Maintains the normal 100% vertical position of the selected format. Enables changing the vertical position.
--------------------------------	--

### 13.5 Custom Left Crop

---

This parameter changes the Left picture crop position.

100% (default) +10.0% to +100.0%	Maintains the normal left side position of the selected format. Enables changing the left side position.
-------------------------------------	---

### 13.6 Custom Right Crop

---

This parameter changes the Right picture crop position.

100% (default) +10.0% to +100.0%	Maintains the normal right side position of the selected format. Enables changing the right side position.
-------------------------------------	---

### 13.7 Custom Top Crop

---

This parameter changes the Top picture crop position.

100% (default) +10.0% to +100.0%	Maintains the normal top position of the selected format. Enables changing the top position.
-------------------------------------	---

### 13.8 Custom Bottom Crop

---

This parameter changes the bottom picture crop position.

100% (default) +10.0% to +100.0%	Maintains the normal bottom position of the selected format. Enables changing the bottom position.
-------------------------------------	---

## Region of Interest (ROI)

---

The Region of Interest parameters (14.0–14.4) select a portion of the input picture that will be used for scaling and/or positioning. This feature can be useful for focusing in on computer video that is less than full screen, such as the contents of a movie player window. The selected area can then be scaled to a standard pillarbox or letterbox size and shape (On Square), or it can be set to a full screen input image (On Full).

*NOTE: On Full may cause image distortion if it is used to expand an odd-shaped region of interest to full screen.*

The ROI Setup mode allows you to preview the edges of your selected Region Of Interest as you set it up. After selecting the desired region using the Setup Cursor, you can take the region to air by setting Region Of Interest to On Square or On Full.

Note that the Setup mode is not required to operate the ROI feature. The edges of the Region Of Interest can also be adjusted while in On Square or On Full modes

### 14.0 Region of Interest

---

This parameter turns the Region of Interest settings On or Off. When enabled, the ROI Left, Right, Top, and Bottom controls (14.1–14.4) define the rectangular shape and position of the ROI.

Off (default)	Turns off the ROI feature.
Setup	Enables ROI cursor.
On Square	Enables ROI and sets video to a pillarbox or letterbox shape.
On Full	Enables ROI, and expands the ROI area to full screen.

Interactions occur between ROI settings and other parameters:

- The Region of Interest menu is not displayed when Active Format Description (AFD) is in control of the Conversion Mode. While downconverting, with Downconvert Mode set to Auto AFD, any values assigned for Custom Size/Pos parameters are ignored, and the menus are hidden.
- Custom Size and Position settings work interactively with ROI, but Custom Crop settings are disabled. Custom Size/Pos is also temporarily disabled while in the ROI Setup mode.

### 14.1 ROI Left

---

This parameter sets the left boundary of the ROI when parameter 14.0 is on.

Variable (default=100%)	Sets ROI left boundary to 10-100% of full screen in 0.1% increments. For 1% increments, hold down the Video button.
-------------------------	---

### 14.2 ROI Right

---

This parameter sets the right boundary of the ROI when parameter 14.0 is on.

Variable (default=100%)	Sets ROI right boundary to 10-100% of full screen in 0.1% increments. For 1% increments, hold down the Video button.
-------------------------	--

### 14.3 ROI Top

---

This parameter sets the top boundary of the ROI when parameter 14.0 is on.

Variable (default=100%)	Sets ROI top boundary to 10-100% of full screen in 0.1% increments. For 1% increments, hold down the Video button.
-------------------------	--

## 14.4 ROI Bottom

This parameter sets the bottom boundary of the ROI when parameter 14.0 is on.

Variable (default=100%)	Sets ROI bottom boundary to 10-100% of full screen in 0.1% increments. For 1% increments, hold down the Video button.
-------------------------	---

## Timing and Delay

These parameters adjust Video Processor horizontal and vertical output timing in reference to the genlock source already selected, and permits adding up to 6 full frames of output delay.

*NOTE: Unlike most knob-adjustable parameters, on the front panel menu this parameter automatically wraps around from the maximum value to 0 (and vice versa).*

### Output Timing Memory

Independent horizontal and vertical timing values are kept for all available output formats.

## 15.1 Output Timing H

When adjusting the horizontal timing (H), this parameter specifies a number of pixels to offset, from zero to full line width. Adjustment range increments from 0 to the width of the line in pixels. The maximum value varies, depending on the format already chosen.

Variable	Adjustment range increments from 0 to the width of the line in pixels. The maximum varies, depending on the format chosen. <i>Default: 0</i>
----------	--

## 15.2 Output Timing V

When adjusting the vertical timing (V), this parameter specifies a number of lines to offset, moving the screen up to a half a frame up or down.

Variable	Adjustment range increments from half a frame up to a half a frame down in single line increments. The maximum varies, depending on the format already chosen. <i>Default: 0</i>
----------	--

## 15.4 Extra Frame Delay

This parameter adjusts Video Processor output timing.

Variable	Adjustment output timing from 0 to 6 frames down in one frame increments. <i>Default: 0</i>
----------	---

## Video Legalizer

These parameters allow adjustment of signal levels to meet legal broadcast requirements.

## 16.0 Video Legalizer

---

This parameter determines the Video Legalizer mode. When set to Off, the Video Legalizer is not enabled, and the following clip controls are not active. In YUV mode, the White Clip, Black Clip, and Chroma Clip controls are enabled and clip any luma/chroma that exceed the set limits. In RGB mode only the White Clip and Black Clip controls are active and limit the R, G, and B values to those settings. RGB mode requires the video to pass through the RGB Proc Amp to be converted to and from RGB.

Off (default)	Disables the Video Legalizer.
YUV	Enables the Video Legalizer to clip YUV to legal levels.
RGB	Enables the Video Legalizer to clip RGB to legal levels.

## 16.1 Legalizer White Clip

---

When the Video Legalizer mode is YUV or RGB, this parameter limits the white level so that it does not exceed the adjusted limit. Limit can be set from +80 IRE to +120 IRE.

Variable	Adjusts white clip level from +80 IRE to +120 IRE in 0.5 steps. <i>Default (unity): 100 IRE</i>
----------	--

## 16.2 Legalizer Black Clip

---

When the Video Legalizer mode is YUV or RGB, this parameter limits the black level to the adjusted limit. Limit can be set from -10 IRE to +20 IRE,.

Variable	Adjusts black level limit from -10 IRE to +20 IRE in 0.5 steps. <i>Default (unity): 0 IRE</i>
----------	--

## 16.3 Legalizer Chroma Clip

---

When the Video Legalizer mode is YUV, this parameter limits the maximum chroma level to the adjusted limit. The limit can be set from +60% to +140%,.

Variable	Adjusts chroma clip level from +60% to +140% in 0.5 steps. <i>Default (unity): 100 IRE</i>
----------	---

## AFD

---

These parameters determines if and where the Video Processor will insert a SMPTE 2016 Active Format Descriptor (AFD) packet into its output video. The inserted AFD code does not affect the Video Processor's up/down/cross conversion, but it may affect downstream video processing if the signal is Downconverted.

*NOTE: AFD codes are only inserted into HD video outputs.*

## 17.1 AFD Out SDI 1/2

These determines whether the Video Processor inserts an AFD packet into the output video.

OFF (default)	Does not insert an AFD code into the output. If the video input has a AFD code and the FS2 is not up/down/cross-converting it, the input AFD code will be passed through to the output.
Auto	If not Upconverting or Downconverting the input video, the input AFD code is passed through. If there is no AFD code on the input video, a "Full Frame" (8) code is inserted. If the FS2 is Upconverting, the appropriate AFD code will be chosen based on the Upconvert mode.
>16:9	Always inserts a "Box > 16:9 (center)" AFD code (4), which indicates that the HD image has an aspect ratio greater than 16:9 as a vertically centered letterbox within the 16:9 frame.
Full Frame	Always inserts a "Full Frame" AFD code (8), which indicates that the HD image is full frame, with an aspect ratio that is 16:9.
Pillarbox	Always inserts a "4:3 (center)" AFD code (9), which indicates that the HD image has a 4:3 aspect ratio as a horizontally center pillarbox image within the 16:9 frame.
Letterbox	Always inserts a "16:9 (with complete 16:9 image protected)" AFD code (10), which indicates that the HD image is full frame, with a 16:9 aspect ratio and all image areas are protected.
14:9	Always inserts a "14:9 (center)" AFD code (11), which indicates that the HD image has a 14:9 aspect ratio as a horizontally centered pillarbox within the 16:9 frame.
4:3 Alt 14:9	Always inserts a "4:3 (with alternate 14:9 center)" AFD code (13), which indicates that the HD image has a 4:3 aspect ratio and with an alternative 14:9 centered pillarbox image within the 16:9 frame.
16:9 Alt 14:9	Always inserts a "16:9 (with alternative 14:9 center)" AFD code (14), which indicates that the HD image has a 16:9 aspect ratio with an alternative 14:9 center within the 16:9 frame.
16:9 Alt 4:3	Always inserts a "16:9 (with alternative 4:3 center)" AFD code (15), which indicates that the HD image has a 16:9 aspect ratio with an alternative 4:3 center within the 16:9 frame.

## 17.2 AFD VANC Output Lines

This parameter determines which video output lines have AFD VANC inserted (HD output only) on the Video Processor output.

10 (default) 9-42	Adds AFD VANC to line 10. Select which line other than 10 will have AFD VANC added.
----------------------	--



## 17.3 Downcvrt AFD Dflt

This parameter selects how the Video Processor will operate when parameter 7 Downconvert Mode has been set to Auto AFD and no AFD codes are detected at the selected input source (that is, this menu selects the default Downconversion to use when AFD is absent). This parameter is in effect only when the input is HD (720p, 1080i, or 1080p) and the selected output format is SD (525i or 625i).

Hold Last (default)	Use the last detected AFD code and continue to use its aspect ratio until a new AFD code is detected again in the SDI metadata.
Crop	When AFD code is absent, switch the Downconverter mode to Crop.
Anamorphic	When AFD code is absent, switch the Downconverter mode to Anamorphic.
14:9	When AFD code is absent, switch the Downconverter mode to 14x9.
Letterbox	When AFD code is absent, switch the Downconverter mode to Letterbox.

## Closed Captioning

This parameter translates closed captioning from the SD CEA-608 format on line 21 to the HD CEA-708 format and inserts it into the HD output video stream.

*NOTE: This parameter interacts with parameter 20 SD Line 21 Blanking; see the explanation for that parameter also.*

## 18 Caption Xlator

On (Upconverter)	When set to On and using the Upconverter, the FS2 will automatically translate incoming line 21 captions to CEA-708 format and insert the VANC packets into the converted HD video stream. This is a complete translation from CEA-608 format to CEA-708 format (including the embedded SD captions).
On (Downconverter)	When set to On and using the Downconverters, the FS2 will automatically intercept and reformat the SD caption data in the incoming CEA-708 VANC packets, and output it on line 21 of the standard definition outputs.
Off (default)	When Off, caption translation is not performed.

In standard definition video (525i/59.94), closed captioning data is encoded and sent on line 21 of both fields, using a format defined by the Consumer Electronics Association standard, CEA-608. This is traditionally called "line 21," "SD," or "608" captioning, and is used for analog composite, analog component, and serial digital (SDI) video.

In high definition video, closed captioning is encoded and sent as Vertical Ancillary (VANC) packets in SDI video, using a format defined by the Consumer Electronics Association standard CEA-708 (there is no equivalent for analog HD video). This is traditionally called "HD," "DTV," or "708" captioning. The data formatting and encoding for 708 captions is very different from the data contained in 608 (SD) captioning, reflecting the added features and capabilities available with the CEA-708 standard.

When the Caption Translator is on, the FS2 Upconverter automatically translates incoming line 21 captions to CEA-708 format and inserts the VANC packets into the converted HD video stream. This is a complete translation from CEA-608 format to CEA-708 format (including the embedded SD captions).

The FS2 Downconverters automatically intercept and reformat the SD caption data in the incoming CEA-708 VANC packets, and output it on line 21 of the standard definition outputs.

## Input Scan and PsF

---

This parameter determines how the Deinterlacer handles interlaced vs. PsF inputs. Normally, this control will only be used to indicate that a 1080PsF25 input is PsF and not interlaced.

### Auto

---

When Auto is selected, the system will look for clues in the source's SMPTE 352 (Payload ID) data and respond accordingly. If there is no SMPTE 352 information, the system will assume that 23.98/24 fps sources are PsF, and 25/29.97/30 fps sources are interlaced.

### Progressive

---

When Progressive is selected, the system will assume that all sources are PsF (even if there is SMPTE 352 data to the contrary).

### Interlaced

---

When Interlaced is selected, the system will assume that all sources are interlaced (even if there is SMPTE 352 data to the contrary)

## 19 Input Scan Format

---

Auto (default)	Deinterlacer detects input source payload ID data and sets the processing format accordingly.
Progressive	Assumes all input sources are progressive.
Interlaced	Assumes all input sources are interlaced

## SD Line 21 Closed Caption Blanking

---

This parameter determines whether the FS2 blanks line 21 closed captioning data prior to video processing of an SD 525i video input. (Line 21 normally occurs at the top of the raster in the overscan area of video, so the presence of captioning data or blanking does not interfere with the visible SD or Upconverted video.)

## 20 SD Line 21 Blanking

---

### Blank

---

In Blank mode, the FS2 copies and remembers the contents of SD line 21 and then blanks those lines before transformation to ensure captioning data does not get included in the transformed video. If the output video is SD 525i, the copied caption information gets reinserted on line 21 of the output. If the output video is Upconverted and parameter 18 Caption Xlator is On, the copied caption gets translated into an HD caption and inserted into the transformed output (and if the caption translator is Off, the HD output does not contain caption data). This is the setting to use if the SD input includes a caption and you want to retain it at the output (parameter 18 Caption Xlator must be On), or you want to blank it at the output (18 Caption Xlator must be Off).

### Pass

---

In Pass mode, the FS2 does not blank line 21 of the SD video input and passes the unaltered video to the Video Processor for transformation. This is the setting to use if there is no captioning data present on line 21 of a 525i video input.

## Auto blank

In Auto Blank mode, the FS2 automatically detects presence or absence of line 21 caption data on the SD input. If no line 21 caption is present, the FS2 passes the video unaltered. If line 21 data is detected, the FS2 copies the data, blanks line 21, and reinserts translated captioning on the transformed HD output if parameter 18 Caption Xlator is On. If the Caption Translator is Off, the HD output will not contain captioning. This is the setting to use if your SD input video sometimes contains captions and other times does not, or if you are uncertain which setting to use.

Blank (default)	In Upconvert or SD Aspect Ratio Convert modes, this setting copies caption data and blanks 525i input video Line 21 caption data before conversion, and may or may not include that data (see above).
Pass Auto blank	Passes input video unaltered to the converter and to the outputs. The FS2 automatically detects caption data on SD input, passing unaltered video if no line 21 caption is present, and reinserting caption data if 18 Caption Xlator is On.

## Test Pattern

This parameter selects the video source for the Test Pattern Generator. The pattern generator is turned off and on using Output parameter 3 Video Output mode.

### 21 Test Pattern Video

75% Bars (default)	Sets the test pattern to 75% bars.
Ramp	Sets the test pattern to ramp.
Multiburst	Sets the test pattern to multiburst.
Flat Field	Sets the test pattern to flat field chroma.
Black	Sets the test pattern to black.
100% Bars	Sets the test pattern to 100% bars.

## Freeze

This parameter tells the FS2 to freeze the current video frame on all outputs. This may be useful either for testing or in case of loss of the input source.

### 22 Freeze Output

Off (default)	Normal operation. The FS2 outputs video from the input.
On	The FS2 captures and freezes the most current video frame and displays it on the outputs as long as this parameter is set to On.

The freeze feature can be controlled not only by the front-panel and web browser interface, but also by a GPI input. When a GPI input is causing the freeze condition, the EXT lamp will be lit on the front-panel.

## AUDIO 1 and AUDIO 2 Menu Groups

The Audio Menus control the FS2's audio routing and signal processing. Because the selections for the video processors are identical, both are described here.

## 1.0 Audio Input

This parameter performs input audio source selection for Audio Processor 1. Multiple input sources may be present at all the connectors on the FS2 rear panel, but the active input source routed through the FS2 is the one selected here.

AES/EBU (default)	Selects the AES/EBU digital audio input (16-ch) as the input source.
Analog	Selects the Analog audio connector (DB25, 8-ch) as the input source. Input channels 9-16 are set to Mute.
Embed SDI1	Uses the embedded audio from the SDI 1 video input as the input source.
Embed SDI2	Uses the embedded audio from the SDI 2 video input as the input source.
Embed Fiber1	Uses the embedded audio from the optional Fiber 1 video input as the input source.
Embed Fiber2	Uses the embedded audio from the optional Fiber 2 video input as the input source.
HDMI	Uses the embedded audio from the HDMI video input (8-ch) as the input source. Input channels 9-16 are set to Mute.
Dolby Decode	Selects the Dolby Decoder output as the audio processor input.
Mute	Sets all input channels to Mute.
Channel Map	For the 16 channels of audio input, selects inputs according to Audio Map parameters 1.1 through 1.16. Any of the 16 embedded channels can be mapped to one of the 96 sources.
Stereo Map	For the 16 channels of audio input, selects stereo inputs according to Audio Map parameters 1.17 through 1.24. Any channel pair (8 pair total) can be mapped to 48 different choices.

*NOTE: If parameter 3 Audio Follow Video is set to On, the Audio Input selection is independently remembered for each video input. When Audio Follow Video is Off, audio for each video input is not remembered and you must manually select the audio source you want. If you have never manually selected the audio source, the factory default audio selection is used.*

## 1.1–1.16 Audio Map Ch1–16

When Channel Map is selected in parameter 1, these Map parameters for Audio Channels 1–16 map an audio source to each audio output channel. Available source selections for the audio output channels are listed in the following table. The default selections are AES Ch1–16 for Audio Output Channels 1–16, respectively.

Available Selections	AES Ch 1 (default)	SDI 1 Ch 1	Fiber 1 Ch1	HDMI Ch1
	AES Ch 2 (default)	SDI 1 Ch 2	Fiber 1 Ch2	HDMI Ch2
	AES Ch 3 (default)	SDI 1 Ch 3	Fiber 1 Ch3	HDMI Ch3
	AES Ch 4 (default)	SDI 1 Ch 4	Fiber 1 Ch4	HDMI Ch4
	AES Ch 5 (default)	SDI 1 Ch 5	Fiber 1 Ch5	HDMI Ch5
	AES Ch 6 (default)	SDI 1 Ch 6	Fiber 1 Ch6	HDMI Ch6
	AES Ch 7 (default)	SDI 1 Ch 7	Fiber 1 Ch7	HDMI Ch7
	AES Ch 8 (default)	SDI 1 Ch 8	Fiber 1 Ch8	HDMI Ch8
	AES Ch 9 (default)	SDI 1 Ch 9	Fiber 1 Ch9	Dolby Ch1
	AES Ch10 (default)	SDI 1 Ch10	Fiber 1 Ch10	Dolby Ch2
	AES Ch11 (default)	SDI 1 Ch11	Fiber 1 Ch11	Dolby Ch3
	AES Ch12 (default)	SDI 1 Ch12	Fiber 1 Ch12	Dolby Ch4
	AES Ch13 (default)	SDI 1 Ch13	Fiber 1 Ch13	Dolby Ch5
	AES Ch14 (default)	SDI 1 Ch14	Fiber 1 Ch14	Dolby Ch6
	AES Ch15 (default)	SDI 1 Ch15	Fiber 1 Ch15	Dolby Ch7
	AES Ch16 (default)	SDI 1 Ch16	Fiber 1 Ch16	Dolby Ch8
	Analog Ch 1	SDI 2 Ch 1	Fiber 2 Ch1	Dolby Aux1
	Analog Ch 2	SDI 2 Ch 2	Fiber 2 Ch2	Dolby Aux2
	Analog Ch 3	SDI 2 Ch 3	Fiber 2 Ch3	Mute
	Analog Ch 4	SDI 2 Ch 4	Fiber 2 Ch4	
	Analog Ch 5	SDI 2 Ch 5	Fiber 2 Ch5	
	Analog Ch 6	SDI 2 Ch 6	Fiber 2 Ch6	
	Analog Ch 7	SDI 2 Ch 7	Fiber 2 Ch7	
	Analog Ch 8	SDI 2 Ch 8	Fiber 2 Ch8	
		SDI 2 Ch 9	Fiber 2 Ch9	
		SDI 2 Ch 10	Fiber 2 Ch10	
		SDI 2 Ch 11	Fiber 2 Ch11	
		SDI 2 Ch 12	Fiber 2 Ch12	
		SDI 2 Ch 13	Fiber 2 Ch13	
		SDI 2 Ch 14	Fiber 2 Ch14	
		SDI 2 Ch 15	Fiber 2 Ch15	
		SDI 2 Ch 16	Fiber 2 Ch16	

## 1.17–1.24 Audio Map Ch 1/2–15/16

When Stereo Map is selected in parameter 1, these Map parameters for Audio Channels 1/2–15/16 map a pair of audio sources to each audio output channel pair. Available source pair selections for the audio output channel pairs are listed in the following table. The default selections are AES Ch1/2–AES 15/16 for Audio Output Channels 1/2–15/16, respectively.

Available Selections:	AES Ch1/2 (default)	SDI 1 Ch1/2	Fiber 1 Ch1/2	HDMI Ch1/2
	AES Ch3/4 (default)	SDI 1 Ch3/4	Fiber 1 Ch3/4	HDMI Ch3/4
	AES Ch5/6 (default)	SDI 1 Ch5/6	Fiber 1 Ch5/6	HDMI Ch5/6
	AES Ch7/8 (default)	SDI 1 Ch7/8	Fiber 1 Ch7/8	HDMI Ch7/8
	AES Ch9/10 (default)	SDI 1 Ch9/10	Fiber 1 Ch9/10	Dolby Ch1/Ch2
	AES Ch11/12 (default)	SDI 1 Ch11/12	Fiber 1 Ch11/12	Dolby Ch3/Ch4
	AES Ch13/14 (default)	SDI 1 Ch13/14	Fiber 1 Ch13/14	Dolby Ch5/Ch6
	AES Ch15/16 (default)	SDI 1 Ch15/16	Fiber 1 Ch15/16	Dolby Ch7/Ch8
	Analog Ch1/2	SDI 2 Ch1/2	Fiber 2 Ch1/2	Dolby Aux
	Analog Ch3/4	SDI 2 Ch3/4	Fiber 2 Ch3/4	Mute
	Analog Ch5/6	SDI 2 Ch5/6	Fiber 2 Ch5/6	
	Analog Ch7/8	SDI 2 Ch7/8	Fiber 2 Ch7/8	
	Analog Ch1/2	SDI 2 Ch9/10	Fiber 2 Ch9/10	
	Analog Ch3/4	SDI 2 Ch11/12	Fiber 2 Ch11/12	
	Analog Ch5/6	SDI 2 Ch13/14	Fiber 2 Ch13/14	
	Analog Ch7/8	SDI 2 Ch15/16	Fiber 2 Ch15/16	

## 2 Embedded Audio Out

This parameter turns embedded audio in the Processor output video to On, Mute, or Off.

On (default)	Turn audio embedding On at the Processor output.
Mute	Embeds but mutes audio on the Processor output.
Off	Turns audio embedding Off at the Processor output.

The FS2 does not support embedded audio output for the following formats:

- 2K1080p 29.97 or 2K1080p 30
- 2K1080p 59.94 or 2K1080p 60 when 3G Config is set to 3 Gb Level B or 1.5 Gb DualLink.

Embedded audio is available for 3 Gb Level A format.

## 3 Audio Follow Video

This parameter determines whether audio settings are remembered for each video input.

Off (default)	Normal operation. Audio settings must be made separately from any video settings; they are not associated automatically.
On	The FS2 remembers the saved audio settings associated with the currently selected video input.

When AFV is Off, you must manually select the audio you want for a selected video input, and that audio source remains selected until you change it. If the audio source has never been selected, the factory default audio source is used.

When AFV is On, the FS2 remembers the saved audio settings associated with the currently selected video input. Whenever a new video input is selected, the corresponding audio settings are recalled. This allows you to set up specific audio settings for the different video inputs (i.e., perhaps the SDI 1 has a specific embedded audio channel mapping while the component video input might always use AES audio input).

Audio Follow Video applies to these parameters:

- 1 Audio Input
- 1.1—1.16 Audio Map
- 1.17—1.24 Audio Map (Stereo)
- 6.0 Audio Delay
- 7.0 Audio Output Levels
- 7.1—7.16 Audio Level Ch (n)
- 8.0 Audio Output Phase
- 8.1—8.16 Audio Phase Ch (n)

*NOTE: Turning Audio Follow Video (AFV) On results in the loss of the above settings. When AFV is turned On, the source-memory settings are written over the current settings. Turning AFV Off again will not restore the original settings, but instead will result in the source memory settings remaining in effect until edited again.*

## 4 Audio Signal Gen

This parameter determines the audio signal output from the FS2's internal test signal generator.

Off (default)	Turn audio test signal output OFF.
400 Hz	Output a standard 400 Hz test signal tone.
1kHz	Output a standard 1 kHz test signal tone.

# Audio Delay Controls

---

## 6.0 Audio Delay (mS)

---

This parameter is available only when the audio input (parameter 1) is set to AES/EBU, Analog, Embedded, or HDMI. The parameter allows you to adjust the audio delay to compensate for video timing (delay/latency). The default is zero delay.

Variable	Adjustment range increments from -16 to +256 mS or -768 samples to +12288 samples. Default=0 (synchronized to video output).
----------	---

If parameter 3 Audio Follow Video is set to On, the Audio Delay selection is independently kept for each separate input. If Audio Follow Video is set to Off, a single Audio Delay value applies, regardless of the video input. (This value is independent of any of the values used in Audio-Follow-Video mode.)

*NOTE: The Delay menu for a particular channel-pair may be hidden if that channel pair is controlled by the Dolby Framer (see 9.0 Dolby Framer Sync).*

## 6.1-16 Audio Delay Ch1-16 (mS)

---

These parameters apply only when the audio input (parameter 1) is set to Channel Map. The parameters allow you to adjust the audio delay to compensate for video timing (delay/latency). The default is zero delay.

Variable	Adjustment range increments from -16 to +256 mS or -768 samples to +12288 samples. Default=0 (synchronized to video output).
----------	---

If parameter 3 Audio Follow Video is set to On, the Audio Delay selection is independently kept for each video input. If Audio Follow Video is set to Off, a single Audio Delay value applies, regardless of the video input. (This value is independent of any of the values used in Audio-Follow-Video mode.)

*NOTE: This menu is not displayed when Dolby Framer Sync is in control of the delay for a channel. While Dolby Framer Sync is enabled, and the Dolby Framer Input is assigned to channels x/y, any values assigned for Audio Delay Ch x or Audio Delay Ch y parameters are ignored, and those menus are hidden.*

## 6.17-24 Audio Delay Ch1/2-15/16 (mS)

---

These parameters apply only when the audio input (parameter 1) is set to Stereo Map. The parameters allow you to adjust the stereo audio delay to compensate for video timing (delay/latency). The default is zero delay.

Variable	Adjustment range increments from -16 to +256 mS or -768 samples to +12288 samples. Default=0 (synchronized to video output).
----------	---

*NOTE: This menu is not displayed when Dolby Framer Sync is in control of the delay for a channel-pair. While Dolby Framer Sync is enabled, and the Dolby Framer Input is assigned to channels x/y, any values assigned for the Audio Delay Ch x/y parameters are ignored, and those menus are hidden.*

If parameter 3 Audio Follow Video is set to On, the Audio Delay selection is independently kept for each video input. If Audio Follow Video is set to Off, a single Audio Delay value applies, regardless of the video input. (This value is independent of any of the values used in Audio-Follow-Video mode.)

# Audio Output Level Controls

---

## 7.0 Audio Out Levels

---

This parameter enables or disables individual audio output level adjustment of the 16 audio output channels. When ADJUST is selected, parameters 7.1 through 7.16 set the output levels for each separate channel.

Unity (default) Adjust	Disable audio output level adjustments and set levels to unity. Enable audio output level adjustments for the 16 audio channels.
---------------------------	---

If parameter 3 Audio Follow Video is set to On, the Audio Output Levels selection is independently kept for each video input. If Audio Follow Video is set to Off, a single Audio Output Levels value applies, regardless of the video input. (This value is independent of any of the values used in Audio-Follow-Video mode.)

## 7.1–7.16 Audio Level Ch1–16

---

These 16 parameters adjust the audio levels of the 16 audio channels  $\pm 18$ dB dB.

Variable	Adjustment of audio level +/-18 dB range in steps of 0.5dB. Default: +0dB
----------	--

# Audio Output Phase Controls

---

## 8.0 Audio Output Phase

---

This parameter enables or disables individual audio phase adjustment of the 16 audio output channels. When Adjust is selected, parameters 8.1 through 8.16 are then used to adjust phase for the 16 channels.

Unity (default) Adjust	Disable audio phase adjustments and set phase to unity. Enable audio phase adjustments for the 16 audio channels
---------------------------	---

If parameter 3 Audio Follow Video is set to On, the Audio Output Phase selection is independently kept for each video input. If Audio Follow Video is set to Off, a single Audio Delay value applies, regardless of the video input. (This value is independent of any of the values used in Audio-Follow-Video mode.)

## 8.1–8.16 Audio Phase Ch1–16

---

These parameters select whether audio phase is normal (same as passed from the input) or inverted on Channels 1–16. This may be useful to correct analog audio signals that are incorrectly wired, placing audio out of phase at input.

Normal (default) Invert	Phase is unaltered as it passes from the input to the output. Phase is inverted as it passes from the input to output.
----------------------------	---

If parameter 3 Audio Follow Video is set to On, then Audio Output Phase selection is independently kept for each video input. If Audio Follow Video is set to Off, then the last setting you made for Audio Output Phase is used.



# Dolby Framer Controls

## 9.0 Dolby Framer Sync

This parameter enables or disables automatic timing correction of the Dolby E signal.

Off (default)	No Dolby E timing synchronization with vertical blanking. Normal Audio Delay parameters are enabled.
On	Dolby E timing is auto-corrected to the minimum delay possible to synchronize with the video blanking interval. Normal Audio Delay parameters for the corresponding Dolby Framer Input channel pair are disabled.
Offset	Dolby E timing is first auto-corrected to a nominal delay while synchronizing with the video blanking interval. Then the delay is further adjusted by the Offset specified in 9.2 Dolby Framer Offset (Frames) and 9.3 Dolby Framer Offset (Samples). Normal Audio Delay parameters for the corresponding Dolby Framer Input channel pair are disabled.

In ON and OFFSET modes, if 1.0 Audio Input is set to Channel Map or Stereo Map, the 6.x Audio Delay menus for that pair are hidden.

If the Dolby Framer cannot lock the audio signal to the video output, an alarm is triggered. (This may happen with non-Dolby E signals, or with Dolby E signals having an incompatible frame rate.)

The Dolby Framer is incompatible with audio Channel Map mode. It works only with Stereo Map or single-source audio inputs capable of carrying Dolby E pairs. If the Dolby Framer is enabled while the input source is set to Channel Map, Analog, HDMI, or Dolby Decoder, an alarm will result, and the Dolby Framer status will be shown as "Conflict". Also note that Dolby Decoder is not a valid Framer source, since the Dolby is already decoded into PCM audio by the time it reaches the audio processor.

Dolby Framer status is available on the front panel Dolby Framer status menu or the Status page of the web UI.

## 9.1 Dolby Framer Input

This parameter is visible only if 9.0 Dolby Framer Sync is set to On or Offset; the parameter is hidden when 9.0 is set to Off.

The Dolby Framer Input can sync incoming Dolby E bit streams to the local reference so they can maintain A/V sync when recorded onto VTRs or servers or when passing through downstream facilities. You can set which pair of channels contains the Dolby E stream to output synchronized with the reference. The Dolby Framer Input feature only works with Dolby E inputs.

Dolby input pair	Ch 1/2, 3/4, 5/6, 7/8, 9/10, 11/12, 13/14, 15/16. Ch 1/2 is default
------------------	--

## 9.2 Dolby Framer Offset (Frames)

This parameter is visible only if 9.0 Dolby Framer Sync is set to Offset; the parameter is hidden when 9.0 is set to Off or On. The parameter adjusts the audio delay in frames, providing a coarse timing adjustment.

Variable (frames)	Sets the delay of the Dolby E audio stream relative to the video frame. The minimum is 0 frames and maximum is +6 frames.
-------------------	---

### 9.3 Dolby Framer Offset (Samples)

---

This parameter is visible only if 9.0 Dolby Framer Sync is set to Offset; the parameter is hidden when 9.0 is set to Off or On. The parameter adjusts the audio delay in samples, providing a fine timing adjustment.

Variable	Sets the delay of the Dolby E audio stream relative to the video frame. The minimum is -768 samples and maximum is +768 samples.
----------	--

# Chapter 5 – Browser Remote Control

---

## Remote FS2 Control Via a Web Browser

---

The FS2 web interface consists of a built-in optimized web server that provides control via a web browser running on a network-attached computer. The FS2 browser screens are presented and described on the following pages, organized as they appear in the browser. The description tables list the parameter menu numbers in parentheses so you can quickly relate screens to front panel menus.

### Supported Web Browsers

---

- Chrome (all platforms)
- Firefox (all platforms)
- Safari (OSX, Mobile)

Other browsers are likely to work but are not guaranteed.

### Supported RJ45 Ethernet Network Connections

---

- Closed local area network (LAN)
- Straight computer-to-FS2 cable connection
- Broadband wide area network (WAN) with the firewall opened for the FS2 (not recommended since anyone on the internet can then access the FS2)

Internally the FS2 senses and adapts to either a “straight-through” CAT 5 Ethernet cable or null-modem (crossover) cable using standard RJ45 connectors. No setup or strapping is needed to adapt to the cable.

### Browser Connection to FS2

---

For browser access, enter the FS2 IP address in the browser’s address field.

By default, the FS2 is set to automatically connect to your network’s DHCP server to get an IP address and other network configuration data. You will find the IP address in CONFIG Menu Group parameter 2.2 as follows:

1. Press the CONFIG button on the FS2 front panel.
2. Turn the SELECT knob until you reach parameter 2.2 IP Address.
3. Enter the IP address shown in 2.2 in the browser address field.

When the browser successfully connects to the FS2, the main Status screen shown on the next page is displayed. If the browser fails to connect, make sure CONFIG settings 2.1 through 2.4 (IP, subnet, and gateway addressing) match the network setup of the browser host. You can either make the computer match the FS2, or make the FS2 match your computer.

## General Web Browser Screen Description

---

The main Status screen appears below. All FS2 screens have common elements:

### Menu

---

On the left of each screen is a navigational list of the available FS2 screens. Click any of these items to jump to that screen.

## Alarms

The lower left side of the screen shows alarms that alert you to possible problem conditions, such as disconnected or failed power supplies and video format incompatibilities.

## Status and Menu Display

In the center of each screen you'll find the main display showing the status and menu selections for the screen you are viewing. The content of FS2 web screens closely mirrors the parameter menus displayed on the front panel; if you hover the cursor over any parameter, the equivalent front panel parameter number is displayed.


## Connection

The right side of the screen lists FS2 system details, including system serial number, installed software version, and connection status. This information is useful if you ever have to call AJA Technical Support for help.

## Network

The right side of the screen lists systems on the network. If you right-click any FS2 system in the list, the ID LEDs on the unit light to identify it. Another way to identify systems is to notice which FS2 system's EXT front panel LED blinks when you change any setting from a remote control device, such as the web browser.

Figure 12. FS2 Web Interface, Main Status Screen

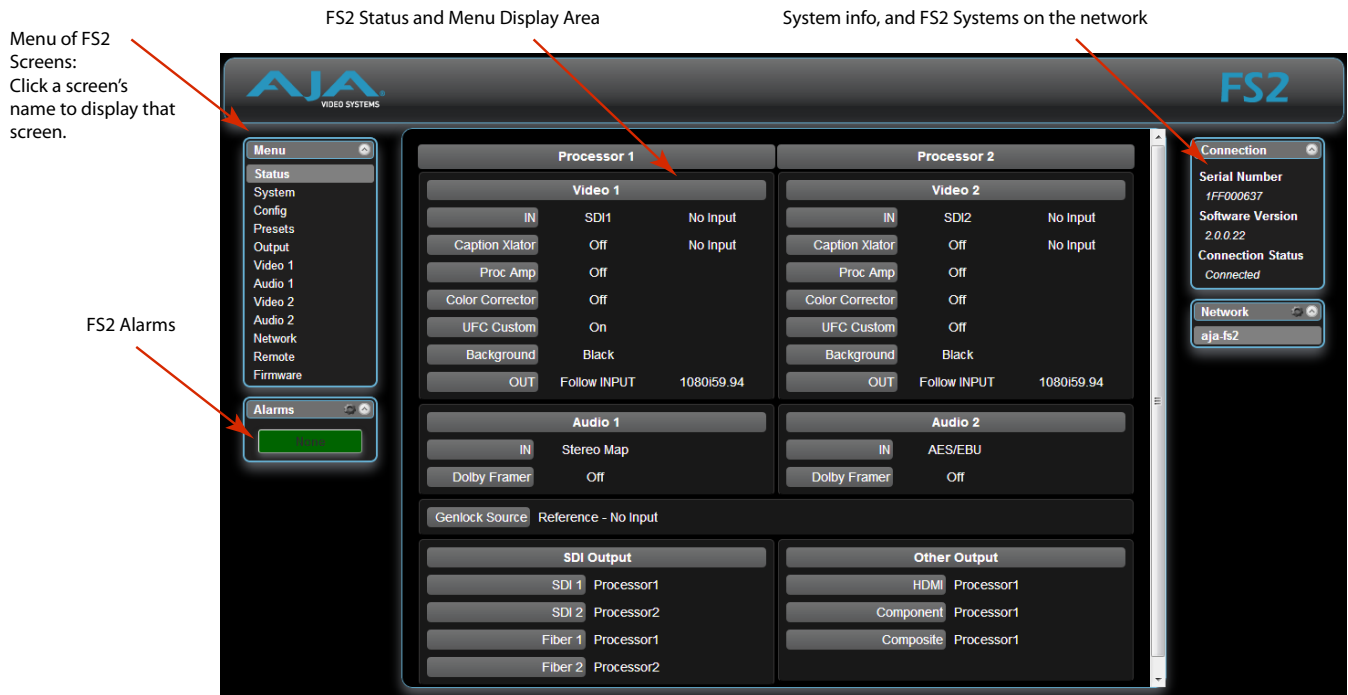

## Controlling Multiple FS2s

From any screen, you can see at-a-glance all of the FS2 devices present on the same local LAN as well as the current FS2 you are controlling. Clicking on any of the listed systems will bring up the Status screen of that FS2.

*NOTE: The FS2 you control may be running a different software version, so screens may look different. It's a good idea to have all your FS2 devices running the most current software and the same version. Also, if the Default Gateway (parameter 2.4) is not configured properly, other FS2s will not be visible. If the display shows No FS2's found, check the gateway setting.*

## Resetting Values To Factory Settings

---

FS2 web browser screens feature many user controls that can be reset to factory values by simply “right-clicking” on the parameter label. When you right-click, the browser displays a Reset to Factory message that will cause the parameter to be reset.

*NOTE: This reset procedure only works with computers that allow right-clicking. Some computers may not permit this operation.*

You can perform a global reset to factory values of all System, Video 1/2, Audio 1/2, and Output parameters (the same set of parameters acted on by a Preset Recall).

To perform a global reset:

1. Go to the Presets screen.
2. Click on the Recall button in the Factory Preset row.

User preferences, network settings, and existing Presets are not affected by recalling the Factory Preset.

Clicking on the down arrow next to each parameter displays a drop-down list of available selections.

## Drop Down Parameter Operation

---

Most FS2 parameters available on the browser are selected from a drop-down list. The currently active parameter is displayed. Click on the down arrow symbol next to the parameter to display the list and select an alternative value. The FS2 will immediately operate with the new setting.

## Slider Operation

---


Some screens contain slider controls for setting values. To set a value, you can click on a slider to select it and then use the mouse to drag the slider to the position you desire. For fine tuning, while the slider is selected (highlighted by a blue border), use the keyboard left and right arrow keys to change the value one unit at a time. After setting a slider's position, click on the page's background area (blue highlight turns off) to ensure the change is confirmed and saved.

## Video Format Display

---

When displaying video format status, the following convention differentiates between SMPTE video formats (broadcast) and VESA formats (non-broadcast formats originating from a computer DVI signal). The SMPTE formats are shown as height (in lines), scan-format (progressive or interlaced), and frame-rate, such as 1080i59, for example. the VESA formats are shown as a size only, with an x in the middle, such as 640x480, for example.

# Network Pane and Network Configuration Screen

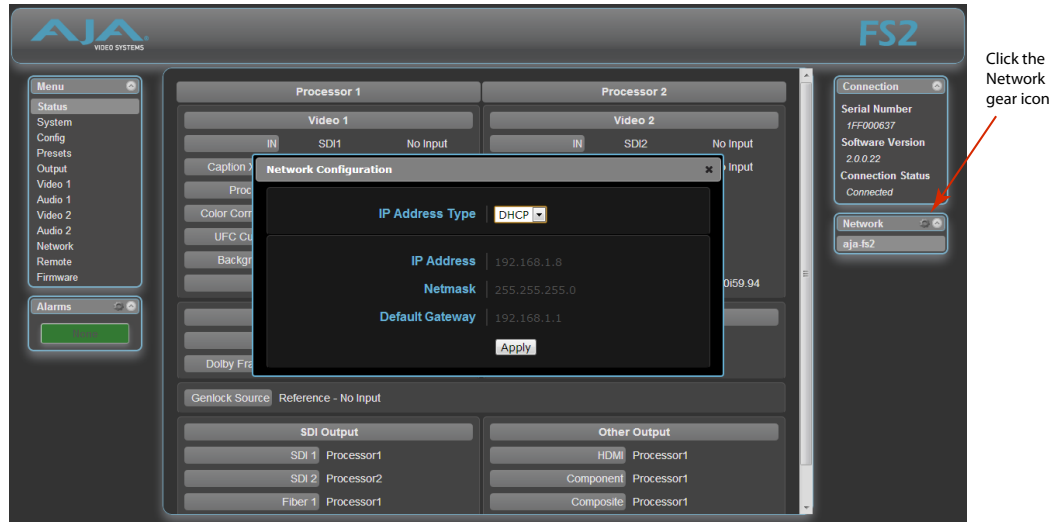

The Network pane on the right side of any screen lists the FS2 systems that appear on the network. This pane includes three additional controls:

- Hover the cursor over any system name to see its IP address.
- Right-click any system and select Identify to light the system ID LEDs.
- Click the gear-shaped icon in the Network pane (or select Network from the Menu list on the left side of the screen) to open the Network Configuration screen listing FS2 network settings.

The Network Configuration screen allows you to view and change your FS2's network settings and then click Apply to activate them.

See "[Networking](#)" on page 26 for detailed setup instructions for connecting the FS2 to a network. Consult your network administrator about how to configure network settings.

## IP Address Type

IP Address Type determines the type of TCP/IP network configuration used by the FS2. DHCP enables the FS2 to connect to the network DHCP server, which assigns the IP Address, Netmask, and Gateway automatically. Static lets you set these parameters manually.

**NOTE:** If the IP Address Type is DHCP, the IP Address, Netmask, and Default Gateway are gray, indicating they are set automatically and cannot be changed unless IP Address Type is first set to Static. Changes are saved and activated upon confirmation using the Apply button.

DHCP (default)	Select automatic IP address assignment from the LAN DHCP server. If the FS2 cannot find a DHCP server, it fails over to the static IP address.
Static Addr	Assign a static IP address manually (using parameters 2.2, 2.3, and 2.4). The factory default static IP address: 192.168.0.2

## IP Address

---

IP Address determines the static IP address used by the FS2 for TCP/IP networking. (Networking is discussed in Chapter 3, Network Connection.) Consult your network administrator about how to set this value.

Variable	<p>If <i>IP Address Type</i> is set to <i>DHCP</i>, the IP address is set automatically by the network DHCP server and cannot be entered here.</p> <p>If <i>IP Address Type</i> is set to <i>Static</i>, enter an IP address compatible with your LAN here. Also enter a netmask and default gateway address in the following two parameters. Click <i>Apply</i> when you are ready to apply all three entries to change the FS2's network addressing.</p> <p>If <i>IP Address Type</i> is set to <i>DHCP</i> and there is a DHCP failure, the IP address is set to the static IP address. The default static IP address is 192.168.0.2</p>
----------	---

## Netmask

---

Netmask determines the subnet mask used by the FS2 for TCP/IP networking.

Variable	<p>Enter a subnet mask compatible with your LAN. This is only needed for Static IP configurations. The factory default <i>Subnet Mask</i> is 255.255.255.0</p> <p>If <i>IP Address Type</i> is set to DHCP, the Subnet Mask is set by the DHCP server and cannot be changed by the user.</p>
----------	--

## Default Gateway


---

Default Gateway determines the gateway or router used on your LAN for TCP/IP networking.

Without a properly configured default gateway (whether you have a router/gateway or not), the FS2 will be unable to see other FS2s on the network, although you may still be able to control this FS2 via a web browser. Also, without a proper gateway defined, the discovery feature "Available FS2s—Click to Refresh" on the Network web page will not work correctly and list other FS2s on the network.

Variable	<p>Enter a default gateway or router address. This is only needed for Static IP configurations. The factory <i>Default Gateway</i> is 192.168.0.1.</p> <p>If <i>IP Address Type</i> is set to DHCP, the Default Gateway is set by the DHCP server and cannot be changed by the user.</p>
----------	--

# Alarm Configuration Screen

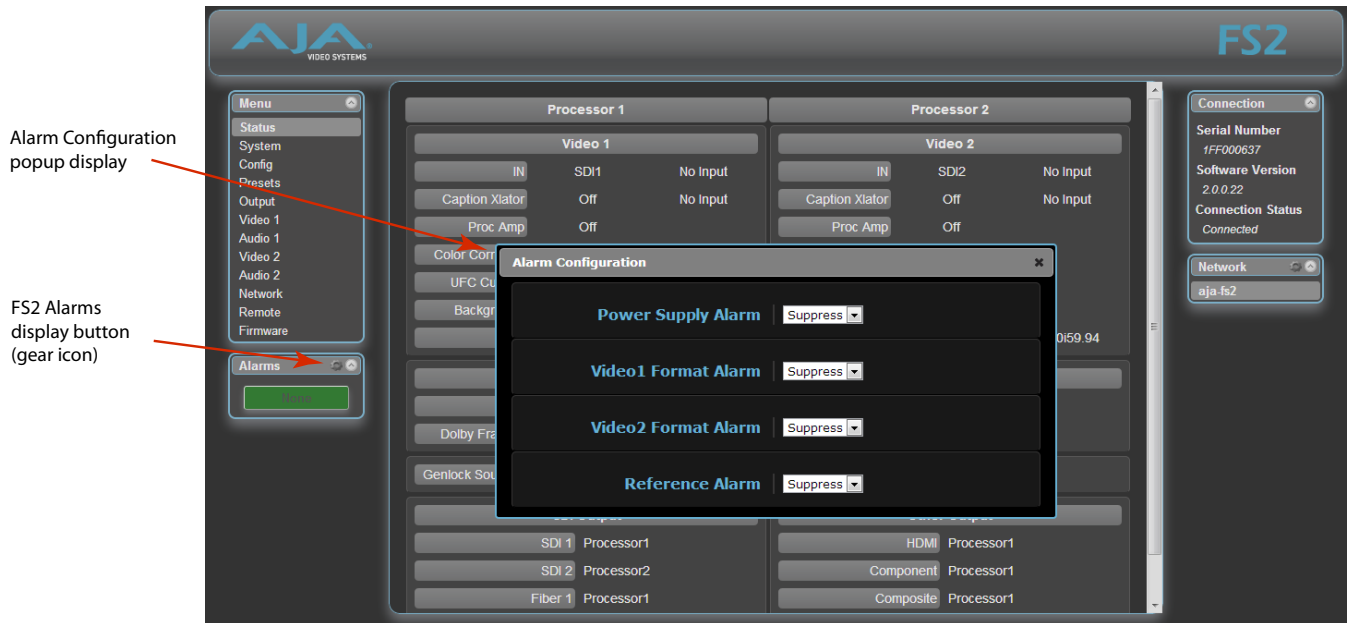

You can pop open the Alarm Configuration display at any time and on any screen by clicking the display button in the upper right corner of the Alarms panel.


To close the window, press the ESC key, or click the X in the upper right corner.

The Alarm Configuration display provides control over these alarm settings:

- Power Supply Alarm (see ["5 Power Supply Alarm" on page 46](#))
- Video 1 and Video 2 Format Alarm (see ["6.1 Vid1 Format Alarm" on page 47](#))
- Reference Alarm (see ["7 Reference Alarm" on page 47](#))




# Status Screen

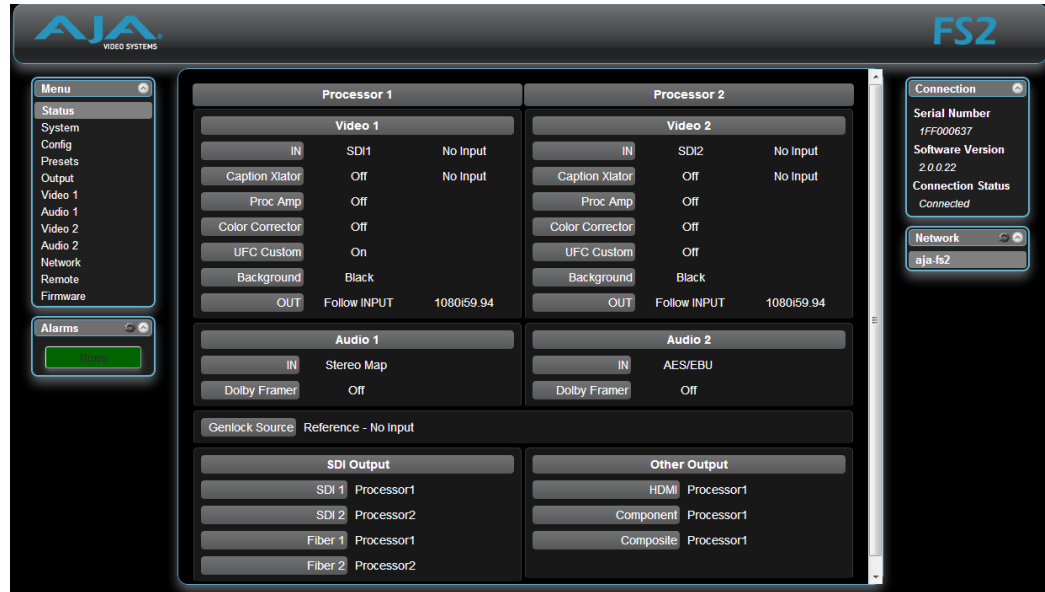

The Status screen displays overall FS2 operational status. You can right-click most values to change them, allowing you to edit many parameters in one place. Parameters with format incompatibilities or other alarms are highlighted in red.

Processor 1 Video 1	IN Captioning Proc Amp Color Corrector UFC Custom Background OUT	Shows the input source and format for Video Processor 1. Shows the caption selection and caption signal presence. Shows whether the Proc Amp is On or Off. Shows whether the Color Corrector (RGB) is On or Off. Shows whether Custom conversion, AFD, and ROI are On or Off. Shows the source and format of Background video. Shows the output video selection and format for Video Proc 1.
Processor 1 Audio 1	IN Dolby Framer	Shows the audio input feeding Audio Processor 1. Shows if Dolby E Framer is On and locked to video.
Processor 2 Video 2	IN Captioning Proc Amp Color Corrector UFC Custom Background OUT	Shows the input source and format for Video Processor 2. Shows the captioning selection and signal presence. Shows whether the Proc Amp is On or Off. Shows whether the Color Corrector (RGB) is On or Off. Shows whether Custom conversion, AFD, and ROI are On or Off. Shows the source and format of Background video. Shows the output video selection and format for Video Proc 2.
Processor 2 Audio 2	IN Dolby Framer	Shows the audio input feeding Audio Processor 2. Shows if Dolby E Framer is On and locked to video.
Genlock Source	Reference	Shows the input providing the genlock reference.
SDI Output	SDI 1 SDI 2 Fiber 1 Fiber 2	Shows the source of the SDI 1 output. Shows the source of the SDI 2 output. Shows the source of the Fiber 1 output. Shows the source of the Fiber 2 output.
Other Output	HDMI Component Composite	Shows the source of the HDMI output. Shows the source of the Component video output. Shows the source of the Composite video output.

# System Screen

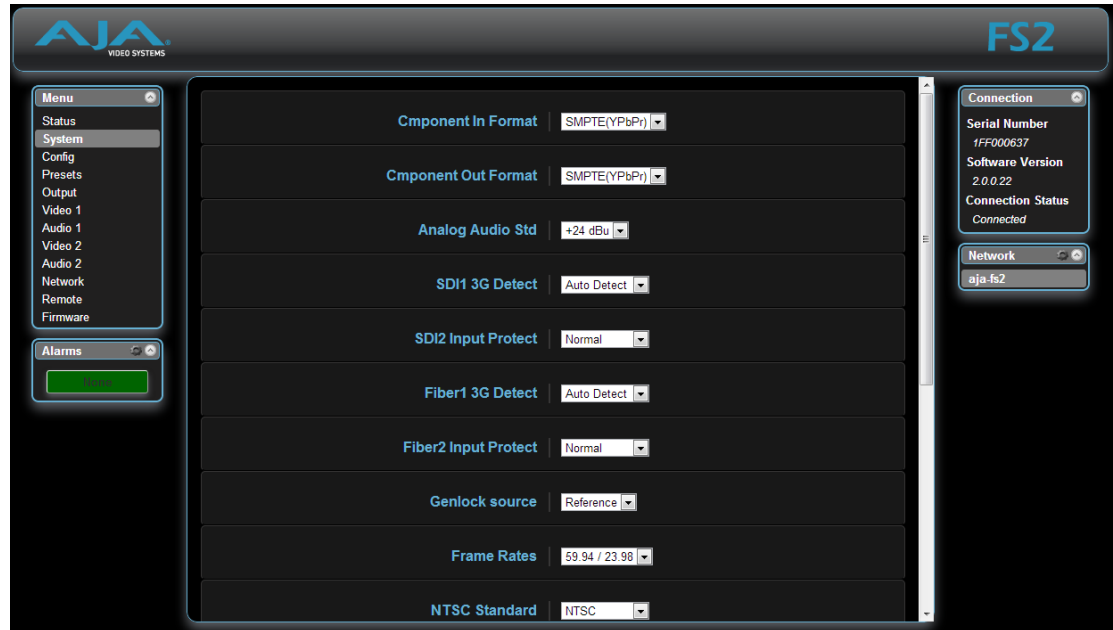


The SYSTEM web interface screen includes parameters for setting up various FS2 system related features (video formats, audio level standards, etc.).

The System screen parameters are identical to those available on the FS2 front panel. These include:

- ["1 Component In Format" on page 49](#)
- ["2 Component Out Format" on page 50](#)
- ["3 Analog Audio Std" on page 50](#)
- ["4 SDI1 3G Detect" on page 50](#)
- ["5 SDI2 Input Protect" on page 51](#)
- ["6 Fiber1 3G Detect" on page 51](#)
- ["7 Fiber2 Input Protect" on page 52](#)
- ["8 Genlock Source" on page 52](#)
- ["9 Frame Rates" on page 52](#)
- ["10 NTSC Standard" on page 52](#)
- ["11 Composite Downconv" on page 53](#)
- ["12 HDMI RGB Range" on page 53](#)
- ["14.0 AES/EBU SRC Mode" on page 53](#)
- ["14.1–14.8 AES/EBU SRC" on page 54](#)
- ["15 Dolby Decoder Input" on page 54](#)
- ["16 Dolby Decoder Mode" on page 55](#)
- ["17 Dolby Decoder Aux Out" on page 55](#)
- ["18 Dolby Decoder Aux Mode" on page 55](#)

# Config Screen

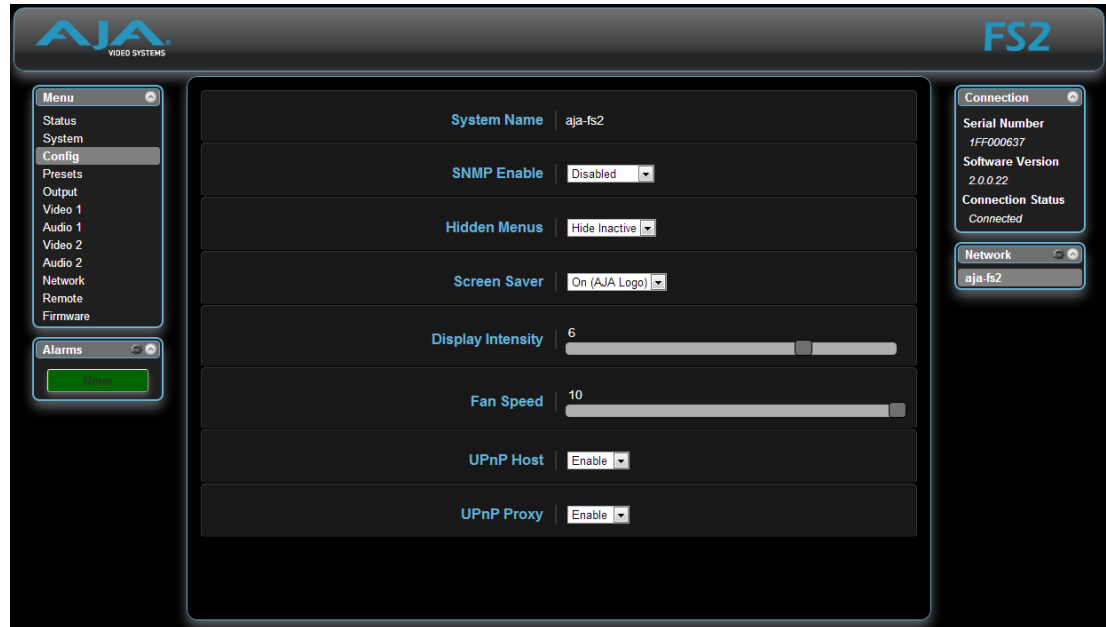

The Config screen includes functions to name the FS2, configure SNMP, hide or show unused menus, and change the front panel display brightness and FS2 fan speed, and configure UPnP.

## System Name

The System Name parameter sets the name of the FS2 system. To change the System Name, click on and drag the cursor across the displayed name, and type in a new name.

Variable	Highlight the existing name and type in a new name, up to 20 characters. Allowed characters are A-Z, a-z, numerals, hyphen, and period.
----------	---

## SNMP Parameters

The following parameters are used to setup the FS2 SNMP (Small Network Management Protocol) feature.

- SNMP Enable
- SNMP Trap Dest 1
- SNMP Trap Port 1
- SNMP Trap Dest 2
- SNMP Trap Port 2

In addition, the following alarms may affect SNMP messages:

- Power Supply Alarm
- Video1 Format Alarm
- Video 2 Format Alarm
- Reference Alarm

Refer to "[Chapter 6 SNMP](#)" on page 100 for a description of SNMP and how the FS2 supports it.

## Hidden Menu

---

This selection lets you choose whether to hide or show inactive menus.

Hide Inactive (default) Show All	Hides menus that are not in use. Shows all menus, even those that are not in use.
-------------------------------------	--

## Display Intensity

---

Display Intensity determines alphanumeric display and front panel LED brightness.

Variable	Use the slider to dim or brighten the alphanumeric display and activity indicator LEDs in steps from 1 (dim) to 8 (brightest). Default is 6
----------	--

## UPnP Host

---

UPnP Host enables the FS2 to be discovered by a Windows network.

Enable (default) Disable	Enables the FS2 to be discovered by a Windows network. Disables Windows network discovery of the FS2.
-----------------------------	--

When this parameter is enabled, you can view the FS2 on a Windows Network by clicking these selections in Windows 7: Start > Computer > Network (in left pane). Any FS2s on the network will be listed under Other Devices below Computers and Media Devices. If your system does not have network discovery enabled, you may need to enable it following the Windows help instructions to make network devices visible in the Windows Network window.


## UPnP Proxy

---

UPnP Proxy enables the FS2 to serve as a proxy for other AJA devices, allowing them to be discovered on a Windows network through the FS2. When enabled, the FS2 acts as a proxy for all the AJA devices that it is able to connect to that have not already been discovered on the network. The devices will be listed in the FS2 Network window. Once the devices appear on the network, they can connect directly to other devices and computers without involving the FS2.

Enable (default) Disable	Enables the FS2 to connect other AJA devices to the network. Disables the FS2 from serving as a proxy for AJA devices.
-----------------------------	---

# Presets Screen

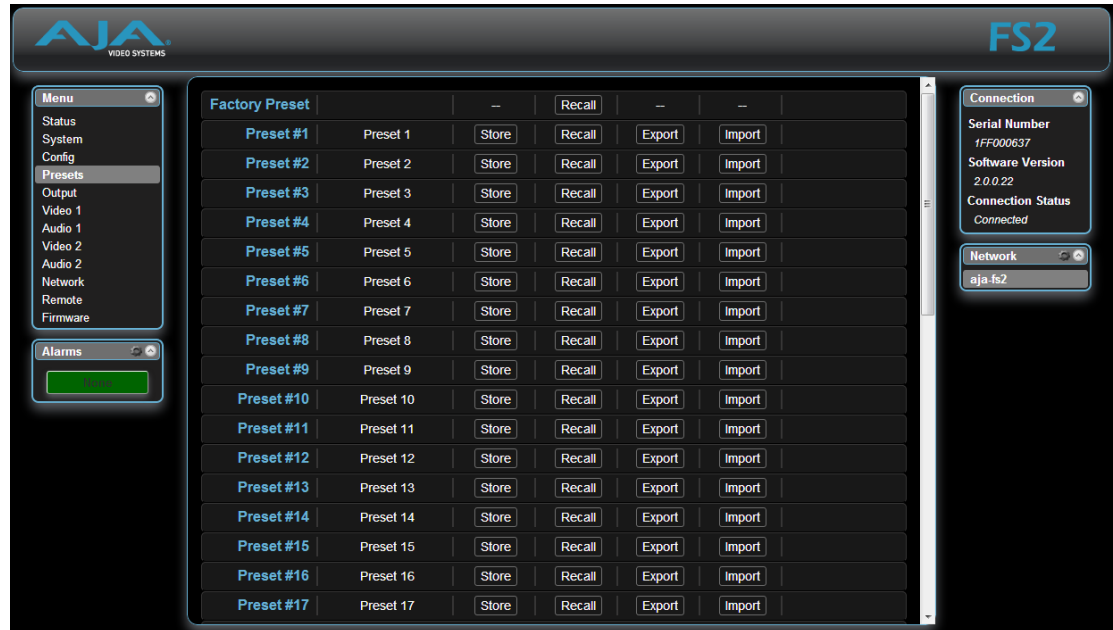

The Presets screen allows you to save FS2 Preset Configurations into 40 separate memory registers and recall the presets whenever needed. This screen also includes Export and Import functions that allow exporting one or all FS2 presets to your computer as files and importing exported preset files from your computer. A displayed message indicates successful or failed saves, recalls, exports, and imports.

## Presets Screen Controls

### Factory Preset

Factory Preset recalls all editable video and audio parameters to their factory default settings. Individual presets, user preferences, and Network settings, such as the IP Address, are not affected.

### Recall

The Recall buttons recall saved FS2 preset configurations.



**Caution!** When you recall a Preset Configuration, the recalled preset immediately replaces the system's existing configuration. All previous settings are lost unless you have previously stored them in another preset configuration or an exported file.

### Store

The Store buttons let you save the current FS2 configuration into the preset register with the associated name and number. A preset is a set of all System, Video, Audio, and Output parameters as they were set at the time the preset was stored. Only editable parameters are saved in the presets. Non-editable parameters are not saved.

To change a preset name, click in the name's text field and type a new name.

## Export

---

The Export buttons save the associated preset contents to a file on your computer. The file gets exported to the default download location specified in your browser options. The file name is the same as the preset name with the suffix.preset. If you export multiple files for the same preset, a number gets appended to ensure a unique file name. The file size is small, usually less than 100 kilobytes.

## Import

---

The Import buttons let you browse for and import a preset file on your computer into the preset register associated with the selected button. A dialog box warns you that the operation will overwrite the current preset contents with the file contents.

## Export Presets 1–40 (All)

---

Export All lets you save the contents of all presets to a file on your computer. The file gets exported to the default download location specified in your browser options with the name all.preset. If you export multiple files, a number gets appended to ensure a unique file name.

## Import Presets 1–40 (All)

---


Import All lets you browse for and import a previously exported all.preset file from your computer. A dialog box warns you that the operation will overwrite all 40 current preset contents with the contents stored in the file.

## Interaction of Presets and GPIs

---

Triggering presets using GPI inputs offers considerable power but also requires some care to avoid unexpected results. If you plan to trigger presets using GPIs, please see the information about the ["Interaction of Presets and GPIs" on page 49](#).

# Output Screen

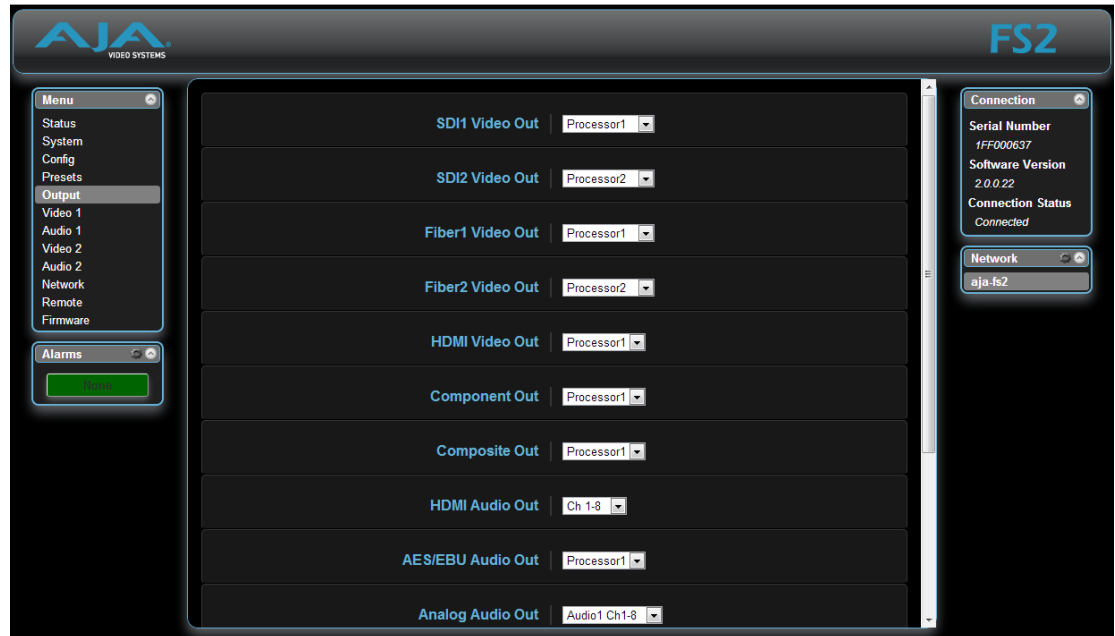


The Output screen selects the video and audio outputs that are routed to the FS2 rear panel.

The parameters available on the Output browser screen are identical to the front panel display menus. Complete descriptions of these parameters are accessible using the following cross references:

- ["1.1 SDI1 Video Out" on page 56](#)
- ["1.2 SDI2 Video Out" on page 56](#)
- ["2.1 Fiber1 Video Out" on page 56](#)
- ["2.2 Fiber2 Video Out" on page 56](#)
- ["3 HDMI Video Out" on page 57](#)
- ["4 Component Out" on page 57](#)
- ["5 Composite Out" on page 57](#)
- ["6 HDMI Audio Out" on page 57](#)
- ["7 Fiber2 Input Protect" on page 52](#)
- ["8 Analog Audio Out" on page 57](#)
- ["9.1 SDI1 3G Config" on page 58](#)
- ["9.2 SDI2 3G Config" on page 58](#)
- ["10.1 Fiber1 3G Config" on page 58](#)
- ["10.2 Fiber2 3G Config" on page 58](#)

# Video 1 & 2 Screens

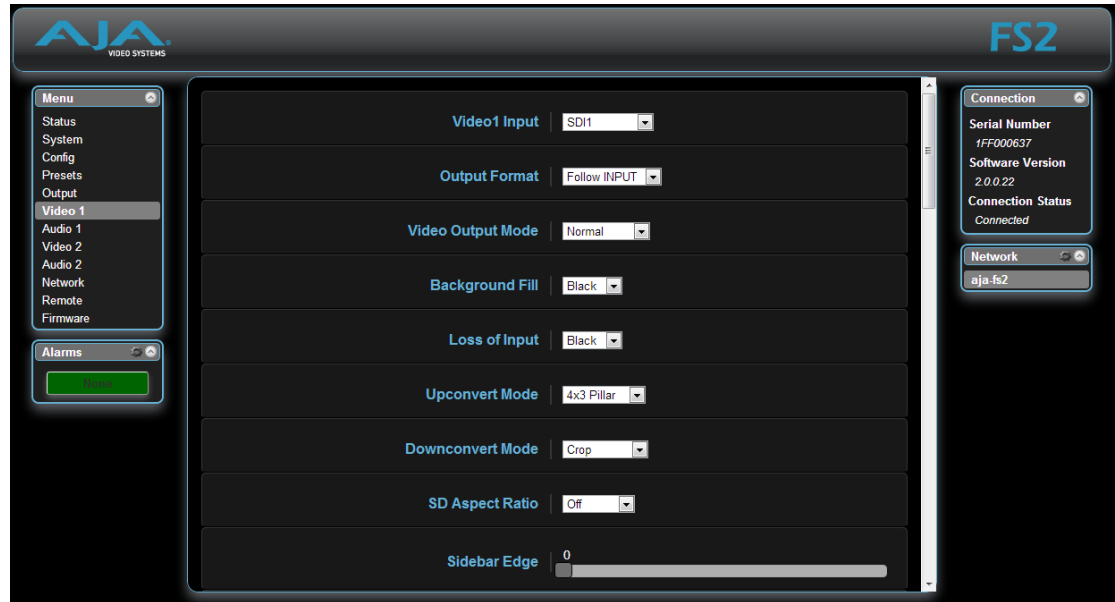


The Video 1 and 2 screens select the video and audio outputs that are routed to the FS2 rear panel, and controls the FS2's video signal processing.

The parameters available on the Video 1 and 2 browser screens are identical to the front panel display menus. Complete descriptions of these parameters are accessible using the following cross references:

- ["1 Video Input" on page 59](#)
- ["2 Output Format" on page 59](#)
- ["3 Video Output Mode" on page 60](#)
- ["4 Background Fill" on page 60](#)
- ["5 Loss of Input" on page 60](#)
- ["6 Upconvert Mode" on page 61](#)
- ["7 Downconvert Mode" on page 61](#)
- ["8 SD Aspect Ratio Convert" on page 63](#)
- ["9 Sidebar Edge" on page 65](#)
- Matte Luma, Chroma, and Hue (see ["Matte of Background Fill" on page 65](#))
- ["Proc Amp Controls \(YUV\)" on page 65](#)
- ["Color Corrector \(RGB\)" on page 66](#)
- Custom Size/Position (see ["Custom Conversion Settings" on page 67](#))
- ["Region of Interest \(ROI\)" on page 69](#)
- Output Timing and Extra Frame Delay (see ["Timing and Delay" on page 70](#))
- ["AFD" on page 71](#)
- ["18 Caption Xlator" on page 73](#)
- ["Input Scan and PsF" on page 74](#)
- ["20 SD Line 21 Blanking" on page 74](#)
- ["21 Test Pattern Video" on page 75](#)
- ["22 Freeze Output" on page 75](#)



# Audio 1 and 2 Screens

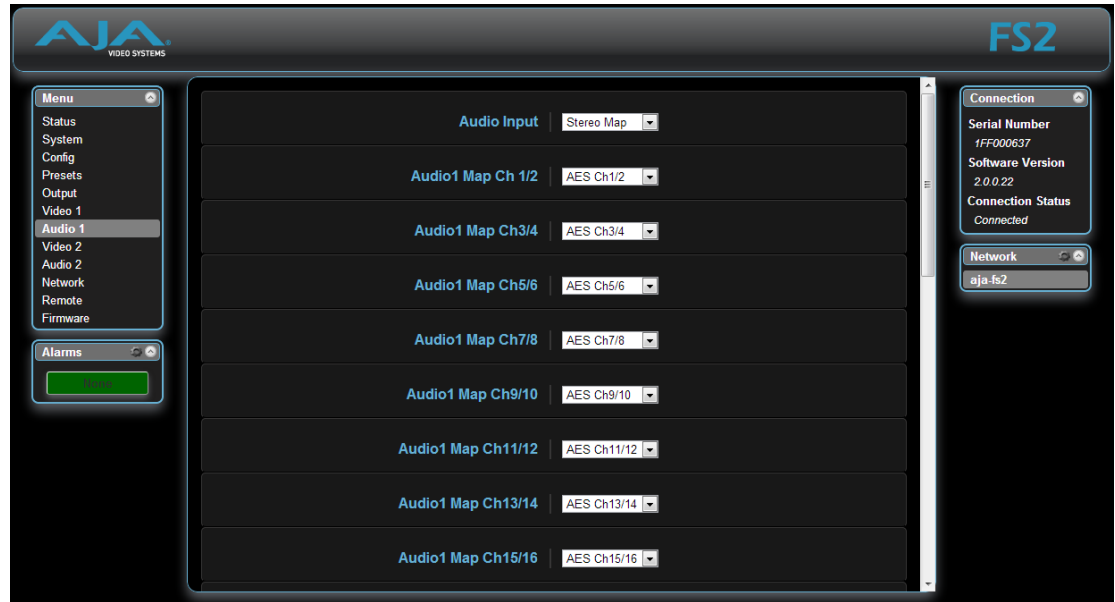


The Audio 1 and Audio 2 browser screens display the audio control selections for the audio inputs and outputs, for control of the FS2's audio routing and signal processing.

The parameters available on the Audio 1 and 2 browser screens are identical to the front panel display menus. Complete descriptions of these parameters are accessible using the following cross references:

- ["1.0 Audio Input" on page 76](#)
- ["1.1–1.16 Audio Map Ch1–16" on page 77](#)
- ["1.17–1.24 Audio Map Ch 1/2–15/16" on page 77](#)
- ["2 Embedded Audio Out" on page 78](#)
- ["3 Audio Follow Video" on page 78](#)
- ["4 Audio Signal Gen" on page 78](#)
- ["Audio Delay Controls" on page 79](#)
- ["Audio Output Level Controls" on page 80](#)
- ["Audio Output Phase Controls" on page 80](#)
- ["Dolby Framer Controls" on page 81](#)

# Remote Screen

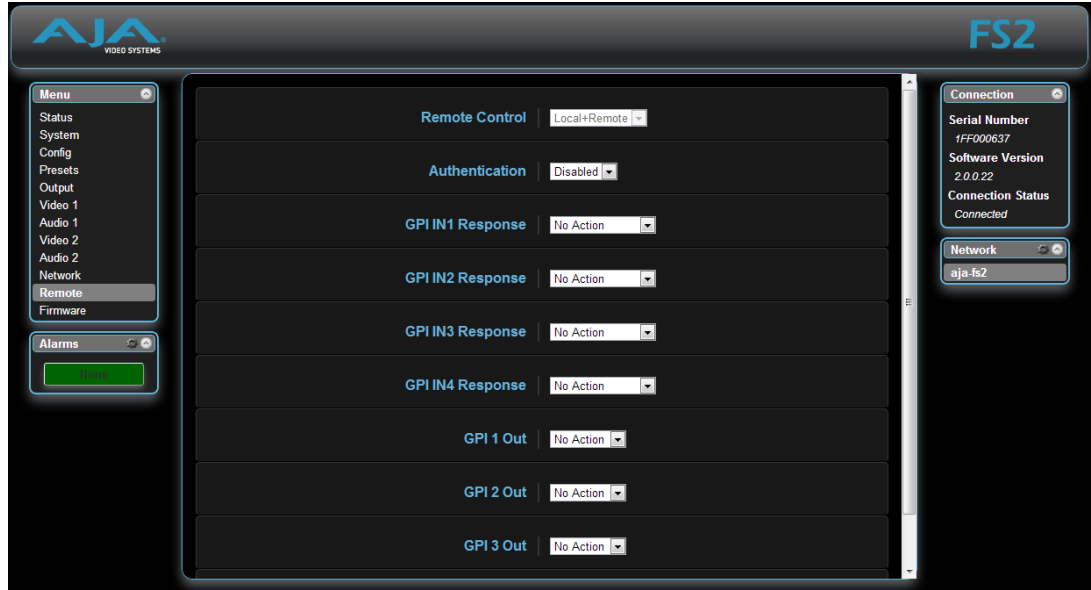


The REMOTE screen contains parameters that affect how the FS2 is controlled. Control options include the front panel, a remote computer running a browser, and GPI inputs and outputs.

*NOTE: The Remote Menu Group parameters available on the front panel interact with the browser parameters available on an attached computer, and vice versa. For example, the Remote Control parameter can only be changed from the front panel, and when set to Local Only will deactivate all browser remote control parameters.*

See "[REMOTE Menu Group](#)" on page 42 for detailed information about FS2 remote control options.

# Firmware Screen

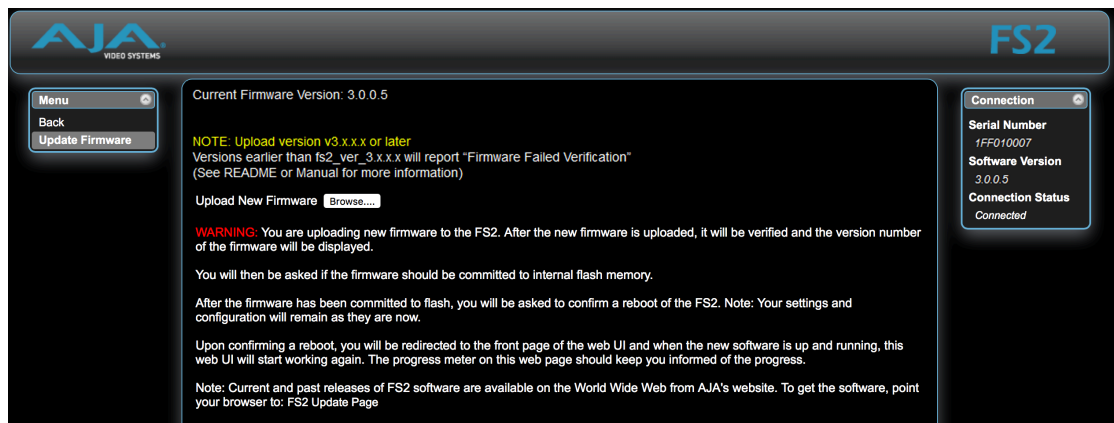

The Update Firmware screen allows you to download and install a firmware update from AJA.

*IMPORTANT: FS2 hardware requires different firmware, depending on serial number. See [Table 4 on page 31](#) for compatible firmware versions. Attempts to install the incorrect version will post a Firmware Failed Verification message on the FS2 webpage.*

First visit the AJA website (aja.com) to locate and download the updated software. The following page provides FS2 support information and will include links to locations where you can download updates:

<https://www.aja.com/en/products/fs2/#support>

After downloading the software update to your local drive, use the Browse button shown below to locate the local software copy. Follow the prompts to load the new firmware into the FS2. See "*Software Update Installation*" on page 30 for more information.

# Chapter 6 – SNMP

---

## FS2 Simple Network Management Protocol

---

SNMP is defined as a “simple network management protocol” and was specified as a component of the internet protocol suite by the Internet Engineering Task Force (IETF). The FS2 can act as a network element that issues SNMP trap messages signaling a detected alarm condition or other system condition. A device’s trap messages are defined in an MIB (Management Information Base) file. The trap messages are sent to a server-based external NMS destination. For example, the FS2 could send a trap message if one of its redundant power supplies becomes unplugged. A client software agent that communicates with the NMS might then get a message telling the operator what has happened.

The FS2 must be configured for SNMP messaging. By default SNMP is disabled on the FS2. Besides activating SNMP, trap destinations must also be defined with fixed IP addresses.

When SNMP is enabled, one or more of these alarms may be sent by the FS2 to the client network management system (NMS) as a trap message:

- fs2PowerSupplyAlarm (PS1 Alarm)
- fs2 PowerSupply2Alarm (PS2 Alarm)
- fs2ReferenceAlarm (Ref Video Alarm)
- fs2Vid1ReferenceAlarm (Vid1 Ref Video Alarm)
- fs2Vid2ReferenceAlarm (Vid2 Ref Video Alarm)
- fs2Vid1FormatAlarm (Vid1 Format Alarm)
- fs2Vid1BackgroundAlarm (Vid1 Background Format Alarm)
- fs2Vid2FormatAlarm (Vid2 Format Alarm)
- fs2Vid2BackgroundAlarm (Vid2 Background Format Alarm)
- fs2OverTemperatureAlarm (FS2 Over Temperature Alarm)

## SNMP Configuration

---

FS2 SNMP configuration can be accomplished using the front panel or with the web browser computer interface (if Remote Control is enabled).

### Front Panel Screens

---

The FS2 front panel screens for SNMP are accessible through the CONFIG button. The direct SNMP configuration screens are:

- 4.0 SNMP Enable
- 4.1 SNMP Trap Destination 1
- 4.2 SNMP Trap Port 1
- 4.3 SNMP Trap Destination 2
- 4.4 SNMP Trap Port 2

These SNMP direct configuration parameters are described later in this chapter.

In addition, the following front panel CONFIG screens can affect SNMP alarm messaging:

- "5 Power Supply Alarm" on page 46
- "6.1 Vid1 Format Alarm" on page 47
- "7 Reference Alarm" on page 47

## Front Panel Octet Value Entry Procedure


Set the octets (numbers between periods) values as follows:

1. Push ADJUST momentarily to enter edit mode.
2. Turn SELECT to select the octet you want to edit, indicated by blinking.
3. Turn ADJUST to enter the new value.
  - If you need to revert to the previous setting (undo changes), push SELECT.
4. Push ADJUST momentarily to save and activate the new setting.
  - If you want to revert to the default value, hold down ADJUST for 4 seconds.

## Web Browser


SNMP direct configuration settings are available on the Config screen of the web browser interface.

Figure 13. Web Browser Config Screen SNMP Parameters

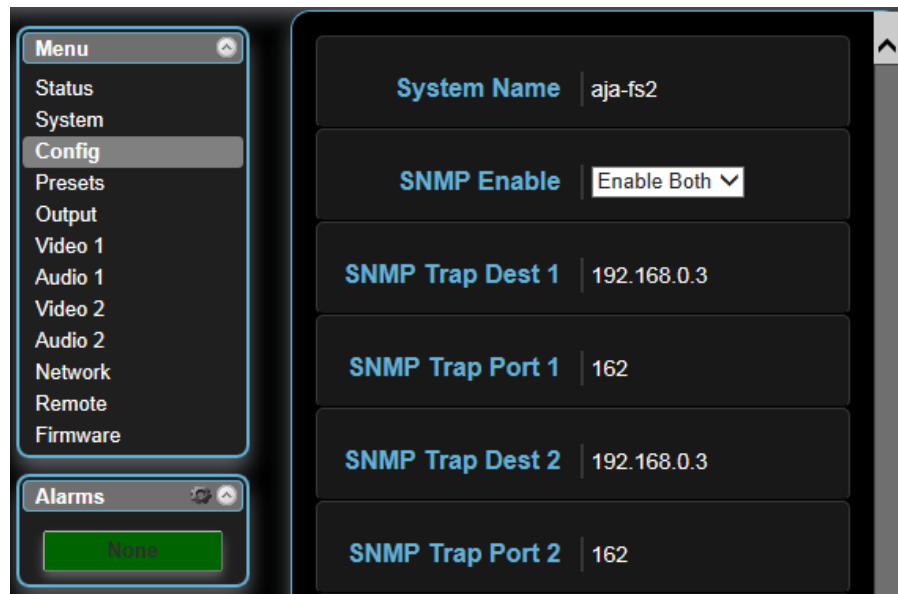

Clicking on the Alarms gear icon opens a window that permits setting alarm messaging.

Figure 14. Web Browser Alarm Configuration Window

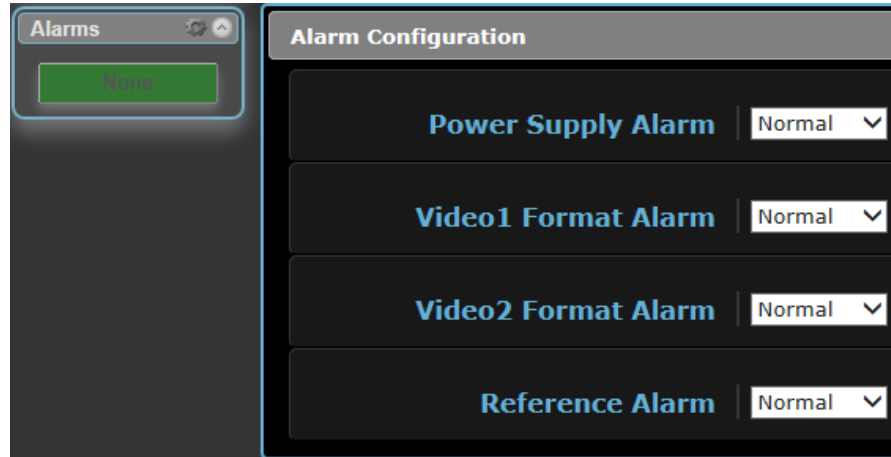

## SNMP Configuration Parameters

### 4.0 SNMP Enable

The SNMP Enable parameter turns ON and OFF all SNMP messaging between the FS2 and an external client.

Disable (default)	When set to <i>Disable</i> , the FS2 will not issue SNMP trap messages.
Enable 1	When set to <i>Enable 1</i> , the FS2 issues SNMP trap messages to Trap Destination 1 (parameter 4.1) and as defined in the MIB.
Enable Both	When set to <i>Enable Both</i> , the FS2 issues SNMP trap messages to Trap Destination 1 and 2 (parameters 4.1 and 4.3) and as defined in the MIB.

### 4.1 SNMP Trap Destination 1

This parameter determines the SNMP Trap Destination IP address where trap messages issued by the FS2 will be sent. This parameter is available only if parameter 4.0 SNMP Enable is set to On.

IP Address	Set the desired IP address where traps will be sent (usually a client on your LAN). <i>Default: 192.168.0.3</i>
------------	---

### 4.2 SNMP Trap Port 1

This parameter determines the SNMP Trap Port 1 used for sending destination #1 trap messages. UDP Port 162 is the default used for SNMP trap messages. However, if this port is being used by another protocol or service, you can change the setting by modifying this parameter. This parameter is available only if parameter 4.0 SNMP Enable is set to On.

Variable	Select a UDP port for sending FS2 trap messages. <i>Default: 162</i>
----------	--

**NOTE:** *The SNMP Trap Port number does not blink when changed (as does the Trap Destination IP address); if you change the port number and exit the parameter, the port changes immediately to the new value.*

## 4.3 SNMP Trap Destination 2

---

This parameter determines the secondary SNMP Trap Destination IP address where trap messages issued by the FS2 will be sent (if desired). This parameter is similar to 4.1 Trap Destination 1 above. Default is 192.168.0.3

## 4.4 SNMP Trap Port 2

---

This parameter determines the SNMP Trap Port used for sending destination #2 trap messages, similar to 4.2 SNMP Trap Port 1 above. Default is 162.

If you need to revert to the previous setting (undo changes), push SELECT. If you want to revert to the default value, hold down ADJUST for 4 seconds.

# Appendix A – Specifications

## FS2 Tech Specs

### Video Formats

- (2K) 2048 x 1080p 23.98, 24, 25, 29.97, 30, 50, 59.94, 60
- (HD) 1920 x 1080p 23.98, 24, 25, 29.97, 30, 50, 59.94, 60
- (HD) 1920 x 1080PsF 23.98, 24, 25, 29.97, 30
- (HD) 1920 x 1080i 25, 29.97, 30
- (HD) 1280 x 720p 50, 59.94, 60
- (SD) 625i 25
- (SD) 525i 29.97

Input	Possible Output Formats		
525i59.94	525i59.94	720p59.94	1080i59.94
720p59.94	525i59.94	720p59.94	1080i59.94
1080i59.94	525i59.94	720p59.94	1080i59.94
1080PsF23.98	1080PsF23.98	1080i59.94	525i59.94
625i50	625i50	1080i50	720p50
720p50	625i50	1080i50	720p50
1080i50	625i50	1080i50	720p50
1080PsF24	1080PsF24	1080i60	
1080i60	1080i60	720p60	
720p60	720p60	1080i60	

*NOTE: In the case of 1080PsF 23.98 input - and when 1080i 59.94 (or 525i) is selected as an output format, the FS2 automatically does 3:2 pulldown to get the correct frame rate. Similarly, in the case of 1080PsF/24 input, FS2 automatically does 3:2 pulldown to get the correct frame rate.*

*NOTE: When passing 24 or 60 frame rate video, output is high definition.*

### Video Input Digital

- Dual 3G-SDI, SMPTE-259/292/424, 8 or 10-bits
- Dual Fiber 3G-SDI, SMPTE-297, 8 or 10-bits (optional)
- Dual Channel LC connector module
- Single Channel LC connector module
- Single Channel SC connector module
- Single Link 4:2:2 (1 x BNC each)
- HDMI v1.3 30 bits/pixel, RGB or YUV, 2.25 Gbps, SD, HD, 1080p 50/60



## Video Input Analog

---

- HD component YPbPr, SMPTE-274 (3 x BNC)
- 12-bit A/D, 2 x oversampling
- SD Component (3 x BNC)
- SMPTE/EBU N10, Betacam 525 line, Betacam 525J
- 12-bit A/D, 4 x oversampling
- +/- .25 dB to 5.5 MHz Y frequency response
- +/- .25 dB to 2.5 MHz C frequency response
- .5% 2T pulse response
- <2 ns Y/C delay inequity
- SD Composite
- 12-bit A/D, 4 x oversampling

## Video Output Digital

---

- Dual SD/HD/3G SDI, SMPTE-259/292/424, 8 or 10-bits
- Dual Fiber 3G-SDI, SMPTE-297, 8 or 10-bits (optional)
- Dual Channel LC connector modules
- Single Channel LC connector module
- Single Channel SC connector module
- Single Link 4:2:2 (1 x BNC each)
- HDMI v1.3 30 bits/pixel, RGB or YUV, 2.25 Gbps, SD, HD, 1080p 50/60

## Video Output Analog

---

- HD component YPbPr, SMPTE-274 (3 x BNC)
- 12-bit D/A, 2 x oversampling
- SD Component (3 x BNC)
- SMPTE/EBU N10, Betacam 525 line, Betacam 525J
- 12-bit D/A, 4 x oversampling
- +/- .25 dB to 5.5 mHz Y frequency response
- +/- .25 dB to 2.5 mHz C frequency response
- .5% 2T pulse response
- <2 ns Y/C delay inequity
- SD Composite
- 12-bit D/A, 4 x oversampling

## Audio Input Digital

---

- 16-Channel, 24-bit SMPTE-272/299 SDI embedded audio, 48 kHz sample rate, synchronous
- 16-Channel, 24-bit AES/EBU audio, 48 kHz sample rate, synchronous or nonsynchronous, internal sample rate conversion (8 x XLR via 25-pin breakout cable)

## Audio Input Analog

---

- 8-Channel, 24-bit A/D analog audio, 48 kHz sample rate, balanced (8 x XLR via 25-pin breakout cable)
- +12dBu, +15dBu, +18dBu, +24dBu (Full Scale Digital)
- +/- 0.2db 20 to 20 kHz frequency response

## Audio Output Digital

---

- 16-Channel, 24-bit SMPTE-259 SDI embedded audio, 48 kHz sample rate, synchronous
- 16-Channel, 24-bit AES/EBU audio, 48 kHz sample rate, synchronous or nonsynchronous, internal sample rate conversion (8 x XLR via 25-pin breakout cable)

## Audio Output Analog

---

- 8-Channel, 24-bit D/A analog audio, 48 kHz sample rate, balanced (8 x XLR via 25-pin breakout cable)
- +12dBu, +15dBu, +18dBu, +24dBu (Full Scale Digital)
- +/- 0.2db 20 to 20 kHz frequency response

## Up-Conversion

---

- Hardware: 10-bit
- Anamorphic: fullscreen
- Pillarbox 4:3: results in a 4:3 image in center of screen with black sidebars
- Zoom 14:9: results in a 4:3 image zoomed slightly to fill a 14:9 image with black side bars
- Zoom Letterbox: results in image zoomed to fill full screen
- Zoom Wide: results in a combination of zoom and horizontal stretch to fill a 16:9 screen; this setting can introduce a small aspect ratio change

## Down-Conversion

---

- Hardware: 10-bit
- Anamorphic: fullscreen
- Letterbox: image is reduced with black top and bottom added to image area with the aspect ratio preserved
- Crop: image is cropped to fit new screen size

## Cross-Conversion

---

- Hardware 10-bit
- 1080i to 720p
- 720p to 1080i
- 720p to 1080PsF

## SD to SD Aspect Ratio Conversion

---

- Letterbox: This transforms SD anamorphic material to a letterboxed image
- H Crop: Will produce a horizontally stretched effect on the image; transforms anamorphic SD to full frame
- SD Pillarbox: Will produce an image in the center of the screen with black borders on the left and right sides and an anamorphized image in the center
- V Crop: Will transform SD letterbox material to an anamorphic image

## Timecode

---

- SDI RP188 via SDI BNC

## Reference Input

---

- External, 2 x BNC
- Looping, nonterminating
- Blackburst or tri-level sync

## Network Interface

---

- 10/100 Ethernet (RJ-45)
- Embedded web server for remote control
- VTECS™ protocol for Remote Control Panel

## User Interface

---

- Alphanumeric display, with dedicated buttons/knobs

## Machine Control

---

- GPI in/out, 15-pin D-connector
- See [Figure 15 on page 108](#) for pinouts.

## Size (w x d x h)

---

- 17.25" x 14.5" x 1.75" 1RU (438.1mm x 368.3mm x 44.4mm)

## Weight

---

- 7.9 lb (3.6 kg)

## Power

---

- 100-240 VAC 50/60 Hz, (Dual, redundant power supplies), 55W typical; 80W max.

## Environment

---

- Safe Operating Temperature: 0 to 40 degrees C (32 to 104 degrees F)
- Safe Storage Temperature (Power OFF): -40 to 60 degrees C (-40 to 140 degrees F)
- Operating Relative Humidity: 10-90% noncondensing
- Operating Altitude: <3,000 meters (<10,000 feet)

# Appendix B – FS2 Pinouts

## GPI Pinouts

The GPI inputs and outputs are electrically isolated from power and ground on the FS2 frame. There are four inputs and four outputs. Electrical isolation is provided for up to four pieces of external equipment.

Figure 15. GPI DE-15F Connector Pinout

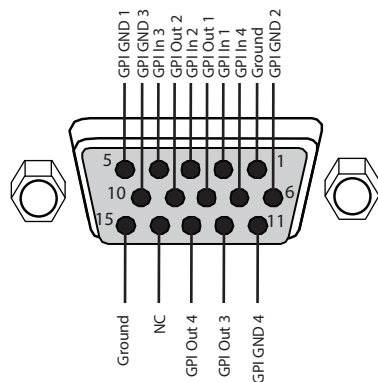



Table 7. Pinouts Description

Pin	Function	Pin	Function	Pin	Function
1	Ground	6	GPI GND 2	11	GPI GND 4
2	GPI In 1	7	GPI In 4	12	GPI OUT 3
3	GPI In 2	8	GPI OUT 1	13	GPI OUT 4
4	GPI In 3	9	GPI OUT 2	14	NC
5	GPI GND 1	10	GPI GND 3	15	Ground

The following guidelines apply to the four GPI inputs and outputs:

- GPI In 1 and GPI Out 1 share a common isolated ground on pin 5 (GPI GND 1).
- GPI In 2 and GPI Out 2 share a common isolated ground on pin 6 (GPI GND 2).
- GPI In 3 and GPI Out 3 share a common isolated ground on pin 10 (GPI GND 3).
- GPI In 4 and GPI Out 4 share a common isolated ground on pin 11 (GPI GND 4).
- Pins 1 and 15, local chassis ground, may only be used as references when isolation is not required.
- All four GPI inputs are internally pulled high through a 10K ohm resistor to an isolated +5V supply, so that a relay contact closure or any device sinking at least 0.4 mA to ground will register a logic low.
- All four GPI outputs are +5V TTL compatible, sourcing up to 6mA and sinking up to 4mA each.
- GPI Inputs light the front panel EXT LED when triggered.

Figure 16. Typical GPI Input and Output Connections

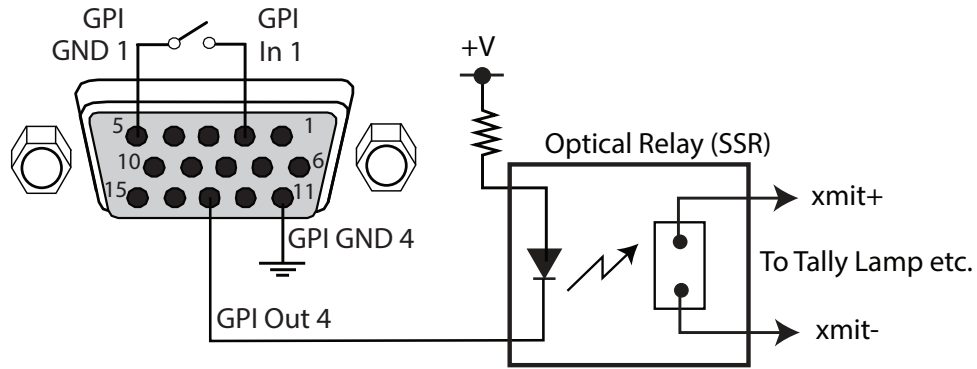


The figure above shows typical external wiring to the GPI connector. The GPI inputs require some kind of contact closure between the input pin and the input ground pin to register the logic low that triggers the GPI input.

You can connect the outputs to TTL buffers that communicate the GPI output logic levels to other devices. For example, you could use an opto-isolator controlling a relay to activate other equipment as shown below.

## Audio Connection Pinouts

### Analog Audio

Figure 17. Audio Connector Pinout

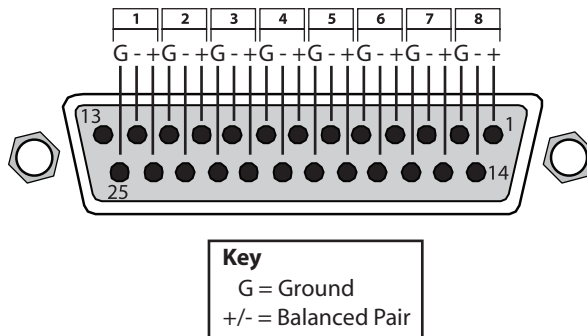

The two DB25 connectors on the FS2 rear panel support a TASCAM-style cable snake for balanced 8-channel analog audio. The pinout is the same for both input and output connectors, each following the TASCAM DB-25 standard shown in the drawing above. The top connector is for analog audio inputs 1-8, and the bottom connector is for analog audio outputs 1-8

### Digital Audio

The same pinout scheme as above is used for the AES/EBU digital audio connections, except each channel handles a pair of digital audio signals (16 total per connector). The top connector is for digital audio input channels 1-16, and the bottom connector is for digital audio output channels 1-16.

# Appendix C – Safety & Compliance

---

## Federal Communications Commission (FCC) Compliance Notices

---

### Class A Interference Statement

---

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15, Subpart B of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC Caution

---

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Canadian ICES Statement

---

### Canadian Department of Communications Radio Interference Regulations

This digital apparatus does not exceed the Class A limits for radio-noise emissions from a digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications. This Class A digital apparatus complies with Canadian ICES-003.

### Règlement sur le brouillage radioélectrique du ministère des Communications

Cet appareil numérique respecte les limites de bruits radioélectriques visant les appareils numériques de classe A prescrites dans le Règlement sur le brouillage radioélectrique du ministère des Communications du Canada. Cet appareil numérique de la Classe A est conforme à la norme NMB-003 du Canada.

## European Union and European Free Trade Association (EFTA) Regulatory Compliance

---

This equipment may be operated in the countries that comprise the member countries of the European Union and the European Free Trade Association. These countries, listed in the following paragraph, are referred to as The European Community throughout this document:

AUSTRIA, BELGIUM, BULGARIA, CYPRUS, CZECH REPUBLIC, DENMARK, ESTONIA, FINLAND, FRANCE, GERMANY, GREECE, HUNGARY, IRELAND, ITALY, LATVIA, LITHUANIA, LUXEMBOURG, MALTA, NETHERLANDS, POLAND, PORTUGAL, ROMANIA, SLOVAKIA, SLOVENIA, SPAIN, SWEDEN, UNITED KINGDOM, ICELAND, LICHTENSTEIN, NORWAY, SWITZERLAND

## Declaration of Conformity

Marking by this symbol indicates compliance with the Essential Requirements of the EMC Directive of the European Union 2014/30/EU.



This equipment meets the following conformance standards:

Safety:

EN 62368-1: 2014 + A11 (T-Mark License),

IEC 62368-1: 2014 (CB Scheme Report/Certificates

Additional licenses issued for specific countries available on request.

Emissions:

EN 55032: 2015 + A11: 2020, CISPR 32: 2015,

EN 61000-3-2: 2014, EN 61000-3-3: 2013

Immunity:

EN 55035: 2017 + A11: 2020, EN 61000-4-2:2009, EN 61000-4-3:2006+A1:2008 +A2:2010,

EN 61000-4-4: 2012, EN 61000-4-5: 2014 +A1: 2017, EN 61000-4-6: 2014,

EN 61000-4-11: 2020

Environments: E2, E3 and E4

The product is also licensed for additional country specific standards as required for the International Marketplace.



**Warning!** This is a Class A product. In a domestic environment, this product may cause radio interference, in which case, the user may be required to take appropriate measures.

**Achtung!** Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten, in welchen Fällen der Benutzer für entsprechende Gegenmaßnahmen verantwortlich ist.

**Attention!** Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.

## Recycling Notice



This symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

## Korea KCC Compliance Statement

### 사용자 안내문

이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전파간섭의 우려가 있습니다.

## Taiwan Compliance Statement

警告使用者：  
這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

This is a Class A product based on the standard of the Bureau of Standards, Metrology and Inspection (BSMI) CNS 13438, Class A. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## Japanese Compliance Statement

この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 VCCI-A

This is a Class A product based on the standard of the VCCI Council (VCCI 32: 2016). If this equipment is used in a domestic environment, radio interference may occur, in which case, the user may be required to take corrective actions.

## Chinese Compliance Statement

This product has been tested to the following Chinese standards:

GB 17625.1-2012; GB 8898-2011

This is to certify that the above mentioned product(s) complies with the requirements of certification rules of CQC12-045800-2022 under certificate number CQC2012010805543191.

## Translated Warning and Caution Messages

The following caution statements, warning conventions, and warning messages apply to this product and manual.



Warning Symbol



Hazard Symbol



Caution Symbol

## Before Operation Please Read These Instructions



**Warning!** Read and follow all warning notices and instructions marked on the product or included in the documentation.

**Avertissement!** Lisez et conformez-vous à tous les avis et instructions d'avertissement indiqués sur le produit ou dans la documentation.

**Warnung!** Lesen und befolgen Sie die Warnhinweise und Anweisungen, die auf dem Produkt angebracht oder in der Dokumentation enthalten sind.

**¡Advertencia!** Lea y siga todas las instrucciones y advertencias marcadas en el producto o incluidas en la documentación.

**Aviso!** Leia e siga todos os avisos e instruções assinalados no produto ou incluídos na documentação.

**Avviso!** Leggere e seguire tutti gli avvisi e le istruzioni presenti sul prodotto o inclusi nella documentazione.





**Warning!** Do not use this device near water and clean only with a dry cloth.

**Avertissement!** N'utilisez pas cet appareil près de l'eau et nettoyez-le seulement avec un tissu sec.

**Warnung!** Das Gerät nicht in der Nähe von Wasser verwenden und nur mit einem trockenen Tuch säubern.

**¡Advertencia!** No utilice este dispositivo cerca del agua y límpielo solamente con un paño seco.

**Aviso!** Não utilize este dispositivo perto da água e limpe-o somente com um pano seco.

**Avviso!** Non utilizzare questo dispositivo vicino all'acqua e pulirlo soltanto con un panno asciutto.



**Warning!** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

**Avertissement!** Ne bloquez aucune ouverture de ventilation. Suivez les instructions du fabricant lors de l'installation.

**Warnung!** Die Lüftungsöffnungen dürfen nicht blockiert werden. Nur gemäß den Anweisungen des Herstellers installieren.

**¡Advertencia!** No bloquee ninguna de las aberturas de la ventilación. Instale de acuerdo con las instrucciones del fabricante.

**Aviso!** Não obstrua nenhuma das aberturas de ventilação. Instale de acordo com as instruções do fabricante.

**Avviso!** Non ostruire le aperture di ventilazione. Installare in conformità con le istruzioni del fornitore.



**Warning!** Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

**Avertissement!** N'installez pas l'appareil près d'une source de chaleur telle que des radiateurs, des bouches d'air de chauffage, des fourneaux ou d'autres appareils (amplificateurs compris) qui produisent de la chaleur.

**Warnung!** Nicht in der Nähe von Wärmequellen wie Heizkörpern, Heizregistern, Öfen oder anderen Wärme erzeugenden Geräten (einschließlich Verstärkern) aufstellen.

**¡Advertencia!** No instale cerca de fuentes de calor tales como radiadores, registros de calor, estufas u otros aparatos (incluidos amplificadores) que generan calor.

**Aviso!** Não instale perto de nenhuma fonte de calor tal como radiadores, saídas de calor, fogões ou outros aparelhos (incluindo amplificadores) que produzam calor.

**Avviso!** Non installare vicino a fonti di calore come termosifoni, diffusori di aria calda, stufe o altri apparecchi (amplificatori compresi) che emettono calore



**Warning!** Unplug this device during lightning storms or when unused for long periods of time.

**Avertissement!** Débranchez cet appareil pendant les orages avec éclairs ou s'il est inutilisé pendant de longues périodes.

**Warnung!** Das Gerät ist bei Gewitterstürmen oder wenn es über lange Zeiträume ungenutzt bleibt vom Netz zu trennen.

**¡Advertencia!** Desenchufe este dispositivo durante tormentas eléctricas o cuando no se lo utilice por largos periodos del tiempo.

**Aviso!** Desconecte este dispositivo da tomada durante trovoadas ou quando não é utilizado durante longos periodos de tempo.

**Avviso!** Utilizzare soltanto i collegamenti e gli accessori specificati e/o venduti dal produttore, quali il treppiedi e l'esoscheletro.



**Warning!** Do not open the chassis. There are no user-serviceable parts inside. Opening the chassis will void the warranty unless performed by an AJA service center or licensed facility.

**Avertissement!** Ne pas ouvrir le châssis. Aucun élément à l'intérieur du châssis ne peut être réparé par l'utilisateur. La garantie sera annulée si le châssis est ouvert par toute autre personne qu'un technicien d'un centre de service ou d'un établissement agréé AJA.

**Warnung!** Öffnen Sie das Gehäuse nicht. Keine der Geräteteile können vom Benutzer gewartet werden. Durch das Öffnen des Gehäuses wird die Garantie hinfällig, es sei denn, solche Wartungsarbeiten werden in einem AJA-Service-Center oder einem lizenzierten Betrieb vorgenommen.

**¡Advertencia!** No abra el chasis. El interior no contiene piezas reparables por el usuario. El abrir el chasis anulará la garantía a menos que se lo haga en un centro de servicio AJA o en un local autorizado.

**Advertência!** Não abra o chassi. Não há internamente nenhuma peça que permita manutenção pelo usuário. Abrir o chassi anula a garantia, a menos que a abertura seja realizada por uma central de serviços da AJA ou por um local autorizado.

**Avvertenza!** Non aprire lo chassis. All'interno non ci sono parti riparabili dall'utente. L'apertura dello chassis invaliderà la garanzia se non viene effettuata da un centro ufficiale o autorizzato AJA.



**Warning!** Only use attachments and accessories specified and/or sold by the manufacturer.

**Avertissement!** Utilisez seulement les attaches et accessoires spécifiés et/ou vendus par le fabricant.

**Warnung!** Verwenden Sie nur Zusatzgeräte und Zubehör angegeben und / oder verkauft wurde durch den Hersteller.

**¡Advertencia!** Utilice solamente los accesorios y conexiones especificados y/o vendidos por el fabricante.

**Aviso!** Utilize apenas equipamentos/acessórios especificados e/ou vendidos pelo fabricante.

**Avviso!** Utilizzare soltanto i collegamenti e gli accessori specificati e/o venduti dal produttore.



**Warning!** Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.

**Avertissement!** Référez-vous au personnel de service qualifié pour tout entretien. L'entretien est exigé quand l'appareil a été endommagé de quelque manière que ce soit, par exemple lorsque le cordon d'alimentation ou la prise sont endommagés, que du liquide a été versé ou des objets sont tombés dans l'appareil, que l'appareil a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement ou est tombé.

**Warnung!** Das Gerät sollte nur von qualifizierten Fachkräften gewartet werden. Eine Wartung ist fällig, wenn das Gerät in irgendeiner Weise beschädigt wurde, wie bei beschädigtem Netzkabel oder Netzstecker, falls Flüssigkeiten oder Objekte in das Gerät gelangen, das Gerät Regen oder Feuchtigkeit ausgesetzt wurde, nicht ordnungsgemäß funktioniert oder fallen gelassen wurde.

**¡Advertencia!** Consulte al personal calificado por cuestiones de reparación. El servicio de reparación se requiere cuando el dispositivo ha recibido cualquier tipo de daño, por ejemplo cable o espigas dañadas, se ha derramado líquido o se han caído objetos dentro del dispositivo, el dispositivo ha sido expuesto a la lluvia o humedad, o no funciona de modo normal, o se ha caído.

**Aviso!** Remeta todos os serviços de manutenção para o pessoal de assistência qualificado. A prestação de serviços de manutenção é exigida quando o dispositivo foi danificado mediante qualquer forma, como um cabo de alimentação ou ficha que se encontra danificado/a, quando foi derramado líquido ou caíram objectos sobre o dispositivo, quando o dispositivo foi exposto à chuva ou à humidade, quando não funciona normalmente ou quando foi deixado cair.

**Avviso!** Fare riferimento al personale qualificato per tutti gli interventi di assistenza. L'assistenza è necessaria quando il dispositivo è stato danneggiato in qualche modo, ad esempio se il cavo di alimentazione o la spina sono danneggiati, è stato rovesciato del liquido è stato rovesciato o qualche oggetto è caduto nel dispositivo, il dispositivo è stato esposto a pioggia o umidità, non funziona correttamente o è caduto



**Warning!** Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

**Avertissement!** La sécurité de la prise polarisée ou de la prise de type mise à la terre ne doit en aucun cas être empêchée de fonctionner. Une prise polarisée a deux broches, l'une étant plus large que l'autre. Une prise de type mise à la terre a deux broches et une troisième broche pour la mise à la terre. La broche large ou la troisième broche sont fournies pour votre sécurité. Si la prise fournie ne s'insère pas dans votre prise femelle, consultez un électricien pour le remplacement de la prise femelle obsolète.

**Warnung!** Der Sicherheitszweck des gepolten bzw. Schukosteckers ist zu berücksichtigen. Ein gepolter Stecker verfügt über zwei Pole, von denen einer breiter als der andere ist. Ein Schukostecker verfügt neben den zwei Polen noch über einen dritten Pol zur Erdung. Der breite Pol bzw. der Erdungspol dienen der Sicherheit. Wenn der zur Verfügung gestellte Stecker nicht in Ihren Anschluss passt, konsultieren Sie einen Elektriker, um den veralteten Anschluss zu ersetzen.

**¡Advertencia!** No eche por tierra la finalidad del tipo de enchufe polarizado con conexión a tierra. Un enchufe polarizado tiene dos espigas, una más ancha que la otra. Un enchufe con conexión a tierra tiene dos espigas iguales y una tercera espiga que sirve para la conexión a tierra. La espiga ancha, o la tercera espiga, sirven para su seguridad. Si el enchufe suministrado no encaja en el tomacorriente, consulte con un electricista para reemplazar el tomacorriente obsoleto.

**Aviso!** Não anule a finalidade da segurança da ficha polarizada ou do tipo ligação terra. Uma ficha polarizada tem duas lâminas sendo uma mais larga do que a outra. Uma ficha do tipo de ligação à terra tem duas lâminas e um terceiro terminal de ligação à terra. A lâmina larga ou o terceiro terminal são fornecidos para sua segurança. Se a ficha fornecida não couber na sua tomada, consulte um electricista para a substituição da tomada obsoleta.

**Avviso!** Non compromettere la sicurezza della spina polarizzata o con messa a terra. Una spina polarizzata ha due spinotti, di cui uno più largo. Una spina con messa a terra ha due spinotti e un terzo polo per la messa a terra. Lo spinotto largo o il terzo polo sono forniti per motivi di sicurezza. Se la spina fornita non si inserisce nella presa di corrente, contattare un elettricista per la sostituzione della presa obsoleta.



**Warning!** Since the Mains plug is used as the disconnection for the device, it must remain readily accessible and operable.

**Avertissement!** Puisque la prise principale est utilisée pour débrancher l'appareil, elle doit rester aisément accessible et fonctionnelle.

**Warnung!** Da der Netzstecker als Trennvorrichtung dient, muss er stets zugänglich und funktionsfähig sein.

**¡Advertencia!** Puesto que el enchufe de la red eléctrica se utiliza como dispositivo de desconexión, debe seguir siendo fácilmente accesible y operable.

**Aviso!** Dado que a ficha principal é utilizada como a desconexão para o dispositivo, esta deve manter-se prontamente acessível e funcional.

**Avviso!** Poiché il cavo di alimentazione viene usato come dispositivo di sconnessione, deve rimanere prontamente accessibile e operabile.



**Warning!** Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the device.

**Avertissement!** Protégez le cordon d'alimentation pour que l'on ne marche pas dessus ou qu'on le pince, en particulier au niveau des prises mâles, des réceptacles de convenance, et à l'endroit où il sort de l'appareil.

**Warnung!** Vermeiden Sie, dass auf das Netzkabel getreten oder das Kabel geknickt wird, insbesondere an den Steckern, den Steckdosen und am Kabelausgang am Gerät.

**¡Advertencia!** Proteja el cable de energía para que no se le pise ni apriete, en especial cerca del enchufe, los receptáculos de conveniencia y el punto del que salen del equipo.

**Aviso!** Proteja o cabo de alimentação de ser pisado ou de ser comprimido particularmente nas fichas, em tomadas de parede de conveniência e no ponto de onde sai do dispositivo.

**Avviso!** Proteggere il cavo di alimentazione in modo che nessuno ci cammini sopra e che non venga schiacciato soprattutto in corrispondenza delle spine e del punto in cui esce dal dispositivo.



**Warning!** Disconnect the external AC power supply line cord(s) from the mains power before moving the unit.

**Avertissement!** Retirez le ou les cordons d'alimentation en CA de la source d'alimentation principale lorsque vous déplacez l'appareil.

**Warnung!** Trennen Sie die Wechselstrom-Versorgungskabel vom Netzstrom, bevor Sie das Gerät verschieben.

**¡Advertencia!** Cuando mueva la unidad desenchufe de la red eléctrica el/los cable(s) de la fuente de alimentación CA tipo brick.

**Advertência!** Remova os cabos CA de alimentação brick da rede elétrica ao mover a unidade.

**Avvertenza!** Scollegare il cavo dell'alimentatore quando si sposta l'unità.



**Hazard!** High Voltage. This situation or condition can cause injury due to electric shock.

**Avertissement!** Tension élevée. Cette situation ou condition peut causer des blessures dues à un choc électrique.

**Warnung!** Hochspannung. Diese Situation oder Bedingung kann zu Verletzungen durch Stromschlag führen.

**¡Advertencia!** Alto voltaje . Esta situación o condición puede causar lesiones debidas a una descarga eléctrica.

**Aviso!** Alta Tensão . Esta situação ou condição pode causar danos devido a choques elétricos.

**Avviso!** Alta tensione. Questa situazione o condizione può causare lesioni a causa di scosse elettriche.



**Warning!** To meet safety regulations for leakage current, connect the dual power supplies to separate branch circuits.

**¡Advertencia!** Para cumplir con las normas de seguridad para la corriente de fuga, conecte las dos fuentes de alimentación para circuitos derivados diferentes.

**Attention!** Pour répondre aux mesures de sécurité concernant le courant de fuite, raccorder les sources d'alimentation doubles à des circuits de dérivation distincts.

**Warnung!** Zur Erfüllung der Sicherheitsbestimmungen bezüglich Reststrom schließen Sie bitte die zwei Netzteile an unterschiedlichen Abzweigungen an.

**Cuidado!** Para atender aos regulamentos de segurança para correntes de fuga, conecte as fontes duplas a circuitos elétricos separados.

**Attenzione!** Per soddisfare le norme di sicurezza sulla corrente di perdita, collegare i doppi alimentatori a circuiti derivati separati.

# Warranty and Liability Information

---

## Limited Warranty on Hardware

---

AJA Video Systems, Inc. (AJA Video) warrants that the hardware product, not including software components, will be free from defects in materials and workmanship for a period of five years from the date of purchase. AJA Video provides a separate software warranty as part of the license agreement applicable to software components.

If the Customer brings a valid claim under this limited warranty for a hardware product (hereafter, a “product”) during the applicable warranty period, AJA Video will, at its sole option and as the Customer’s sole remedy for breach of the above warranty, provide one of the following remedies:

- Repair or facilitate the repair the product within a reasonable period of time, free of charge for parts and labor.
- Replace the product with a direct replacement or with a product that performs substantially the same function as the original product.
- Issue a refund of the original purchase price less depreciation to be determined based on the age of the product at the time remedy is sought under this limited warranty.

To obtain service under this warranty, the Customer must notify AJA Video of the defect before expiration of the warranty period and make suitable arrangements for the performance of service by contacting AJA Video support through the channels set forth on the support contacts web page at <https://www.aja.com/support>.

Except as stated, the Customer shall bear all shipping, packing, insurance and other costs, excluding parts and labor, to effectuate repair. Customer shall pack and ship the defective product to a service center designated by AJA Video, with shipping charges prepaid. AJA Video shall pay to return the product to Customer, but only if to a location within the country in which the AJA Video service center is located. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON APPLICABLE STATUTORY RIGHTS OF A CONSUMER, SO SOME OR ALL OF THE TERMS OF THIS PARAGRAPH MAY NOT APPLY TO YOU.

## Limitation of Liability

---

Under no circumstances shall AJA video BE LIABLE IN ANY WAY FOR ANY LOST, CORRUPTED OR DESTROYED DATA, FOOTAGE OR WORK, OR FOR ANY OTHER INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOST PROFITS, OR FOR ANY THIRD PARTY CLAIM, IN CONNECTION WITH THE PRODUCT, WHETHER RESULTING FROM DEFECTS IN THE PRODUCT, SOFTWARE OR HARDWARE FAILURE, OR ANY OTHER CAUSE WHATSOEVER, EVEN IF AJA VIDEO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. AJA VIDEO’S LIABILITY IN CONNECTION WITH THE PRODUCT SHALL UNDER NO CIRCUMSTANCES EXCEED THE PURCHASE PRICE PAID FOR THE PRODUCT. The foregoing limitations apply even if any remedy set forth in this LIMITED WARRANTY fails of its essential purpose. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OF LIABILITY FOR PERSONAL INJURY, OR OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO SOME OR ALL OF THE TERMS OF THIS PARAGRAPH MAY NOT APPLY TO YOU.

## Governing Law and Language; Your Rights

---

This limited warranty is the only warranty provided by AJA Video on the hardware product. It supersedes all prior or contemporaneous understandings regarding such subject matter. No amendment to or modification of this warranty will be binding unless in writing and signed by AJA Video. The laws of the State of California, USA will govern this warranty and any dispute arising from it. Any translation of this Agreement is intended for convenience and to meet local requirements and in the event of a dispute between the English and any non-English versions, the English version of this warranty will govern. This limited warranty gives you specific legal rights and you may have other rights that vary from jurisdiction to jurisdiction, some of which are noted above.

# Index

## Symbols

- 7 AES/EBU Audio Out Menu 57
- 7 Reference Alarm Menu 47
- 1080p50/60 Mode 50

## A

- Active Format Descriptor (AFD) 71
- ADJUST Knob 37
- ADJUST Knob Operation 16
- AES/EBU Connector 19
- AES/EBU SRC Mode Menu 53
- AFD Out SDI 1/2 Menu 72
- AFD VANC Output Lines Menu 72
- AJA Support 2
- Alarm
  - Incompatibility 18
- Alarm Configuration Screen 88
- ALARM LED 18
- Alphanumeric Display 13
- Analog Audio Connector 19
- Analog Audio Out Menu 57
- Analog Audio Pinouts 109
- Analog Audio Std Menu 50
- Application Examples 8
- Audio 1 and 2 Screen 97
- Audio Connector
  - Analog 19
  - Digital 19
- Audio Delay Ch1/2-15/16 (mS) Menu 79
- Audio Delay Ch1-16 (mS) Menu 79
- Audio Delay (mS) Menu 79
- Audio Follow Video Menu 78
- Audio Input Menu 76
- Audio Level Ch1-16 Menu 80
- Audio Level Choices 32
- Audio Map Ch 1/2-15/16 Menu 77
- Audio Map Ch1-16 Menu 77
- Audio Menu Group 16
- Audio Out Levels Menu 80
- Audio Output Phase Menu 80
- Audio Phase Ch1-16 Menu 80
- Audio Pinouts 109
- Audio Processor
  - Description 12
- Audio Signal Gen Menu 78
- Authentication Menu 43

## B

- Background Fill Menu 60
- Block Diagram 11
- Button Operation 14

## C

- Cabling Requirements 25

- Caption Status Menu 41
- Caption Xlator Menu 73
- Chassis Dimensions 25
- Chassis Installation 25
- Closed Captioning 73
- Color Blue Menus 67
- Color Corrector (RGB) Menu 66
- Color Green Menus 67
- Color Red Black Level Menu 67
- Color Red Gain Menu 66
- Color Red Gamma Menu 67
- Component In Format Menu 49
- Component Out Format Menu 50
- Component Out Menu 57
- Component Video Connector 20
- Composite Downconv Menu 53
- Composite Out Menu 57
- Composite Video Connector 20
- Computer Video
  - Connecting to FS2 33, 34
  - Highest Quality Output 35
  - Scaling 34
  - Setup 33
- Computer Video Formats 33
- Config Menu Group 15, 44
- Config Screen 91
- Connector
  - AES/EBU 19
  - Analog Audio 19
  - Component Video 20
  - Composite Video 20
  - GPI 20
  - HDMI 20
  - LAN 20
  - P/S 1/2 19
  - SDI 20
  - SDI Fiber 20
- Control
  - Front Panel 9
  - Web Browser 10
- Controlling Multiple FS2s 84
- Conversion 9
  - Exceptions 9
- Cooling Requirements 25
- Custom Aspect Menu 68
- Custom Bottom Crop Menu 68
- Custom H Position Menu 68
- Custom Left Crop Menu 68
- Custom Right Crop Menu 68
- Custom Size Menu 68
- Custom Size/Pos Menu 67
- Custom V Position Menu 68

## D

- Default Gateway 87
- Default Gateway Menu 45
- Default Network Settings 27

- Default Static IP Networking 27
- DHCP
  - Factory Setting 27
- DHCP Networking 27
- Digital Audio Connector 19
- Digital Audio Pinouts 109
- Display Intensity 92
- Display Intensity Menu 47
- Dolby Decoder Aux Mode Menu 55
- Dolby Decoder Aux Out Menu 55
- Dolby Decoder Input Menu 54
- Dolby Decoder Installation 25
- Dolby Decoder Mode Menu 55
- Dolby E Decoder Card 10
- Dolby Framer Input Menu 81
- Dolby Framer Offset (Frames) Menu 81
- Dolby Framer Offset (Samples) Menu 82
- Dolby Framer Status Menu 42
- Dolby Framer Sync Menu 81
- Dolby Status Menu 42
- Downconvert Mode Menu 61
- Downcvrt AFD Dflt Menu 73
- Dual Stream Mode 50
- DVI 33

## E

- Embedded Audio Out Menu 78
- Ethernet
  - Connections Supported 83
- Export Presets 1-40 94
- EXT LED 17
- Extra Frame Delay Menu 70

## F

- Factory Default 85
- Factory Preset 93
- Factory Preset Menu 48
- Factory Settings 85
- Fan Speed Menu 48
- Features
  - Audio 8
  - Optional 10
  - Other 8
  - Video 7
- Fiber1 3G Config Menu 58
- Fiber1 3G Detect Menu 51
- Fiber1 Video Out Menu 56
- Fiber2 3G Config Menu 58
- Fiber2 Input Protect Menu 52
- Fiber2 Video Out Menu 56
- Fiber Connector
  - SDI 20
- Fiber I/O 10
- Fiber Module Installation 24
- Firmware
  - Compatibility 31

- FMT ERR 1/2 KED 17
- Format Conversion 9
- Frame Rates Menu 52
- Freeze Output Menu 75
- Front Panel Control 9
- Front Panel Description 13
- Front Panel Menu
  - Description 36
- FS2 Firmware
  - Compatible Serial Numbers 31

## G

- Genlock
  - Computer Video Free Run 34
- Genlock Source Menu 52
- GPI 32
  - Interaction with Preset 44
- GPI 1–4 OUT Menu 44
- GPI Connector 20
- GPI IN 1–4 Response Menu 43
- GPI Input 10
- GPI Output 10

## H

- HDMI 33
- HDMI Audio Out Menu 57
- HDMI Connector 20
- HDMI RGB Range Menu 53
- HDMI Video Out Menu 57
- Hidden Menus 92
- Hidden Menus Menu 47

## I

- Identify FS2 18
- ID LED 18
- Import Presets 1–40 94
- Incompatibility Alarm 18
- Incompatible Video Formats 18
- Inputs and Outputs
  - Description 21
- Input Scan and PsF 74
- Input Scan Format Menu 74
- Installation
  - Fiber Module 24
  - Optional Card 24
- Installation Overview 22
- Installation Summary 23
- I/O Status Menu 40
- IP Address 87
  - Default 27, 87
- IP Address Menu 45
- IP Address Procedure 39
- IP Address Type 86
- IP Config Menu 45

## K

- KEYER LED 17

## L

- LAN Connector 20
- LAN LED 17
- LED
  - ALARM 18
  - EXT 17
  - FMT ERR 1/2 17
  - ID 18
  - KEYER 17
  - LAN 17
  - PROC AMP 1/2 17
  - PWR 1/2 18
  - REF 17
  - REMOTE 17
  - Remote Control 17
  - UFC 1/2 17
  - VID IN 1/2 17
- Legalizer Black Clip Menu 71
- Legalizer Chroma Clip Menu 71
- Legalizer White Clip Menu 71
- Loss of Input Menu 60

## M

- MAC Address Menu 46
- Matte Chroma Menu 65
- Matte Hue Menu 65
- Matte Luma Menu 65
- Menu Group Button 36

## N

- Name Entry Procedure 44
- Netmask 87
- Network
  - Connections Supported 83
  - Default IP Settings 27
- Network Configuration Screen 86
- Networking
  - Default Static IP 27
  - Description 26
  - DHCP 27
  - Static IP 28
- Network Pane 86
- NTSC 20
- NTSC Standard Menu 52

## O

- Operational Summary 14
- Optional Card Installation 24
- Output Format Menu 59
- Output Menu Group 15
- Output Screen 95
- Output Status Menu 41
- Output Timing H Menu 70
- Output Timing Memory 70
- Output Timing V Menu 70
- Overview 7

## P

- PAL 20

- PING 29

- Pinouts

- Analog Audio 109
  - Digital Audio 109
- Power Requirements 26
- Power Supply Alarm Menu 46
- Power/Temp Alarm Menu 41
- Preset
  - Export 94
  - Import 94
  - Interaction with GPI 44
  - Recall 93
  - Store 93
- Preset Menu Group 15, 48
- Presets #1–#40 Menu 49
- PROC AMP 1/2 LED 17
- Proc Amp Black Menu 66
- Proc Amp Gain Menu 66
- Proc Amp Hue Menu 66
- Proc Amp Sat Menu 66
- Proc Amp (YUV) Menu 65
- P/S 1/2 Connector 19
- PWR 1/2 LED 18

## R

- Rear Panel Description 19
- Reboot Menu 48
- REF LED 17
- Region of Interest Menu 69
- Region of Interest (ROI) 69
- Remote Control 10
- Remote Control LED 17
- Remote Control Menu 42
- Remote Menu Group 14, 42
- Reset to Factory Settings 85
- ROI Bottom Menu 70
- ROI Left Menu 69
- ROI Right Menu 69
- ROI Top Menu 69

## S

- Scaling
  - Computer Video 34
- Screen Saver Menu 47
- SD Aspect Ratio Convert Menu 63
- SDI1 3G Config Menu 58
- SDI1 3G Detect Menu 50
- SDI1 Video Out Menu 56
- SDI2 3G Config Menu 58
- SDI2 Input Protect Menu 51
- SDI2 Video Out Menu 56
- SDI Connector 20
- SDI Fiber Connector 20
- SD Line 21 Blanking Menu 74
- SELECT Knob 37
- SELECT Knob Operation 16
- Serial Number Menu 48
- Shipping Contents 23
- Sidebar Edge Menu 65
- SMPTE



- Video Format Display 40
- SNMP Enable 102
- SNMP 10
  - Description 100
  - Web Browser 101
- SNMP Configuration 100
- SNMP Menus 46
- SNMP Parameters 91
- SNMP Trap Destination 1 102
- SNMP Trap Destination 2 103
- SNMP Trap Port 1 102
- SNMP Trap Port 2 103
- Software Installation 31
- Software Update 30
- Software Version Menu 48
- Static IP Networking 28
- Status Menu Group 14, 40
- Status Screen 89
- Subnet Mask Menu 45
- Supported Web Browsers 83
- System Cabling 32
- System Menu Group 15, 49
- System Name 91
- System Name Menu 42, 44
- System Screen 90

- Description 11
- VID IN 1/2 LED 17

## W

- Web Browser
  - Connection to FS2 83
- Web Browser Control 10, 30, 83
- Web Browser Screen
  - Description 83

## T

- Technical Description 10
- Technical Support 2
- Test Pattern Video Menu 75

## U

- UFC 1/2 LED 17
- Upconvert Mode Menu 61
- UPnP Host 92
- UPnP Proxy 92

## V

- Value Adjustment
  - 10x Speed 14
  - 100x Speed 14
- VESA 33
- Vid1 Format Alarm Menu 47
- Vid1 Format Alarm Status Menu 40
- Vid1 Format Status Menu 40
- Vid2 Format Alarm Menu 47
- Vid2 Format Alarm Status Menu 41
- Video 1 & 2 Screen 96
- Video Connector
  - SDI 20
- Video Format Display
  - Broadcast 40
  - Computer 40
- Video Formats
  - Incompatible 18
- Video Input Menu 59
- Video Legalizer Menu 71
- Video Menu Group 15, 58
- Video Output Mode Menu 60
- Video Processor