

P1500W Series Air Dryers



User's Guide

Models covered:

P1500W P1500WLP P1500WHP P1502W P1502WLP P1502WHP



WARNING:

This product can expose you to chemicals including Lead, which is known to the State of California to cause cancer/birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

1. Welcome & Congratulations

Congratulations on your purchase of a new ALTEC AIR P1500W Series Air Dryer! We here at ALTEC AIR are very proud of our products and we are committed to providing you with the best value and service possible.

We are sure that you will be satisfied with your new air dryer and would like to thank you for choosing ALTEC AIR for your air dryer requirements. We also hope that you will continue to choose us for your future air pressure and related product purchases.

For information about this and other ALTEC AIR products, please visit us on the web at:

www.AltecAIR.com

2. Introduction

PLEASE READ THIS USER'S GUIDE THOROUGHLY AND SAVE FOR FUTURE REFERENCE.

This User's Guide is provided for the benefit of our customers and contains information and direction specific to the ALTEC AIR P1500W Series Air Dryers. Models covered include P1500W, P1500WLP, P1500WHP, P1502W, P1502WLP, and P1502WHP. This guide covers topics including: safety, specifications, installation, registration, operation, testing, maintenance, replacement parts, service, and troubleshooting issues. Observation and compliance with this User's Guide will ensure the maximum life and efficiency of your air dryer.

This User's Guide should be read thoroughly prior to installing, operating, or servicing the air dryer in order to become familiar with the recommended procedures. This will minimize the possibility of personal injury or damage to the unit due to improper operation or handling.


3. Table of Contents

1. Welcome & Congratulations	3	8.10 Connecting via Web Browser	45
2. Introduction	3	8.11 Using the Status Screen	47
3. Table of Contents.....	4	8.12 Using the Configuration Screen.....	50
4. Safety & Warning Information	6	8.13 Using the Event Screen.....	51
5. Overview & Specifications.....	8	8.14 Using the Firmware Screen.....	52
5.1 Product Description	8	8.15 Connecting via SNMP	53
5.2 Key Features	8	9. Testing Your Dryer	54
5.3 P1500W Series Air Dryer Models	8	9.1 Safety & Warning Information	54
5.4 Technical Specifications	9	9.2 Measuring Compressor Amp Draw	55
5.5 Dryer Function Overview	10	9.3 Measuring Compressor Voltage	56
6. Installing Your Dryer	11	9.4 Measuring Incoming Voltage	57
6.1 Safety & Warning Information	11	9.5 Measuring Voltages at Solid State Relay	58
6.2 Before You Begin.....	12	58
6.3 Included Contents	13	9.6 Testing Consistent Heatless Dryer	
6.4 Required Tools and Materials.....	13	Cycling.....	59
6.5 Installation Steps.....	14	9.7 Testing Unloader Valve	61
6.6 Installation Checklist	21	9.8 Measuring Heatless Dryer Solenoid	
7. Registering Your Dryer.....	22	Voltage.....	62
8. Operating Your Dryer	23	9.9 Testing Air Dryer Fan.....	63
8.1 Safety & Warning Information	23	9.10 Testing Safety Relief Valve	64
8.2 Front Panel Display	24	9.11 Testing Compressor ON/OFF Cycling	64
8.3 Accessing the Setup Menu.....	28	9.12 Testing High Compressor Last Run	
8.4 Using the System Setup Menu.....	29	Time Alarm.....	66
8.5 Using the Alarm Setup Menu	35	9.13 Testing Humidity Alarm and System	
8.6 Open Front Panel	44	Shutdown	67
8.7 Depressurizing the Dryer.....	44	9.14 Testing High Outlet Pressure Alarm....	69
8.8 Connecting to Common Alarm Terminals		9.15 Testing Low Outlet Pressure Alarm.....	70
.....	45	9.16 Testing Air Fittings & Hoses for Leaks	
8.9 Connecting to Power Fail Alarm		72
Terminals.....	45	10. Maintaining Your Dryer	73
		10.1 Safety & Warning Information	74
		10.2 Six Month Maintenance.....	76
		10.3 8,000 Hour Maintenance.....	77
		11. Replacement Parts & Accessories	78

11.1 Dryer Parts.....	78	13.15 Compressor Won't Build Pressure.....	91
11.2 Dryer Parts cont.	79	13.16 Compressor Excessive AMP Draw	91
11.3 Heatless Dryer Assembly Parts.....	80	13.17 High Compressor Last Run Time Alarm	92
11.4 Accessories for Your Dryer	81	13.18 Can't Create a High Compressor Last Run Time Alarm	93
11.5 Ordering Parts from ALTEC AIR	82	13.19 Compressor Rapid ON/OFF Cycling ..	93
12. Service & Repair.....	83	13.20 Contacting ALTEC AIR Technical Support.....	94
12.1 Services Offered	83	14. Appendix	95
12.2 Initiating a Service Transaction	83	14.1 Wiring Diagram	95
13. Troubleshooting Your Dryer	84	14.2 Set Point Limits and Defaults	96
13.1 Before You Call ALTEC AIR	84	14.3 SNMP Parameters.....	97
13.2 Safety & Warning Information	84	15. Limited Warranty Agreement.....	98
13.3 Air Dryer Won't Power ON.....	85	Registration Reminder	98
13.4 Display Screen Not Functioning.....	86	16. Contacting ALTEC AIR	99
13.5 High Outlet Pressure Alarm.....	86	16.1 General.....	99
13.6 Can't Create a High Pressure Alarm....	86	16.2 Sales.....	99
13.7 Low Outlet Pressure Alarm	87	16.3 Service	99
13.8 Can't Create a Low Pressure Alarm	87	16.4 Technical Support.....	99
13.9 High Humidity.....	88	17. Notes.....	100
13.10 Can't Create a High Humidity Alarm / Shutdown.....	89		
13.11 High Flow Rate Alarm.....	89		
13.12 High Cabinet Temperature Alarm	90		
13.13 Inconsistent Heatless Dryer Cycling..	90		
13.14 Compressor Doesn't Operate.....	90		

4. Safety & Warning Information

This section contains general information about safety and warning points to consider and adhere to during installation, operation, and maintenance of your air dryer. PLEASE READ THIS SECTION BEFORE PERFORMING ANY OPERATION OR PROCEDURE ON YOUR AIR DRYER.

Additional warnings specific to an operation or procedure will also be presented throughout the following sections. These will include the  symbol as well as a label of “**WARNING!**”, “**CAUTION!**”, or “**IMPORTANT!**” Please be sure to pay close attention for these warnings and read them as you encounter them.



WARNING!

For your safety, all the information in this User's Guide must be followed to minimize the risk of electrical shock, and prevent property damage or personal injury.



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.



WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.



WARNING!

High Noise. ALTEC AIR air dryers are meant to be installed in an unattended area.

**CAUTION!**

Depressurizing the air dryer may be necessary before performing certain procedures. **NEVER** remove pressure sensing tubes from the Control Board without depressurizing the air dryer first, or **damage to the Control Board will occur.**

**CAUTION!**

Incoming power to dryer must be:

- 15 amp service recommended
- 110 - 125 VAC, 50/60 Hz for P1500W, P1500WLP & P1500WHP models
- 208 - 230 VAC, 50/60 Hz, 1 Phase for P1502W, P1502WLP & P1502WHP models

**IMPORTANT!**

Performing routine maintenance as outlined in the *Maintaining Your Dryer* section will ensure optimal performance over the lifecycle of your air dryer.

**IMPORTANT!**

Performing procedures not described in this User's Guide or installing components not supplied by ALTEC AIR is **NOT RECOMMENDED AND MAY VOID THE WARRANTY.**

**CAUTION!**

This Air Dryer does not contain an internal Surge Protection Device (SPD). If an SPD is required, it must be supplied by the user.

**IMPORTANT!**

Installation of ALTEC AIR air dryers are intended for network telecommunication facilities (non-customer premises) only.

5. Overview & Specifications

5.1 Product Description

The P1500W Series Air Dryers from ALTEC AIR are designed to intake wet ambient air and remove the moisture for delivery to applications requiring a constant, on-demand source of dry, pressurized air. This process is fully automatic and will remain consistent with minimal required periodic maintenance. These dryers are designed specifically for indoor use. The P1500W Series Air Dryers employ a fully digital operating platform offering the most accurate readings of dryer variables, removable access panel allowing easier access for adjustment and maintenance, and ultra-quiet Compressor with an industry leading maintenance interval of 8,000 hours.

5.2 Key Features

- LCD display of all operating parameters
- Solid state microprocessor-based circuitry eliminates costly maintenance
- Accurate humidity sensing within $\pm 0.1\%$ RH
- Quietest dryer on the market - less than 50 dBA
- Oil-less Compressors with 8,000 hour maintenance interval

5.3 P1500W Series Air Dryer Models


Model	Description
P1500W	110 - 125 VAC, Standard Pressure 2 - 15 PSI
P1500WLP	110 - 125 VAC, Low Pressure 0.30 – 7.50 PSI
P1500WHP	110 - 125 VAC, High Pressure 2 - 60 PSI
P1502W	208 - 230 VAC, Standard Pressure 2 - 15 PSI
P1502WLP	208 - 230 VAC, Low Pressure 0.30 – 7.50 PSI
P1502WHP	208 - 230 VAC, High Pressure 2 - 60 PSI

5.4 Technical Specifications

	P1500 W	P1500WL P	P1500WH P	P1502 W	P1502WL P	P1502WH P
Output Capacity *	Normal: Up to 1200 SCFD (336 SCMD) continuous * Maximum: 1500 SCFD (420 SCMD) emergency *					
Power Requirements	110 - 125 VAC, 50/60 Hz, 7.0 Amps			208 – 230 VAC, 1 Phase, 50/60 Hz, 3.5 Amps		
Outlet Pressure Range	2 – 15 PSI (13.8- 103.4 KPa)	0.30 – 7.50 PSI (2-52.7 KPa)	2 – 60 PSI (13.8-413.6 KPa)	2 – 15 PSI (13.8- 103.4 KPa)	0.30 – 7.50 PSI (2-52.7 KPa)	2 – 60 PSI (13.8-103.4 KPa)
Outlet Air Humidity	Less than 2% RH					
Compressor Type	Two-cylinder, 3/4 HP, oil-less type					
Drying Method	Heatless Desiccant					
Operating Temperature Range	40° to 85° F (optimal) (4° to 29° C)					
Noise Level	48 dBA at 10'					
Alarms	Standard alarms – complete readings of all critical measurement points, individual alarm indication display					
Outlet Connections	3/8" O.D. tube fitting					
Dimensions	12" D x 17.25" W x 27" H (30.48 D x 43.8 W x 68 H cm)					
Net Weight	80 lbs					

* **NOTE:** The Flow measurement will display ***** for flows over 1000 SCFD for the **P1500WHP & P1502WHP** models.

5.5 Dryer Function Overview

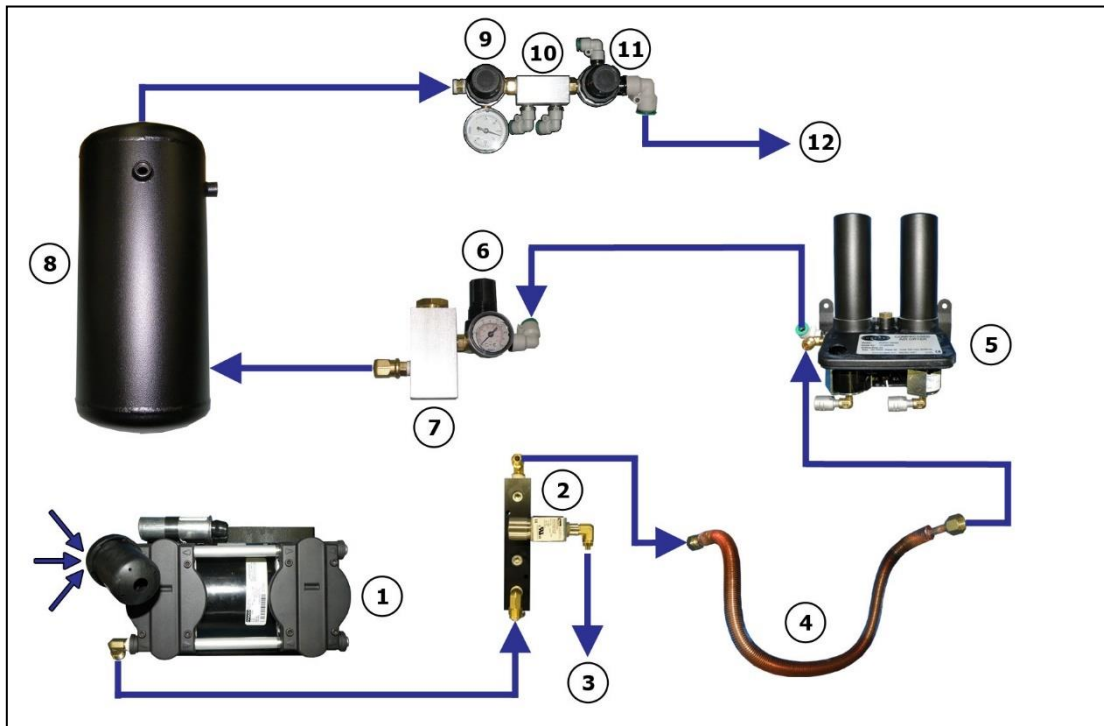

	Component	Description
1	Compressor	Compresses drawn in ambient air.
2	Unloader Valve	Relieves excess Compressor head pressure.
3	Unloader Valve Exhaust	Exhausts the air from the Unloader Valve.
4	In-Line Cooler	Cools compressed air prior to drying function.
5	Heatless Dryer	Removes moisture from compressed air.
6	Capacity Control Valve	Regulates System Pressure and prevents air from bleeding back through the Heatless Dryer.
7	Humidity Sensor	Measures the Humidity of the compressed air.
8	Air Tank	Stores dry compressed air.
9	Static Pressure Regulator	Regulates the Static Pressure (17 PSI for W & WLP, 60 PSI for WHP). Maintains constant pressure on the Flow Block for accurate Flow measuring.
10	Flow Block	Measures the Flow Rate of compressed air.
11	Outlet Pressure Regulator	Regulates the Outlet Pressure.
12	Pressure Outlet	Outputs the pressure set by the Outlet Pressure Regulator.

6. Installing Your Dryer

6.1 Safety & Warning Information



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.



WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.



CAUTION!

Proper Installation & Maintenance as outlined in this User's Guide is extremely important to ensure the reliability and longevity of the equipment as well as prevent damage or personal injury.



CAUTION!

Incoming power to dryer must be:

- 15 amp service recommended
- 110 - 125 VAC, 50/60 Hz for P1500W, P1500WLP & P1500WHP models
- 208 - 230 VAC, 50/60 Hz, 1 Phase for P1502W, P1502WLP & P1502WHP models

**WARNING!**

High Noise. ALTEC AIR air dryers are meant to be installed in an unattended area.

**IMPORTANT!**

Performing procedures not described in this User's Guide or installing components not supplied by ALTEC AIR is **NOT RECOMMENDED AND MAY VOID THE WARRANTY.**

6.2 Before You Begin

6.2.1 Carefully inspect the unit, including the shipping box as well as the air dryer, for ANY DAMAGE CAUSED BY SHIPPING. If any shipping damage is detected, it is important to file a claim with the shipping company prior to continuing the installation procedures.

6.2.2 Read the entire *Installing Your Dryer* section to familiarize yourself with the components and procedures before performing the air dryer installation.

6.2.3 Verify the installation location of the air dryer:

6.2.3.1 Well ventilated and free from abrasive dust or chemicals.

6.2.3.2 Ambient temperature is between 40° and 85° F (optimal).

NOTE: Higher temperatures will decrease component lifespan.

6.2.3.3 Meets the following power requirements:

- 15 amp service recommended
- 110 - 125 VAC, 50/60 Hz for P1500W, P1500WLP & P1500WHP models
- 208 - 230 VAC, 50/60 Hz, 1 Phase for P1502W, P1502WLP & P1502WHP models

6.2.4 Notify the alarm center of the installation and potential for alarms during the process (as necessary).

6.3 Included Contents



(1) P1500W Series Air Dryer

(1) Installation Guide (not shown)

Package located inside the dryer:

(1) 120 VAC Power Cord (for P1500W, P1500WLP & P1500WHP models)

(1) 220 VAC Power Cord (for P1502W, P1502WLP & P1502WHP models)

(1) Precision Bleed Orifice Fitting

(1) User's Guide (not shown)

6.4 Required Tools and Materials

- 9/16" wrench
- Cup of soapy water
- 1-inch paint brush (recommended)
- Box cutter

6.5 Installation Steps

- 6.5.1** Using a box cutter remove the Dryer from box and all shipping materials.

NOTE: If ANY SHIPPING DAMAGE is detected, file a claim with the shipping company prior to continuing the installation procedures.




- 6.5.2** Open Front Panel locking latches and remove the Front Panel.



- 6.5.3** Check for loose parts, hoses, or wiring.

NOTE: If ANY SHIPPING DAMAGE is detected, file a claim with the shipping company prior to continuing the installation procedures.

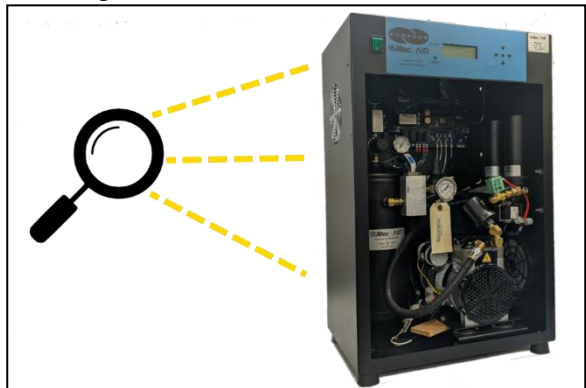


- 6.5.4** Remove the ship-loose contents package.




- 6.5.5** Remove and discard the packing foam blocks from around the Compressor.



- 6.5.6** Remove the Plug from the Outlet Port by pressing the ferrule down then pulling the plug upward.

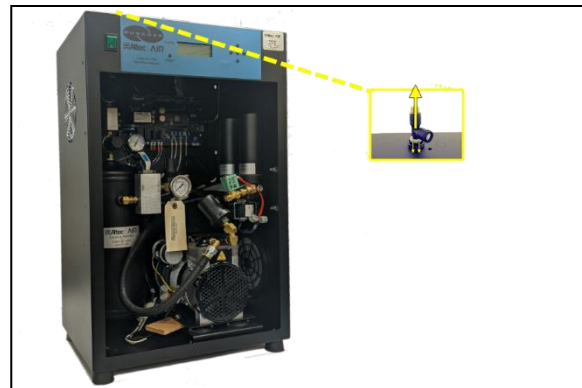

- 6.5.7** Install the Plug into the included Precision Bleed Orifice Fitting and then into the dryer Outlet Port.

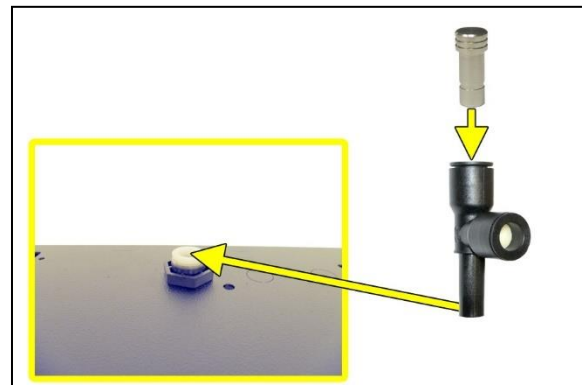


6.5.8 Place the dryer at the desired operating location:


- Place the dryer on a leveled surface
- For rack install use Universal Rack Mounting Kit P011674 (section 11.4)
- For wall install use Wall Mounting Kit P011773 (section 11.4)

6.5.9 Verify that the dryer is powered **OFF**.**6.5.10** Plug AC Power Cord to dryer.**6.5.11** Wire or plug the power cord into:

- 110 - 125 VAC power outlet for P1500W, P1500WLP & P1500WHP models.
- 208 - 230 VAC, 1 phase, power outlet for P1502W, P1502WLP & P1502WHP models.
 - Line – Black (Brown)
 - Neutral – White (Blue)
 - Ground – Green (Green/Yellow)

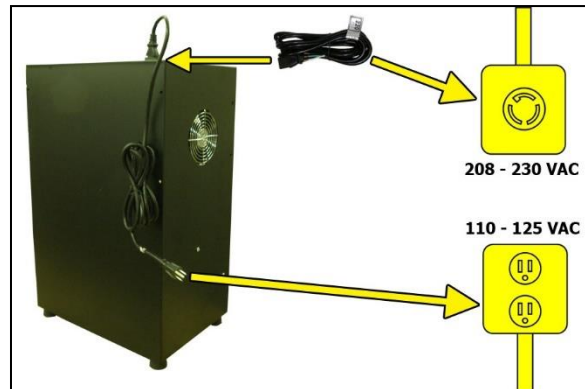**6.5.12** Power the dryer **ON**.

NOTE: The Compressor and heatless dryer will start, creating air flow through the Outlet Port.

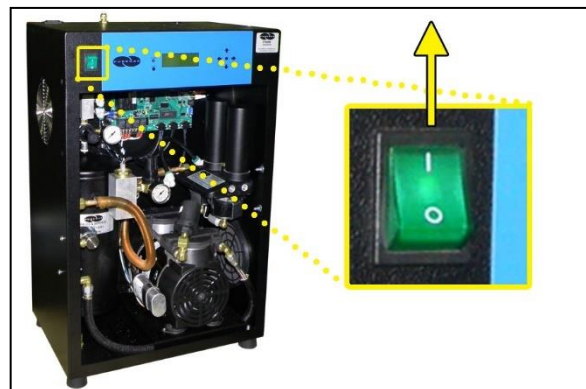**6.5.13** Set the System Pressure:

With Compressor running:

6.5.13.1 Pull the Capacity Control Valve knob out.



6.5.13.2 Turn the knob until the reading on the pressure gauge is:

80 PSI for W & WLP

90 PSI for WHP

NOTE: 90 PSI may be used on W & WLP dryers in low flow applications to maintain low humidity.

6.5.13.3 Push the knob in to lock.

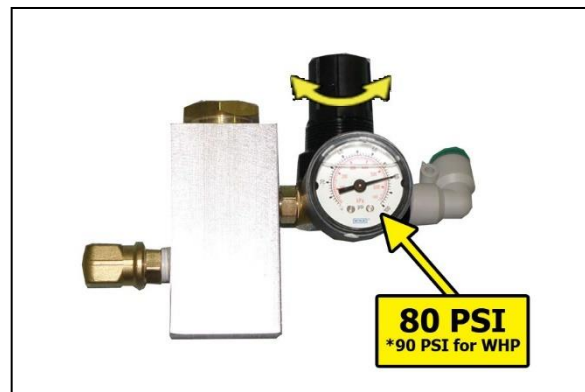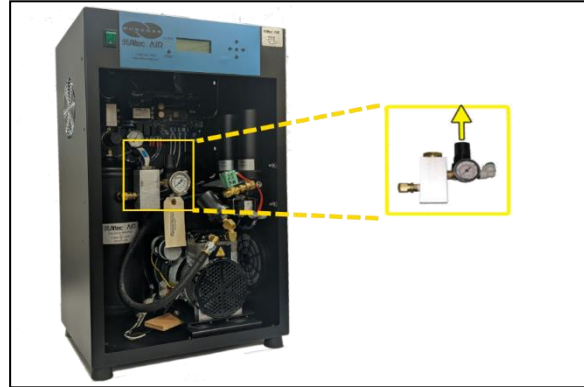

6.5.14 Let the dryer run until the Humidity drops below 2% (may take up to 15 minutes).

NOTE: Press the **RESET** Button if the dryer goes into **SHUTDOWN** mode.


6.5.15 Power the dryer **OFF**.

- 6.5.16** Remove the Precision Bleed Orifice fitting from the Outlet Port by pressing the ferrule down then pulling the fitting upward.

NOTE: Save this fitting for use in low flow applications.




- 6.5.17** Connect the air supply line to the Outlet Port.

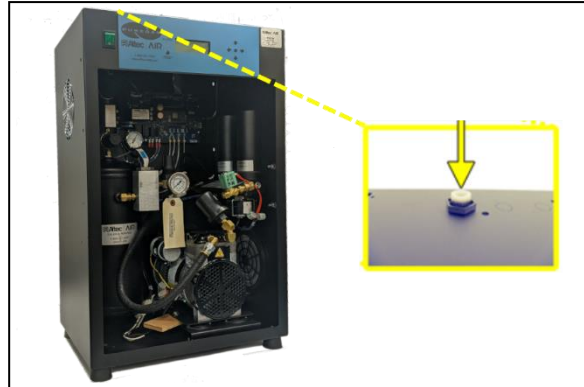


NOTE: For all dryers with minimal FLOW:

Install the included Precision Bleed Orifice fitting to maintain a constant air flow.


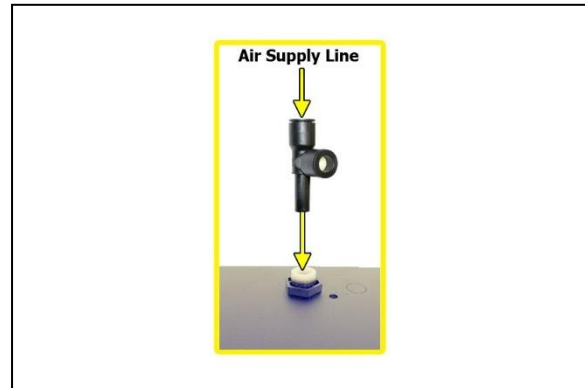


- 6.5.18** Power the dryer ON.

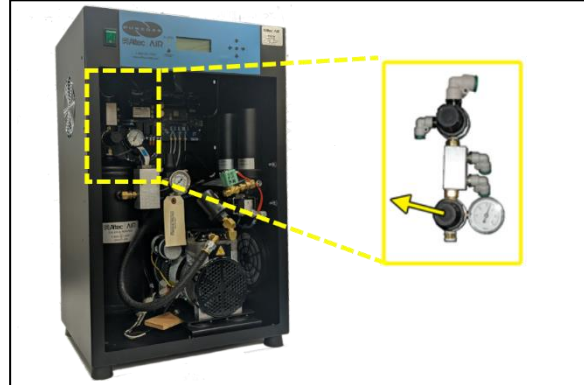

6.5.19 Set the Static Pressure:**6.5.19.1** Pull Static Pressure Regulator knob out.**6.5.19.2** Turn knob until the reading on the pressure gauge is:

17 PSI for W & WLP
60 PSI for WHP

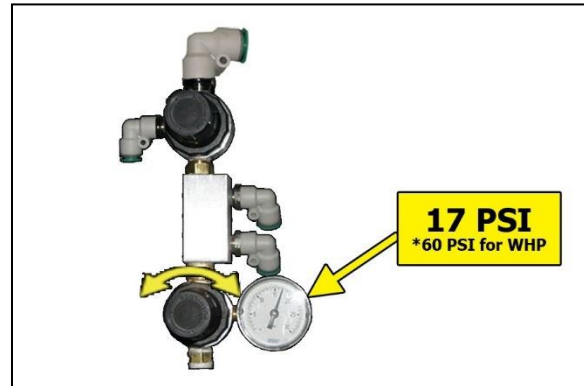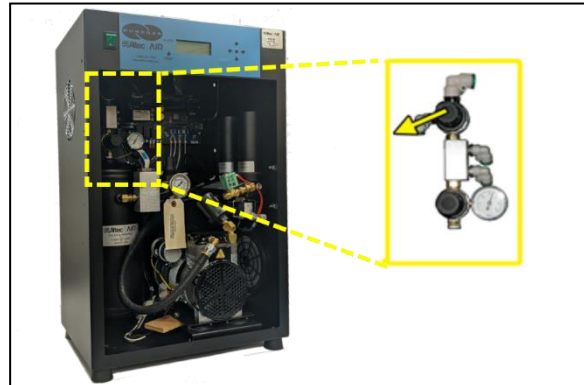**6.5.19.3** Push knob in to lock.**6.5.20** Set the Outlet Pressure:**6.5.20.1** Pull the Outlet Pressure Regulator knob out (or loosen the retaining nut – LP Models).**6.5.20.2** Turn knob until Outlet Pressure (**OUTP**) reading is at the desired setting.**6.5.20.3** Push knob in to lock (or tighten the retaining nut – LP Models).

6.5.21 Check for air leaks:

NOTE: This is a general procedure that can be applied to any fitting or hose that has air pressure in it. **DO NOT SOAP TEST THE HUMIDITY SENSOR FITTING. DAMAGE TO THE SENSOR MAY OCCUR.**


With Compressor NOT running:

6.5.21.1 Listen for any 'hissing' sounds which may indicate a fitting or hose air leak.

With Compressor running:

6.5.21.2 Use a 1-inch paint brush to dab soapy water on the air fitting or hose connection to be tested.

If air bubbles appear at the connection, this indicates that air is leaking from the connection.

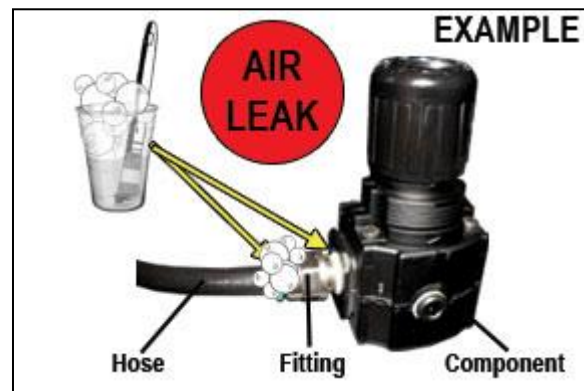

If any leaks are detected, take steps to seal them off (as necessary):

- *Tighten the fitting*
- *Re-connect loose hose*
- *Replace the fitting / hose / component*

6.5.22 Re-install the Front Panel.

6.5.23 REGISTER YOUR DRYER. *See section 7. for details.*

6.6 Installation Checklist

- No shipping damage was detected.
- Dryer location meets the following requirements:
 - Well ventilated
 - Free from abrasive dust or chemicals
 - Ambient temperature is between 40° and 85° F (optimal)
- Shipping foam blocks removed from Compressor.
- System Pressure is set to:
 - 80 PSI** for W & WLP models
 - 90 PSI** for WHP models
- Static Pressure is set to
 - 17 PSI** for W & WLP models
 - 60 PSI** for WHP models
- No air leaks are present in the system.
- No alarms are present on the Display Panel.

7. Registering Your Dryer

Please take a moment to register your ALTEC AIR P1500W Series Air Dryer. Registering is necessary to activate the Limited Warranty on your product. Once you register, you are eligible to receive free technical support, as well as updates concerning your ALTEC AIR products.

Register Online at www.AltecAIR.com/registration

Or by Phone 1-800-521-5351 (option 2)

Have the following information available:

Model #: _____ **Serial #:** _____

Company Name: _____ **Location Name:** _____

Shipping Address: _____

City: _____ **State:** _____ **Zip Code:** _____

Contact Name: _____ **Phone #:** () - ext. _____

Email: _____

8. Operating Your Dryer

8.1 Safety & Warning Information



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.



WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.



WARNING!

High Noise. ALTEC AIR air dryers are meant to be installed in an unattended area.



IMPORTANT!

Performing procedures not described in this User's Guide or installing components not supplied by ALTEC AIR is **NOT RECOMMENDED AND MAY VOID THE WARRANTY.**

8.2 Front Panel Display



CAUTION!

The Display Screen is covered by a clear protective layer that guards against Electrostatic Discharge (ESD). DO NOT REMOVE THIS LAYER.

8.2.1 ALARM LED – Indicates an alarm is present.


8.2.2 RESET Button – Clears an alarm and allows the system to continue operating.

8.2.3 HOLD Button – Freezes the current information screen on the display. When pressed again, it will allow the information screens to begin cycling again.

8.2.4 Arrow Buttons – Used to navigate screens and set values

8.2.5 Display Screen - Shows the current dryer readings. Will cycle between the following information screens (unless the **HOLD** button has been pressed):

8.2.5.1 Tank Screen

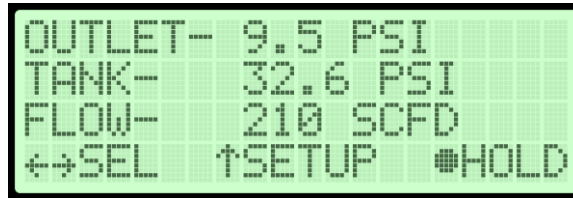

```

OUTLET- 9.5 PSI
TANK- 32.6 PSI
FLOW- 210 SCFD
←→SEL ↑SETUP ●HOLD
  
```

TANK – Air Tank pressure - fluctuates between


- **25 – 90 PSI*** for P1500W, P1500WLP, P1502W & P1502WLP models (* 50 – 90 PSI for Dryers using Firmware v2.84 and older)
- **60 – 90 PSI** for P1500WHP & P1502WHP models

OUTLET – Outlet Pressure regulated by the Outlet Pressure Regulator

Flow – Air flow out of the system

CABINET – Temperature of the dryer cabinet compartment

8.2.5.2 Runtime Screen

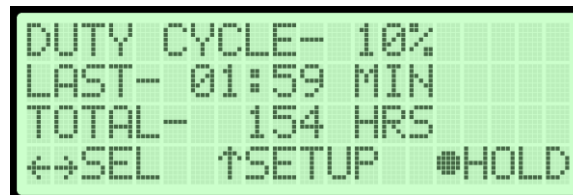

```


DUTY CYCLE- 10%
LAST- 01:59 MIN
TOTAL- 154 HRS
←→SEL ↑SETUP ●HOLD
  
```

DUTY CYCLE: (Time Running)/(Time Running + Time Off)%

LAST RUN – How many minutes the compressor ran during the last Air Tank pressurization cycle.

TOTAL TIME – How many hours the compressor has run since the last Comp Run Reset.

8.2.5.3 System Status Screen

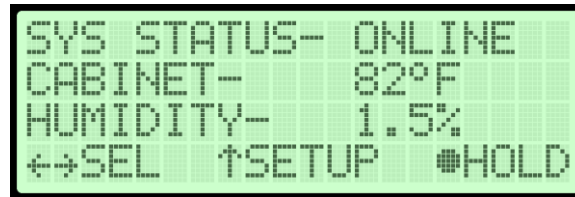

```

SYS STATUS- ONLINE
CABINET- 82°F
HUMIDITY- 1.5%
←→SEL ↑SETUP ●HOLD
  
```


SYS STATUS: ONLINE if dryer working normally, SHUTDOWN during temperature or humidity alarm

CABINET – Cabinet Temperature

HUMIDITY – Outlet Humidity

8.2.6 High Outlet Pressure Alarm -

Occurs when the Outlet Pressure (OUTP) rises above the alarm set point for more than one (1) minute. (Default setting is 12.0

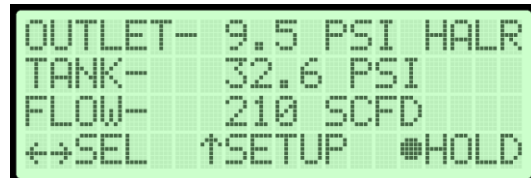

```


OUTLET- 9.5 PSI HALR
TANK- 32.6 PSI
FLOW- 210 SCFD
←→SEL ↑SETUP ●HOLD
  
```

PSI for W models, 7.50 PSI for WLP models & 35.0 PSI for WHP models)

See section 13.5 for troubleshooting information.

8.2.7 Low Outlet Pressure Alarm –

Occurs when the Outlet Pressure (OUTP) drops below the alarm set point for more than one (1) minute. (Default setting is 6.5

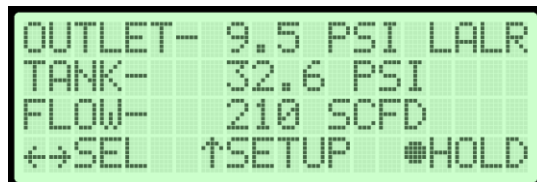

```

OUTLET- 9.5 PSI LALR
TANK- 32.6 PSI
FLOW- 210 SCFD
←→SEL ↑SETUP ●HOLD
  
```

PSI for W models, 0.30 PSI for WLP models & 25.0 PSI for WHP models)

See section 13.7 for troubleshooting information.

8.2.8 High Flow Rate Alarm –

Occurs when the Flow Rate (**FLOW**) rises above the alarm set point for more than one (1) minute. (Default setting is 500 SCFD)

```

OUTLET- 9.5 PSI
TANK- 32.6 PSI
FLOW- 528 SCFD ALR
↔SEL ↑SETUP ●HOLD
  
```

8.2.9 High Humidity Alarm –

Occurs when the Humidity level rises above the alarm set point for more than one (1) minute. (Default setting is 10.0%)

```

SYS STATUS- SHUTDOWN
CABINET- 81°F
HUMIDITY- 15.5%ALR
↔SEL ↑SETUP ●HOLD
  
```

If this alarm is present for one (1) minute or more, the air Dryer will go into **SHUTDOWN** mode to prevent saturated air from being delivered to the supply line.

See section 13.9 for troubleshooting information.

8.2.10 High Cabinet Temperature Alarm -

Occurs when the temperature in the cabinet rises above 120°F for more than ten (10) seconds.

```


SYS STATUS- SHUTDOWN
CABINET- 125°F ALR
HUMIDITY- 15.5%
↔SEL ↑SETUP ●HOLD
  
```

If this alarm is present for three (3) minutes or more, the Compressor will **SHUTDOWN** to protect against damage due to overheating. Once the temperature lowers to 112°F the Compressor will re-start.

See section 0for troubleshooting information.

8.2.11 High Compressor Last Run Time Alarm –

Occurs when the compressor takes longer to pressurize the air tank than the set point for the alarm. (Default setting is 3:00 minutes)

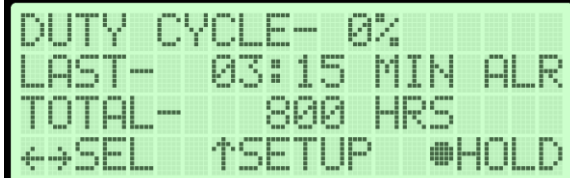

```
DUTY CYCLE- 0%
LAST- 03:15 MIN ALR
TOTAL- 800 HRS
←→SEL ↑SETUP ●HOLD
```

See section 13.17 for troubleshooting information.

8.2.12 Compressor Total Hour Alarm –

Occurs when the compressor has reached an 8,000 hour maintenance interval. Perform the required maintenance.



```
DUTY CYCLE- 0%
LAST- 02:15 MIN
TOTAL- 8002 HRS ALR
←→SEL ↑SETUP ●HOLD
```

See section 10.3 for maintenance information.

8.3 Accessing the Setup Menu

The P1500W has three (3) Setup sections:

- **System Setup** – Used to set specific values for the system.
- **Alarm Setup**– Used to set the alarm thresholds for specific readings. Once the threshold is reached (or exceeded) this results in an alarm. Each of these thresholds is factory programmed with a default value. Many of can be modified to levels based upon your specific application.
- **Network Setup** – Used to configure network settings including the IP Address, Subnet Mask, Gateway Address, and Keyword.

- 8.3.1** Press the Up (↑) Arrow Button to access the Setup Menu.

```
SYSTEM 1 : ONLINE
HUMIDITY-   1.9%
DUTY CYCLE- 29%
←→SEL  ↑SETUP  ●HOLD
```

- 8.3.2** Press the Up (↑) & Down (↓) Arrow Buttons to Select the required menu option.

- 8.3.3** Press the Enter (●) Button to access the menu selected or press the Left (←) Arrow Button to Escape to the information screens.

```
SYSTEM SETUP
ALARM SETUP
NETWORK SETUP
←ESC  ↑↓SEL  ●ENTER
```

8.4 Using the System Setup Menu

In the Setup Menu:

- 8.4.1** Press the Up (↑) & Down (↓) Arrow Buttons to Select the “S” in System Setup.

- 8.4.2** Press the Enter (●) Button to access System Setup.

```
SYSTEM SETUP
ALARM SETUP
NETWORK SETUP
←ESC  ↑↓SEL  ●ENTER
```


- 8.4.3 Set Alarm Delay** (default setting is ON) –

- 8.4.3.1** Press the Enter (●) Button to access the edit screen.

```
SET ALARM DELAY
OFF
←Esc  ↑↓Scroll  ●Enter
```

- 8.4.3.2** Press the Up & Down Arrow Buttons to Select the correct choice (On or Off).


- 8.4.3.3** Press the Enter (●) Button to submit the selection.

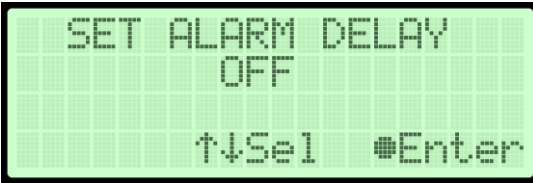

```

SET ALARM DELAY
  OFF
      ↑↓Sel  ●Enter
  
```

- 8.4.3.4** Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).

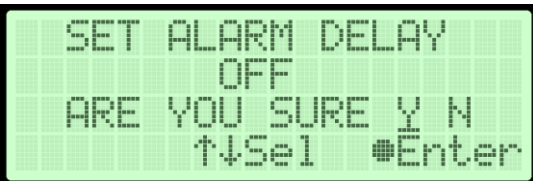

```


SET ALARM DELAY
  OFF
ARE YOU SURE Y N
      ↑↓Sel  ●Enter
  
```

- 8.4.3.5** Press the Enter (●) Button to confirm the selected choice. This will lock in the new setting.

- 8.4.4** Press the Up (↑) Arrow Button to access the next screen.

- 8.4.5 Set Start Up Delay** (default setting is 0 seconds) –


- 8.4.5.1** Press the Enter (●) Button to access the edit screen.

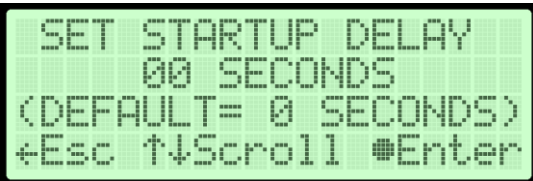

```

SET STARTUP DELAY
  00 SECONDS
(DEFAULT= 0 SECONDS)
←Esc ↑↓Scroll ●Enter
  
```

- 8.4.5.2** Press the Up & Down Arrow Buttons to Select the digit to change.

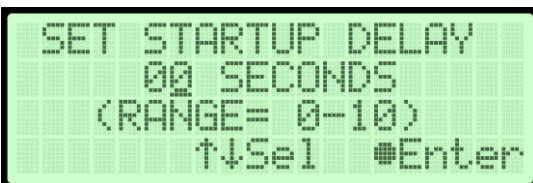

```

SET STARTUP DELAY
  00 SECONDS
(RANGE= 0-10)
      ↑↓Sel  ●Enter
  
```

- 8.4.5.3** Press the Up (↑) & Down (↓) Arrow Buttons to Change the value of the selected digit.

- 8.4.5.4** Press the Enter (●) Button to submit the new setting.

8.4.5.5 Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).



```

SET STARTUP DELAY
00 SECONDS
ARE YOU SURE Y N
↑↓Chg #Enter


```

8.4.5.6 Press the Enter (●) Button to confirm the selected choice. This will lock in the new setting.

8.4.6 Press the Up (↑) Arrow Button to access the next screen.

8.4.7 Reset Compressor Total Time –

8.4.7.1 Press the Enter (●) Button to access the reset screen.

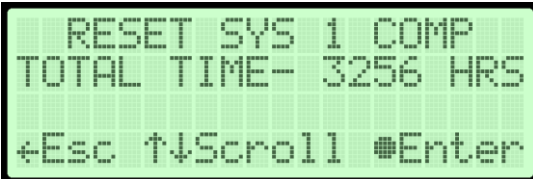


```

RESET SYS 1 COMP
TOTAL TIME- 3256 HRS
←Esc ↑↓Scroll #Enter

```

8.4.7.2 Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).

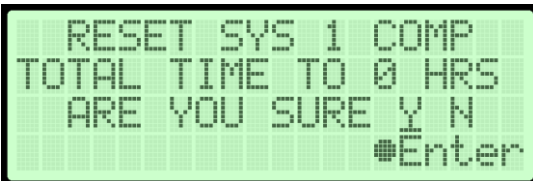

```

RESET SYS 1 COMP
TOTAL TIME TO 0 HRS
ARE YOU SURE Y N
↑↓Scroll #Enter


```

8.4.7.3 Press the Enter (●) Button to confirm the selected choice. This will reset the Total Time to zero (0).

8.4.8 Press the Up (↑) Arrow Button to access the next screen.

8.4.9 Reset to Factory Default Values –

8.4.9.1 Press the Enter (●) Button to access the reset screen.

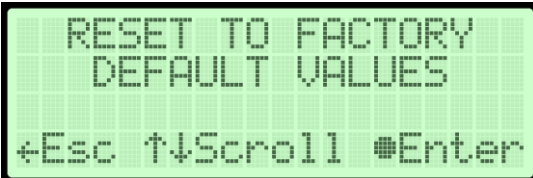


```

RESET TO FACTORY
DEFAULT VALUES
←Esc ↑↓Scroll #Enter

```

8.4.9.2 Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).

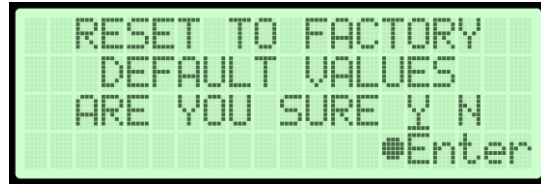


8.4.9.3 Press the Enter (●) Button to confirm the selected choice. This will reset all settings to Factory Default Values


8.4.10 Press the Up (↑) Arrow Button to access the next screen.

8.4.11 Set Date –

8.4.11.1 Press the Enter (●) Button to access the edit screen.

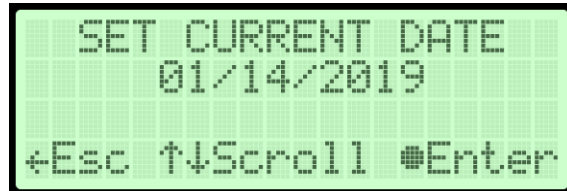


8.4.11.2 Press the Left (←) & Right (→) Arrow Buttons to Select the digit to change.

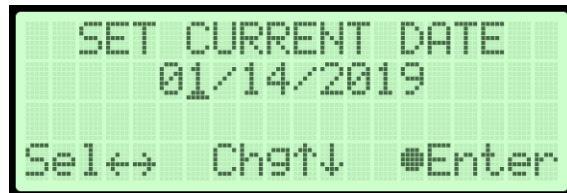

8.4.11.3 Press the Up (↑) & Down (↓) Arrow Buttons to Change the value of the selected digit.

8.4.11.4 Press the Enter (●) Button to submit the new setting.

8.4.11.5 Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).

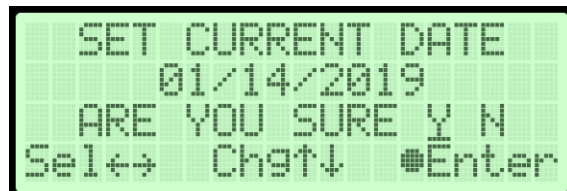

8.4.11.6 Press the Enter (●) Button to confirm the selected choice. This will lock in the new setting.

8.4.12 Set Time –

8.4.12.1 Press the Enter (●) Button to access the edit screen.

```

SET CURRENT TIME
  20:04
←Esc ↑↓Scroll ●Enter
  
```

8.4.12.2 Press the Left (←) & Right (→) Arrow Buttons to Select the digit to change.

```

SET CURRENT TIME
  20:04
Sel←→ Chg↑↓ ●Enter
  
```

8.4.12.3 Press the Up (↑) & Down (↓) Arrow Buttons to Change the value of the selected digit.

8.4.12.4 Press the Enter (●) Button to submit the new setting.

8.4.12.5 Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).

```

SET CURRENT TIME
  20:04
ARE YOU SURE Y N
Sel←→ Chg↑↓ ●Enter
  
```

8.4.12.6 Press the Enter (●) Button to confirm the selected choice. This will lock in the new setting.

8.4.1 Firmware Update –

8.4.1.1 Insert a USB drive containing an appropriate “.pgz” firmware file from Altec

```


FIRMWARE UPDATE
VERSION: 0.1.2
LIB : 0.1.0
←Esc ↑↓Sel ●Update
  
```

```

SELECT A FILE
v0.1.2
←Esc ↑↓Sel ●Update
  
```

Air into the USB A port on the control board.

- 8.4.1.2** Press the Enter (●) Button to access the Firmware Update Screen.

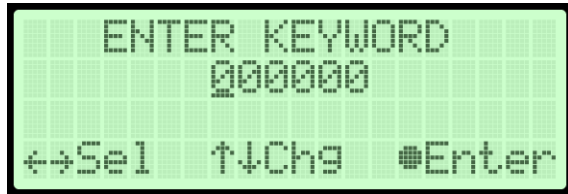


- 8.4.1.3** Enter the device keyword and press the Enter (●) Button to access the firmware update screen.

- 8.4.1.4** Select the correct file version using the Up (↑) and Down (↓) Buttons

- 8.4.1.5** Press the Enter (●) button to select the file


- 8.4.1.6** Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No) and begin the update.

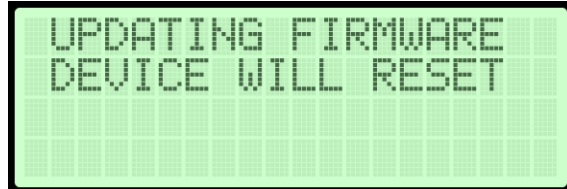

8.4.2 System Units–


- 8.4.2.1** Press the Enter (●) Button to access the edit screen.

- 8.4.2.2** Press the Up (↑) and Down (↓) Arrow Buttons to Change the value.

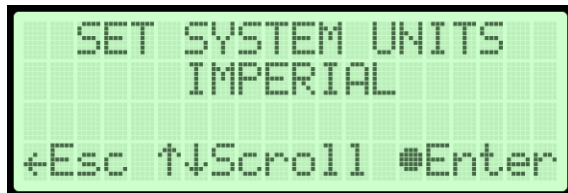


- 8.4.2.3** Press the Enter (●) Button to submit the new setting.

- 8.4.2.4** Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).

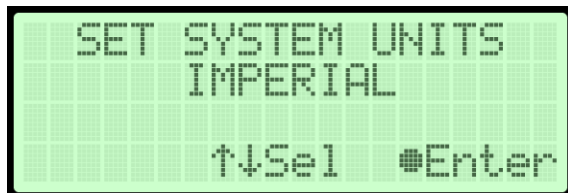

- 8.4.2.5** Press the Enter (●) Button to confirm the selected choice. This will lock in the new setting.

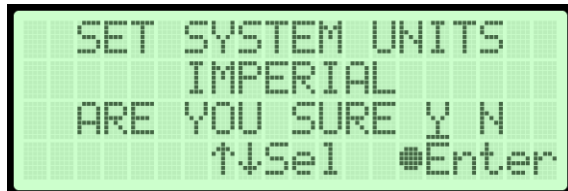


8.4.3 Set device type–

8.4.3.1 This screen allows you to set the device type, if your board is new, or the incorrect device type has been configured

8.4.3.2 Press the Enter (●) Button to access the edit screen.

8.4.3.3 Press the Up (↑) and Down (↓) Arrow Buttons to Change the value.

8.4.3.4 Press the Enter (●) Button to submit the new setting.

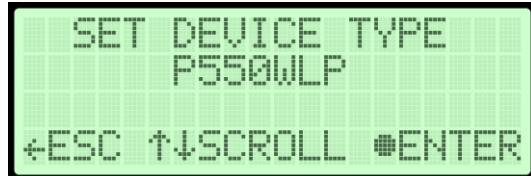

```

SET DEVICE TYPE
P550WLP
←ESC ↑↓SCROLL ●ENTER
  
```


8.4.3.5 Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).

8.4.3.6 Press the Enter (●) Button to confirm the selected choice. This will reset the device and lock in the new setting.

8.5 Using the Alarm Setup Menu

In the Setup Menu:

8.5.1 Press the Up (↑) & Down (↓) Arrow Buttons to Select the “A” in Alarm Setup.

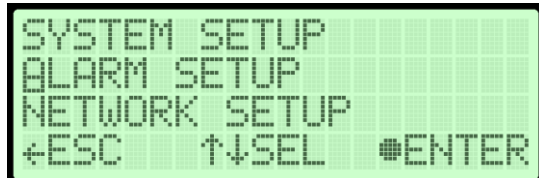


```

SYSTEM SETUP
ALARM SETUP
NETWORK SETUP
←ESC ↑↓SEL ●ENTER
  
```

8.5.2 Press the Enter (●) Button to access Alarm Setup.

8.5.3 Set High Humidity Threshold (default setting is 10%) –


8.5.3.1 Press the Enter (●) Button to access the edit screen.

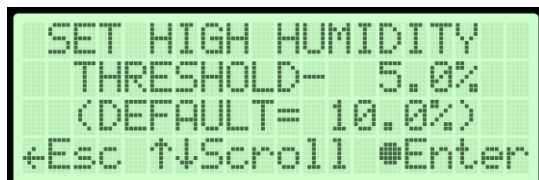

```

SET HIGH HUMIDITY
THRESHOLD- 5.0%
(DEFAULT= 10.0%)
←Esc ↑↓Scroll ●Enter
  
```

8.5.3.2 Press the Left (←) & Right (→) Arrow Buttons to select the digit to change.

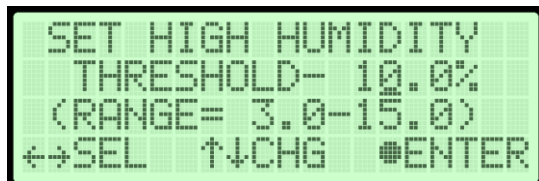

```

SET HIGH HUMIDITY
THRESHOLD- 10.0%
(RANGE= 3.0-15.0)
←→SEL ↑↓CHG ●ENTER
  
```

8.5.3.3 Press the Up (↑) & Down (↓) Arrow Buttons to Change the value of the selected digit.

8.5.3.4 Press the Enter (●) Button when to submit the new setting.

8.5.3.5 Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).

SET HIGH HUMIDITY
THRESHOLD- 10.0%
ARE YOU SURE Y N
SEL←→ ↑↓Ch9 ●ENTER

8.5.3.6 Press the Enter (●) Button to confirm the selected choice. This will lock in the new setting.

8.5.4 Press the Up (↑) Arrow Button to access the next screen.

8.5.5 Set High Outlet Threshold (default setting is 20.00 PSI) –

8.5.5.1 Press the Enter (●) Button to access the edit screen.

SET HIGH OUTLET
THRESHOLD- 10.5 PSI
(DEFAULT= 7.5 PSI)
←ESC ↑↓SCROLL ●ENTER

8.5.5.2 Press the Left (←) & Right (→) Arrow Buttons to Select the digit to change.

8.5.5.3 Press the Up (↑) & Down (↓) Arrow Buttons to Change the value of the selected digit.

8.5.5.4 Press the Enter (●) Button when to submit the new setting.

SET HIGH OUTLET
THRESHOLD- 10.5 PSI
ARE YOU SURE Y N
←→Sel ↑↓Ch9 ●Enter


8.5.5.5 Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).

8.5.5.6 Press the Enter (●) Button to confirm the selected choice. This will lock in the new setting.

8.5.6 Press the Up (↑) Arrow Button to access the next screen.

8.5.7 Set Low Pressure Threshold (default setting is 0.30 PSI) –

8.5.7.1 Press the Enter (●) Button to access the edit screen.

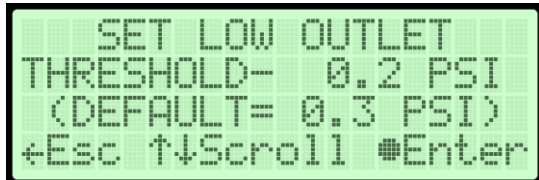

SET LOW OUTLET
THRESHOLD- 0.2 PSI
(DEFAULT= 0.3 PSI)
←Esc ↑↓Scroll #Enter

8.5.7.2 Press the Left (←) & Right (→) Arrow Buttons to Select the digit to change.

8.5.7.3 Press the Up (↑) & Down (↓) Arrow Buttons to Change the value of the selected digit.

8.5.7.4 Press the Enter (●) Button when to submit the new setting.

8.5.7.5 Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).

8.5.7.6 Press the Enter (●) Button to confirm the selected choice. This will lock in the new setting.

8.5.8 Press the Up (↑) Arrow Button to access the next screen.

8.5.9 Set High Flow Threshold (default setting is 1500 SCFD)

8.5.9.1 Press the Enter (●) Button to access the edit screen.

8.5.9.2 Press the Left (←) & Right (→) Arrow Buttons to Select the digit to change.

8.5.9.3 Press the Up (↑) & Down (↓) Arrow Buttons to Change the value of the selected digit.

8.5.9.4 Press the Enter (●) Button when to submit the new setting.


8.5.9.5 Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).

8.5.9.6 Press the Enter (●) Button to confirm the selected choice. This will lock in the new setting.

8.5.10 Press the Up (↑) Arrow Button to access the next screen.

8.5.11 Set High Duty Cycle (default setting is 70%)

8.5.11.1 Press the Enter (●) Button to access the edit screen.

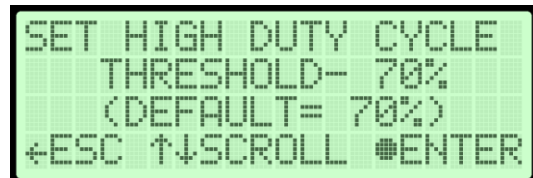

```
SET HIGH DUTY CYCLE
THRESHOLD- 70%
(DEFAULT= 70%)
←ESC ↑↓SCROLL ●ENTER
```

8.5.11.2 Press the Left (←) & Right (→) Arrow Buttons to Select the digit to change.

8.5.11.3 Press the Up (↑) & Down (↓) Arrow Buttons to Change the value of the selected digit.


8.5.11.4 Press the Enter (●) Button when to submit the new setting.

8.5.11.5 Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No)

In the Setup Menu:

8.5.12 Press the Up (↑) & Down (↓) Arrow Buttons to Select the “N” in Network Setup.

8.5.12.1 Press the Enter (●) Button to access Network Setup.

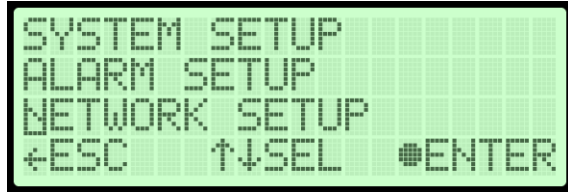


```

SYSTEM SETUP
ALARM SETUP
NETWORK SETUP
←ESC   ↑↓SEL   ●ENTER
  
```

8.5.13 **Enter Keyword** (default Keyword is 123456) –

8.5.13.1 Press the Left (←) & Right (→) Arrow Buttons to Select the digit to change.

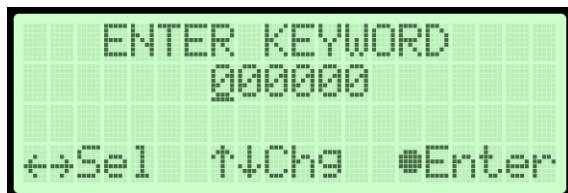

```


ENTER KEYWORD
000000
←→Sel  ↑↓Chg  ●Enter
  
```

8.5.13.2 Press the Up (↑) & Down (↓) Arrow Buttons to Change the value of the selected digit.

8.5.13.3 Press the Enter (●) Button to submit the Keyword.

8.5.14 **Set IP Address** (default is 192.168.1.102) –

8.5.14.1 Press the Enter (●) Button to access the edit screen.

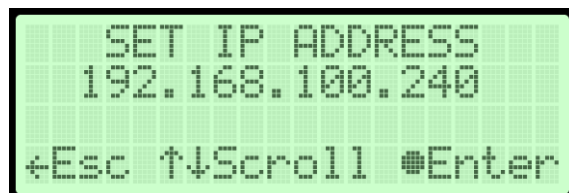

```

SET IP ADDRESS
192.168.100.240
←Esc  ↑↓Scroll  ●Enter
  
```

8.5.14.2 Press the Left (←) & Right (→) Arrow Buttons to Select the digit to change.

8.5.14.3 Press the Up (↑) & Down (↓) Arrow Buttons to Change the value of the selected digit.




```

SET IP ADDRESS
192.168.100.240
Sel←→  Chg↑↓  ●Enter
  
```

8.5.14.4 Press the Enter (●) Button when to submit the new setting.

8.5.14.5 Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).

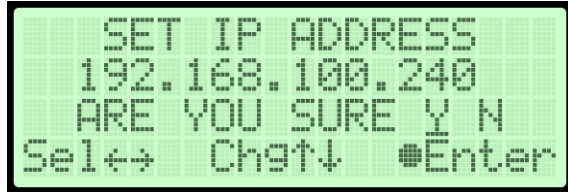

```

SET IP ADDRESS
192.168.100.240
ARE YOU SURE Y N
Sel←→ Chg↑↓ ●Enter


```

8.5.14.6 Press the Enter (●) Button to confirm the selected choice. This will lock in the new setting.

8.5.15 Set Subnet Mask (default is 255.255.255.000) –

8.5.15.1 Press the Enter (●) Button to access the edit screen.

8.5.15.2 Press the Left (←) & Right (→) Arrow Buttons to Select the digit to change.

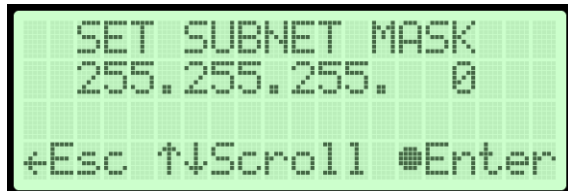


```

SET SUBNET MASK
255.255.255. 0
←Esc ↑↓Scroll ●Enter

```

8.5.15.3 Press the Up (↑) & Down (↓) Arrow Buttons to Change the value of the selected digit.

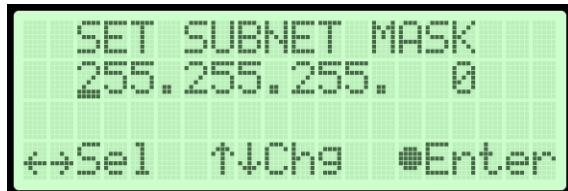


```

SET SUBNET MASK
255.255.255. 0
←→Sel ↑↓Chg ●Enter

```

8.5.15.4 Press the Enter (●) Button when to submit the new setting.

8.5.15.5 Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).

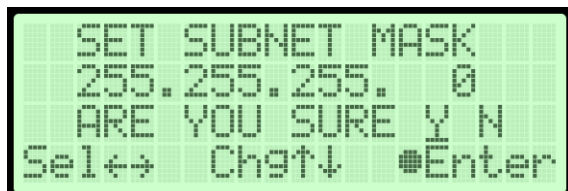

```

SET SUBNET MASK
255.255.255. 0
ARE YOU SURE Y N
Sel←→ Chg↑↓ ●Enter


```

8.5.15.6 Press the Enter (●) Button to confirm the selected choice. This will lock in the new setting.

8.5.16 Set Gateway Address (default is 000.000.000.000) –


8.5.16.1 Press the Enter (●) Button to access the edit screen.

8.5.16.2 Press the Left (←) & Right (→) Arrow Buttons to Select the digit to change.

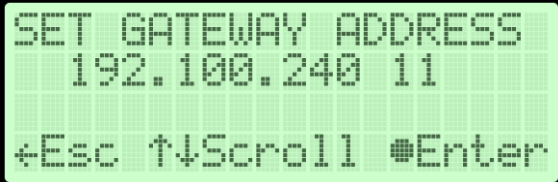

```
SET GATEWAY ADDRESS
 192.100.240 11
←Esc ↑↓Scroll ●Enter
```

8.5.16.3 Press the Up (↑) & Down (↓) Arrow Buttons

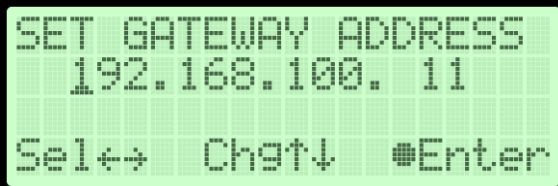


```
SET GATEWAY ADDRESS
 192.168.100. 11
Sel←→ Chg↑↓ ●Enter
```

to Change the value of the selected digit.

8.5.16.4 Press the Enter (●) Button when to submit the new setting.

8.5.16.5 Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).

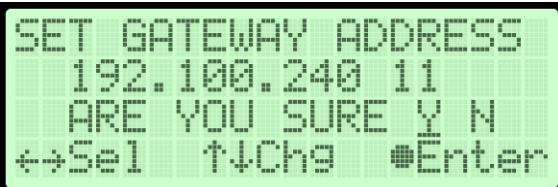


```
SET GATEWAY ADDRESS
 192.100.240 11
 ARE YOU SURE Y N
←→Sel ↑↓Chg ●Enter
```

8.5.16.6 Press the Enter (●) Button to confirm the selected choice. This will lock in the new setting.

8.5.17 Set SNMP Trap Server (default is 000.000.000.000) –

8.5.17.1 Press the Enter (●) Button to access the edit screen.



```
SET SNMP TRAP SERVER
 192.168.100.211
←Esc ↑↓Scroll ●Enter
```

8.5.17.2 Press the Left (←) & Right (→) Arrow Buttons to Select the digit to change.


8.5.17.3 Press the Up (↑) & Down (↓) Arrow Buttons to Change the value of the selected digit.



```
SET SNMP TRAP SERVER
 192.168.100.211
←→Sel  ↑↓Chg  #Enter
```

8.5.17.4 Press the Enter (●) Button when to submit the new setting.

8.5.17.5 Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).

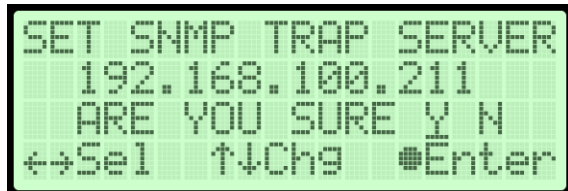


```
SET SNMP TRAP SERVER
 192.168.100.211
 ARE YOU SURE Y N
←→Sel  ↑↓Chg  #Enter
```

8.5.17.6 Press the Enter (●) Button to confirm the selected choice. This will lock in the new setting.

8.5.18 Change Keyword (default is 123456) –


8.5.18.1 Press the Enter (●) Button to access the edit screen.

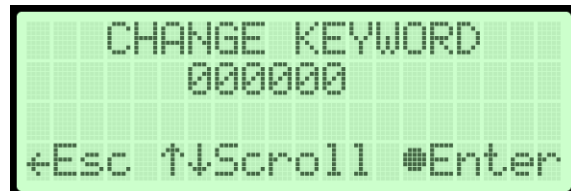

```
CHANGE KEYWORD
 000000
←Esc  ↑↓Scroll  #Enter
```

8.5.18.2 Press the Left (←) & Right (→) Arrow Buttons to Select the digit to change.


8.5.18.3 Press the Up (↑) & Down (↓) Arrow Buttons to Change the value of the selected digit.

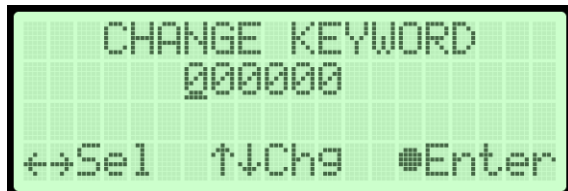

```
CHANGE KEYWORD
 000000
←→Sel  ↑↓Chg  #Enter
```

8.5.18.4 Press the Enter (●) Button when to submit the new setting.


8.5.18.5 Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).

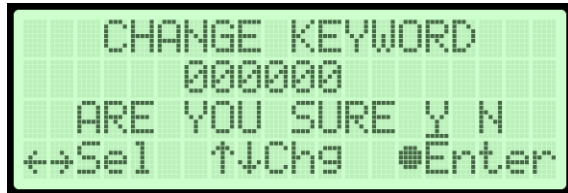

8.5.18.6 Press the Enter (●) Button to confirm the selected choice. This will lock in the new settings


8.5.19 Set Monitoring System Address (default is 0) –

8.5.19.1 Press the Enter (●) Button to access the edit screen.

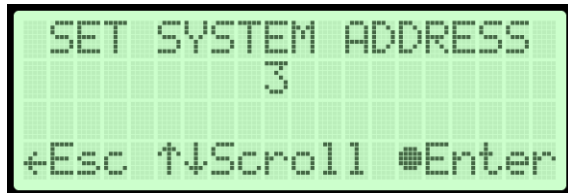


8.5.19.2 Press the Up (↑) & Down (↓) Arrow Buttons to Change the value

8.5.19.3 Press the Enter (●) Button when to submit the new setting.

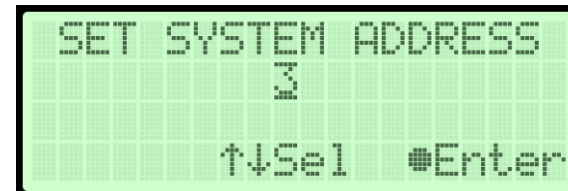

8.5.19.4 Press the Left (←) & Right (→) Arrow Buttons to Select the correct choice (Yes or No).

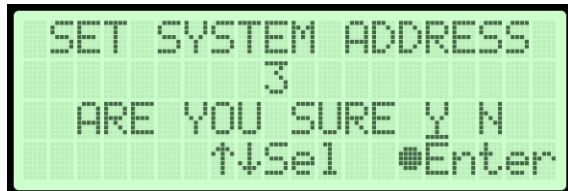

8.5.19.5 Press the Enter (●) Button to confirm the selected choice. This will lock in the new setting.

8.5.20 View MAC address

- 8.5.20.1** The device MAC address can be viewed from the network setup menu



8.6 Open Front Panel

- 8.6.1** Open Front Panel locking latches and remove the Front Panel.



8.7 Depressurizing the Dryer

- 8.7.1** Open Front Panel (section 8.6).

- 8.7.2** Pull the ring handle on the Safety Relief Valve until all the air pressure is released.

- 8.7.3** To prevent pressure from building back up, power the dryer **OFF**



- 8.7.4** Close Front Panel.


8.8 Connecting to Common Alarm Terminals

8.8.1 Locate the external Common Alarm pins on the Control Board

8.8.2 Wire the Common Alarm wire pair to the Control Board as required:

- **COMMON & NO** for CLOSE ON ALARM operation.
- **NC & COMMON** for OPEN ON ALARM operation.

8.8.3 Close Panel.

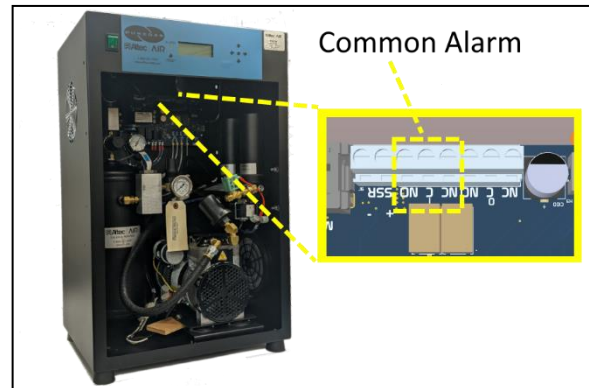

8.9 Connecting to Power Fail Alarm Terminals


8.9.1 Open Panel

8.9.2 Locate the external Power Fail pins on the Control Board.

8.9.3 Wire the Power Fail Alarm wire pair to the Control Board as required:

- **PWR FAIL & NC** for CLOSE ON ALARM operation.
- **NO & PWR FAIL** for OPEN ON ALARM operation

8.9.4 Close Panel.

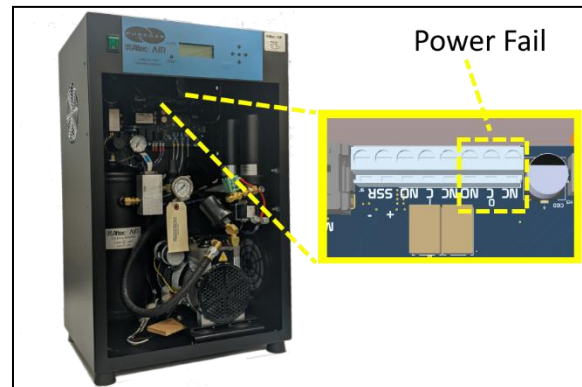

8.10 Connecting via Web Browser

If the Air Dryer IS connected to an IP network:

- The Air Dryer must be configured with a valid IP Address, Subnet Mask, and Gateway Address for the network.
- An IP cable is connecting the Air Dryer to the network.

- Use a computer that is on the same network as the air Dryer.
- Use Internet Explorer (6.0 or newer) or Mozilla Firefox Web Browser.

If the Air Dryer IS NOT connected to an IP network and has not been configured with IP information:

- Use the default IP Address (*192.168.1.102*) of the air dryer to connect.
- Use an IP Cable (may require Cross-over cable) plugged directly into a Laptop/PC and the other end plugged into the UTP Port on the Control Board of the Air Dryer.
- Configure the network card on the Laptop/PC to use the IP Address *192.168.1.101*. This will make the Laptop/PC compatible with the Air Dryer.
- Use Internet Explorer (6.0 or newer) or Mozilla Firefox Web Browser.


8.10.1 Type the IP Address of the P1500W Series air Dryer in the Address text box of the web browser.

The Web Browser connection offers five (5) screens to the user:

- **Status Screen** - Displays the readings and alarms monitored in the P1500W Series Air Dryer. Provides remote ALARM RESET.
- **Setup Screen** - All configurations of Set Points, Setups, and Keyword can be made in this screen.
- **Event/Alarm Screen** - Displays all events such as alarms, changes made, and alarm resets registered by the P1500W Series Air Dryer. This screen is informational only.
- **Firmware Screen** – Allows the user to upload any software updates or upgrades to the Air Dryer.

8.11 Using the Status Screen

Displays the readings and alarms monitored in the P1500W Series Air Dryer.
Provides remote ALARM RESET.

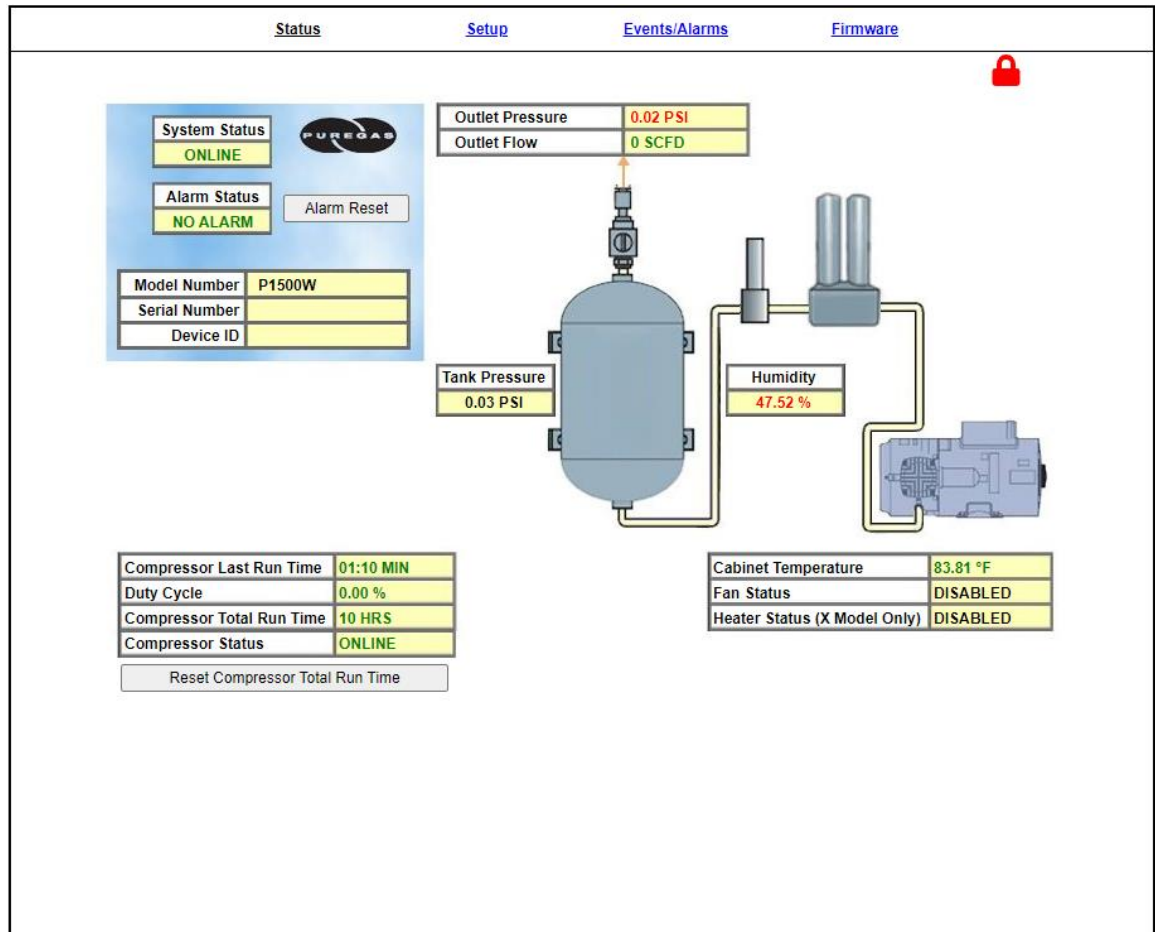


- Readings are displayed in **BLACK** unless an alarm is present.
- Alarms are displayed in **RED** next to the parameter in alarm.


- Alarm Status will display **Alarm** if any alarms are present.
- Keyword validation is required for ALARM RESET and RESET TOTAL RUN TIME.

8.11.1 Resetting an Alarm

8.11.1.1 Click on the **ALARM RESET** Button to remotely reset Air Dryer alarms displayed on Status Screen.

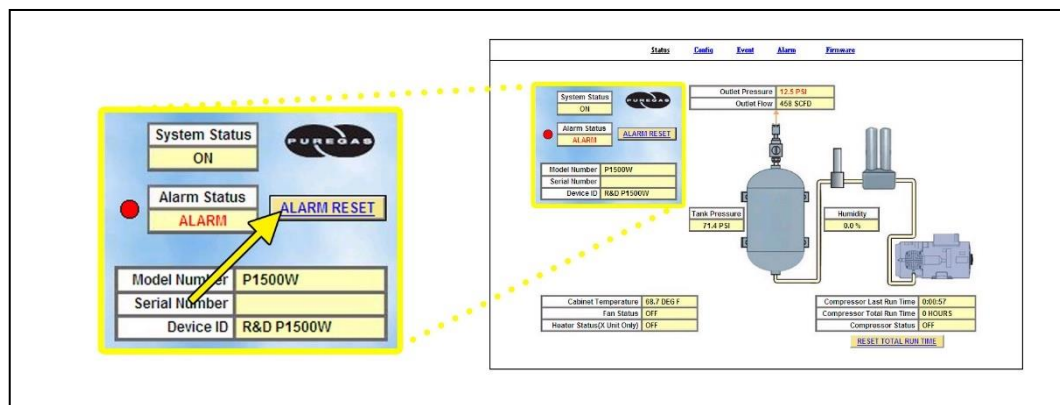


8.11.1.2 Enter Keyword (default is 123456)

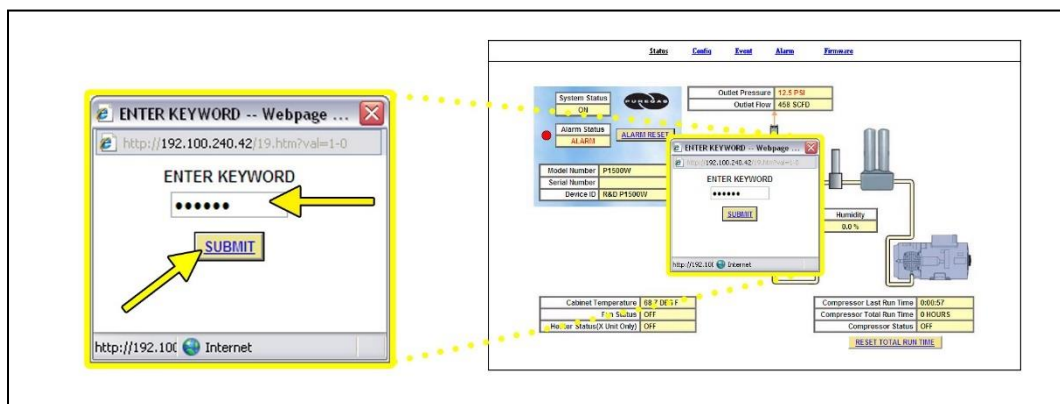


8.11.1.3 Click on **SUBMIT** Button when done.

8.11.2 Resetting Compressor Total Run Time

8.11.2.1 Click on the **RESET TOTAL RUN TIME** Button to remotely reset Compressor Total Run Time displayed on Status Screen.

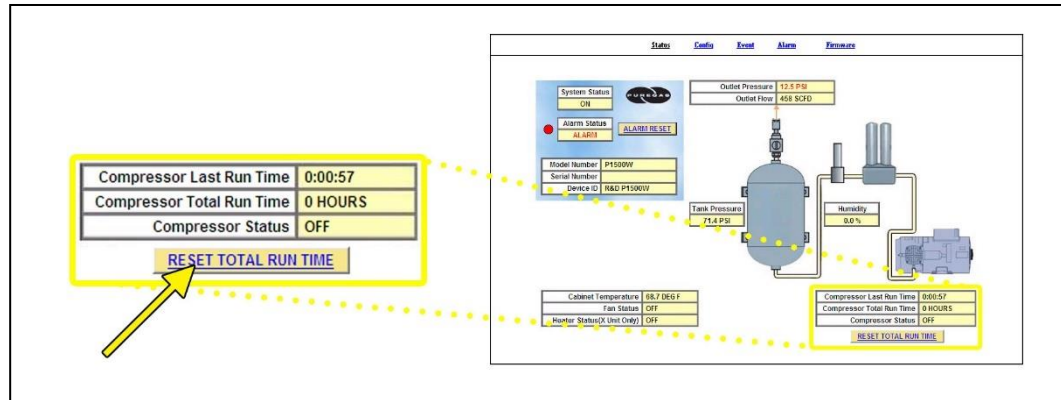


8.11.2.2 Enter Keyword (default is 123456)

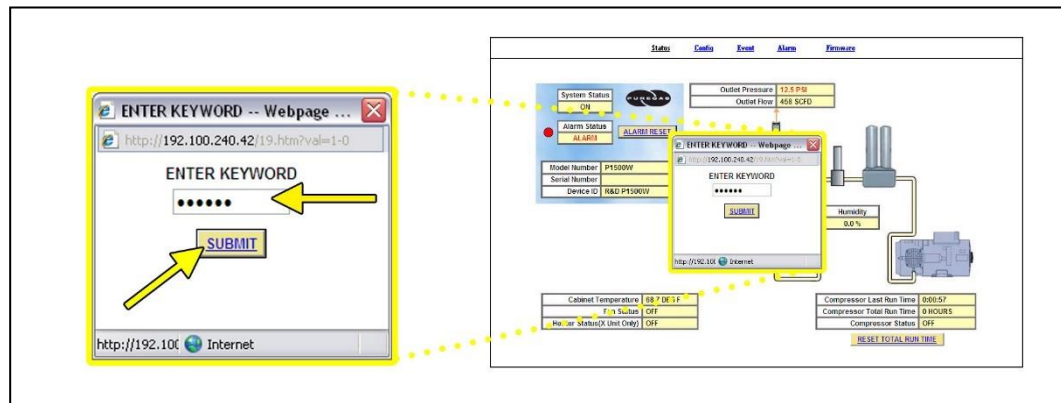

8.11.2.3 Click on **SUBMIT** Button when done.

8.12 Using the Configuration Screen

All configuration of Set Points, Setups, and Keyword can be made in this screen.

Status	Setup	Events/Alarms	Firmware	
				
SYSTEM SETUP				
Description		Setting		
Alarm Delay	<input checked="" type="radio"/> ON <input type="radio"/> OFF			
Startup Delay	NONE <input type="button" value="v"/>			
Units	Imperial <input type="button" value="v"/>			
Current Date	08/09/2021			
Current Time	23:52			
Device ID				
Keyword	*****			
<input type="button" value="Reset All Alarm Settings To Factory Default Values"/>				
ALARM SETUP				
Description	Default	Range	Current Setting	Unit
High Flow	1500.0	0.0 - 2000.0	1500	SCFD
High Outlet Pressure	12.0	0.6 - 20.0	12.0	PSI
Low Outlet Pressure	6.5	0.5 - 19.9	6.5	PSI
High Humidity	10.0	3.0 - 15.0	10.0	%
High Duty Cycle	70	0 - 99	70	%
High Compressor Last Run Time	3:00	1:00 - 59:59	03:00	MIN:SEC
NETWORK SETUP				
Description		Setting		
IP Address	10.50.137.31			
Subnet Mask	255.255.255.0			
Gateway Address	10.50.137.1			
SNMP Trap Server Address 1	0.0.0.0			
SNMP Trap Server Address 2	0.0.0.0			
SNMP Trap Server Address 3	0.0.0.0			
SNMP Trap Server Address 4	0.0.0.0			

NOTE: Reference Appendix section 14.2 for Limits, Defaults, and Formats.

- Values in **BLUE** represent the current setting.
- The **Enter Key** is used to change values.
- Clicking the Keyword allows you to configure a new Keyword.
- Keyword validation is required for the following:
 - Changing a Set Point value
 - Changing the Keyword

8.13 Using the Event Screen

Displays all events such as alarms, changes made, and alarm resets registered by the P1500W Series Air Dryers. This screen is informational only.

Status		Setup	Events/Alarms	Firmware
Event Type	Description			Timestamp
Parameter Change	High Flow Threshold Changed From "1500.0 SCFD" to "900.0 SCFD"			5/6/2021, 9:54:38 AM
Parameter Change	Low Outlet Pressure Threshold Changed From "6.5 PSI" To "6.5 PSI"			5/6/2021, 9:52:18 AM
Alarm	High Humidity System 1 (System SHUTDOWN)			5/6/2021, 9:49:24 AM
Info	Unit Power On (Firmware: 0.3.7 Library: 0.1.2)			5/6/2021, 9:46:18 AM
Parameter Change	Setting Device type to : P550WLP			5/6/2021, 9:45:57 AM
Alarm	High Humidity System 1 (System SHUTDOWN)			5/6/2021, 9:35:55 AM
Info	Unit Power On (Firmware: 0.3.7 Library: 0.1.2)			5/6/2021, 9:32:50 AM
Alarm	High Humidity System 1 (System SHUTDOWN)			5/4/2021, 1:26:05 PM
Info	Unit Power On (Firmware: 0.3.7 Library: 0.1.2)			5/4/2021, 1:23:00 PM
Alarm	High Humidity System 1 (System SHUTDOWN)			4/29/2021, 10:17:49 AM
Info	Unit Power On (Firmware: 0.3.7 Library: 0.1.2)			4/29/2021, 10:14:43 AM
Info	Unit Power On (Firmware: 0.3.7 Library: 0.1.2)			4/27/2021, 2:20:24 PM
Info	Unit Power On (Firmware: 0.3.7 Library: 0.1.2)			4/27/2021, 1:40:44 PM
Info	Unit Power On (Firmware: 0.3.7 Library: 0.1.2)			4/27/2021, 1:38:48 PM
Info	Unit Power On (Firmware: 0.3.7 Library: 0.1.2)			4/27/2021, 1:15:48 PM
Info	Unit Power On (Firmware: 0.3.7 Library: 0.1.2)			4/27/2021, 12:59:42 PM
Info	Unit Power On (Firmware: 0.3.7 Library: 0.1.2)			4/27/2021, 11:50:36 AM
Info	Unit Power On (Firmware: 0.3.7 Library: 0.1.2)			4/27/2021, 11:23:58 AM
Parameter Change	LOGGING STOPPED			4/27/2021, 9:36:51 AM
Info	Unit Power On (Firmware: 0.3.7 Library: 0.1.2)			4/26/2021, 4:05:57 PM
Parameter Change	LOGGING STARTED			4/26/2021, 4:05:57 PM
Info	Unit Power On (Firmware: 0.3.6 Library: 0.1.2)			4/26/2021, 3:18:06 PM

8.14 Using the Firmware Screen

Displays the current firmware version and date of the P1500W Series Air Dryers.

Status	Setup	Events/Alarms	Firmware						
<table border="1"><tr><td>Current Version:</td><td>Firmware Version: 0.3.7</td><td>Library Version: 0.1.2</td></tr><tr><td>New Version File:</td><td><input type="button" value="Choose File"/></td><td>No file chosen</td></tr></table>				Current Version:	Firmware Version: 0.3.7	Library Version: 0.1.2	New Version File:	<input type="button" value="Choose File"/>	No file chosen
Current Version:	Firmware Version: 0.3.7	Library Version: 0.1.2							
New Version File:	<input type="button" value="Choose File"/>	No file chosen							
<input type="button" value="ACCEPT"/>									

- **Current Version:** Displays the current firmware version of the P1500W Air Dryer.
- **New Version File:** Displays the new location and new firmware version chosen.
- The **BROWSE** Button allows you to locate the new firmware file.
- The **ACCEPT** Button is used to change values.
- Keyword validation is required to update firmware.

8.15 Connecting via SNMP

Using SNMP to connect and communicate with the P1500W Series Air Dryer is dependent upon the specific SNMP Management software used on your network. This software requires a SNMP Definition & Configuration File (MIB file) in order to properly communicate with the Air Dryer.

The files for the P1500W Series Air Dryers can be downloaded from our website (AltecAIR.com) under the Product Support section SNMP Files link. It is necessary to import this file into your SNMP operating software.

NOTE: Reference Appendix section 14.3 for a list of SNMP Parameters including Limits, Defaults, and Formats.

9. Testing Your Dryer

9.1 Safety & Warning Information



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.



WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.



CAUTION!

Depressurizing the air dryer may be necessary before performing certain procedures. **NEVER** remove pressure sensing tubes from the control board without depressurizing the air dryer first, or **damage to the control board will occur.**

9.2 Measuring Compressor Amp Draw




WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some these components to become hot when in operation or standby.

With the Compressor running:

9.2.1 Open Front Panel (section 8.6).

9.2.2 Locate wire #5 coming directly from the Compressor.

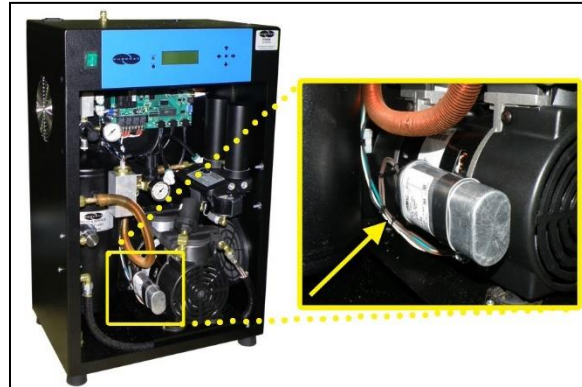

9.2.3 Use an Amp Meter to measure the running amps. With the Compressor running, the running amps should measure:

- **6.3 amps or below** for the P1500W, P1500WLP & P1500WHP models
- **3.2 or below** for the P1502W, P1502WLP & P1502WHP models



If the Compressor measures over running amps indicated above, see section 13.16 for troubleshooting information.

9.2.4 Close Front Panel.

9.3 Measuring Compressor Voltage



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. It is highly recommended that you remove all jewelry before performing any procedures.

9.3.1 Power the air dryer **OFF**

9.3.2 Open Front Panel (section 8.6).

9.3.3 Depressurize the air dryer (section 8.7).

9.3.4 Locate wire #5 at the solid state relay and wire #6 on Control Board.

9.3.5 Lift plastic cover on Control Board over wire #6.

9.3.6 Power the air dryer ON

9.3.7 Use a Voltmeter to measure the voltage:



9.3.7.1 Place the probes over terminals for wire #5 and wire #6.

The voltage should measure:

- **110 - 125 VAC** for the P1500W, P1500WLP & P1500WHP models
- **208 - 230 VAC** for the P1502W, P1502WLP & P1502WHP models

9.3.8 Close plastic cover on Control Board over wire #6.

9.3.9 Close Front Panel.

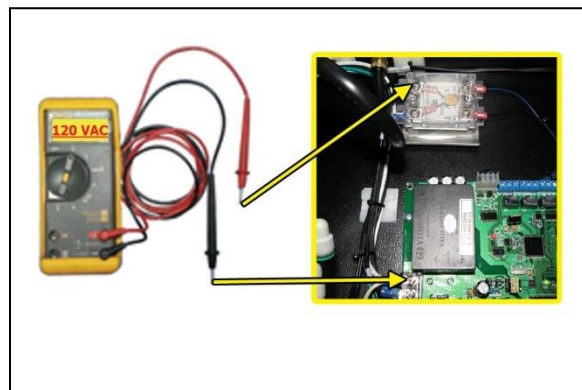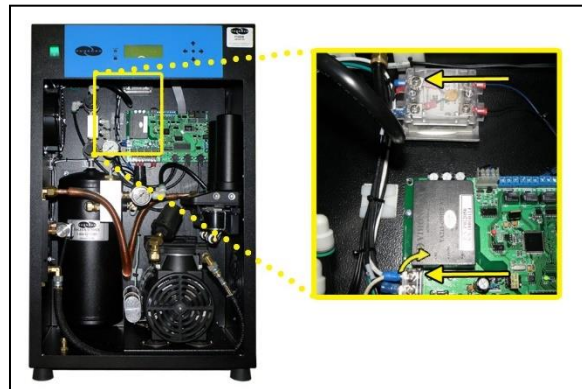

9.4 Measuring Incoming Voltage




WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. It is highly recommended that you remove all jewelry before performing any procedures.


9.4.1 Open Front Panel (section 8.6).

9.4.2 Locate the Incoming **POWER** connector inside the dryer.

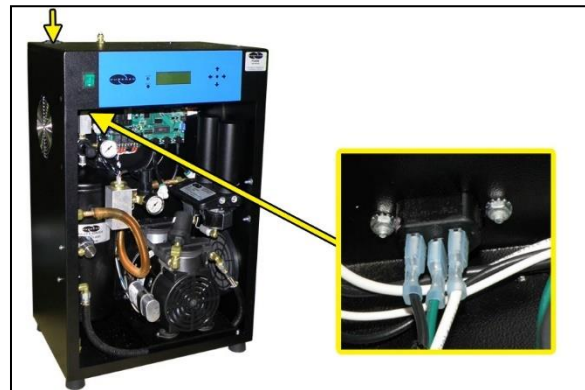

9.4.3 Use a Voltmeter to measure the voltage (inside dryer):

9.4.3.1 Place the probes between the Power Connector and terminal insulation so that they touch the metal contacts for BLACK (BROWN) wire and WHITE (BLUE) wire.

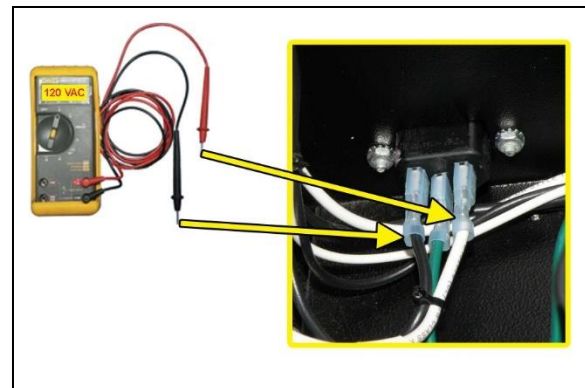

The voltage should measure:

- **110 - 125 VAC** for the P1500W, P1500WLP & P1500WHP models
- **208 - 230 VAC** for the P1502W, P1502WLP & P1502WHP models


If the incoming voltage measures less than indicated above, it is recommended that steps be taken at your facility to bring the power to the recommended level of voltage.

9.4.4 Close Front Panel.

9.5 Measuring Voltages at Solid State Relay

9.5.1 Open Front Panel (section 8.6).

9.5.2 Locate the Solid-State Relay inside the dryer at the top of back wall.

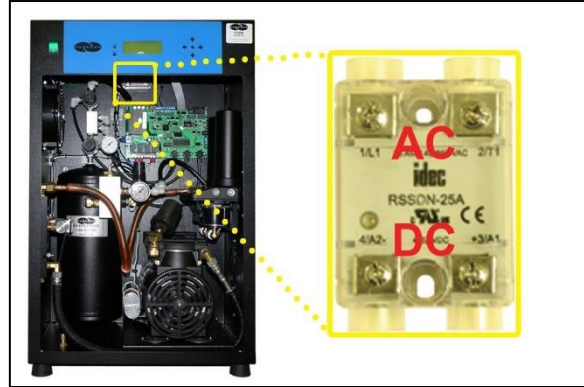


When the Compressor should be running:

9.5.3 Use a Voltmeter to measure across the AC terminals.
Should measure **0 VAC**.

9.5.4 Use a Voltmeter to measure across the DC terminals.


Should measure: **5 VDC**

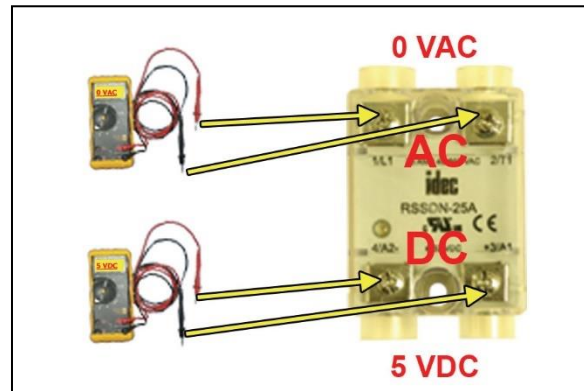

When the Compressor should NOT be running:

9.5.5 Use a Voltmeter to measure across the AC terminals.
Should measure:

- **110 - 125 VAC** for the P1500W, P1500WLP & P1500WHP models
- **208 - 230 VAC** for the P1502W, P1502WLP & P1502WHP models

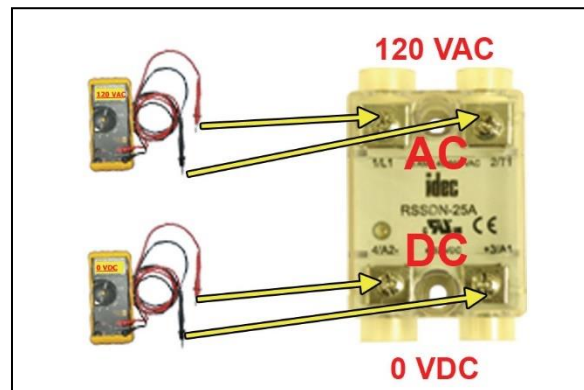

9.5.6 Use a Voltmeter to measure across the DC terminals.

Should measure **0 VDC**.

9.5.7 Close Front Panel.

If any of the AC voltage measurements are different than indicated above, the Solid State Relay is defective and should be replaced.

If any of the DC voltage measurements are different than indicated above, the Control Board may be defective and should be replaced.

See sections 11.1 for part detail and 11.5 for ordering information.

9.6 Testing Consistent Heatless Dryer Cycling




WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.


With the Compressor running:

9.6.1 Open Front Panel (section 8.6).

- 9.6.2** Place a piece of insulating material over the Compressor for this test (*i.e. piece of cardboard*).

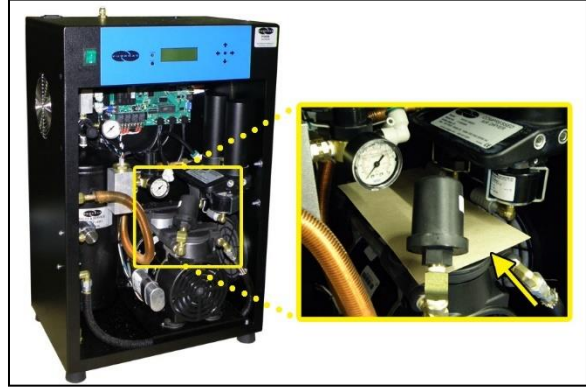


- 9.6.3** Locate the heatless dryer purge solenoids inside the air dryer.

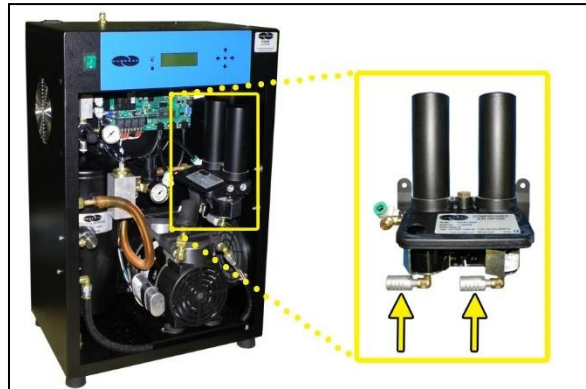

- 9.6.4** Place your hand beneath the purge solenoids to feel for purging air. Air should:

- Purge from Tower 1 side
- Purge from Tower 2 side
- **30 Seconds** later
- Purge from Tower 1 side
- **30 Seconds** later
- ...and so on.

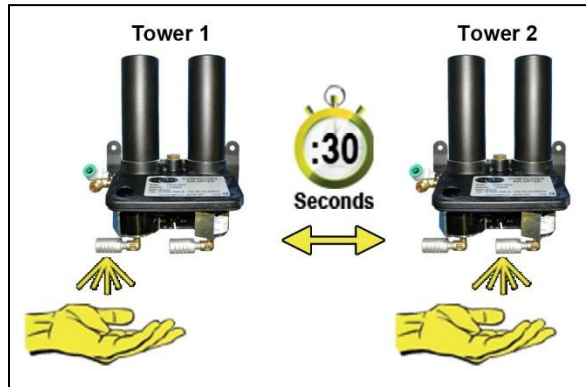

9.6.5 Remove insulating material from top of the Compressor.

9.6.6 Close Front Panel.



If the Heatless Dryer is not cycling consistently as described, see section 13.13 for troubleshooting information.

9.7 Testing Unloader Valve

With the Compressor running:

9.7.1 Open Front Panel (section 8.6).

9.7.2 Locate the Unloader Valve on the left side of the Dryer.

9.7.3 With a 9/16" wrench disconnect hose from the Unloader Valve.



9.7.4 Place your hand under the Unloader Valve to verify for air flow.


The Unloader Valve should purge all the head pressure when the Compressor turns off, and for approximately 2 seconds when the Compressor starts up again.



If air flows from this valve continuously the Unloader Valve is defective and should be replaced. See sections 11.2 for part detail and 11.5 for ordering information.

9.7.5 With a 9/16" wrench
connect hose to the Unloader
Valve.

9.7.6 Close Front Panel.

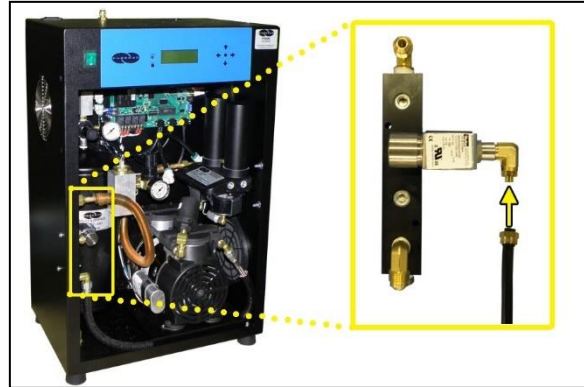


9.8 Measuring Heatless Dryer Solenoid Voltage

With the Compressor running:

9.8.1 Open Front Panel (section 8.6).


9.8.2 Locate the Heatless Dryer
Cycle Timer.

The timer has three (3) sets of
terminals (from left-to-right):
“**VALVE**” – Left solenoid
“**IN**” – Incoming power
“**VALVE**” – Right solenoid

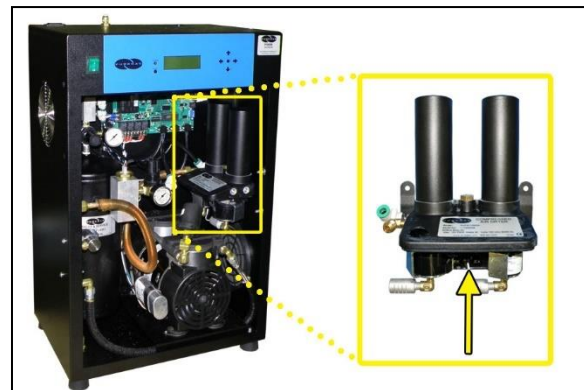

9.8.3 Use a Voltmeter to measure the DC voltage across each set of “VALVE” terminals.

Continue to measure for up to 45 seconds if no voltage is initially measured.

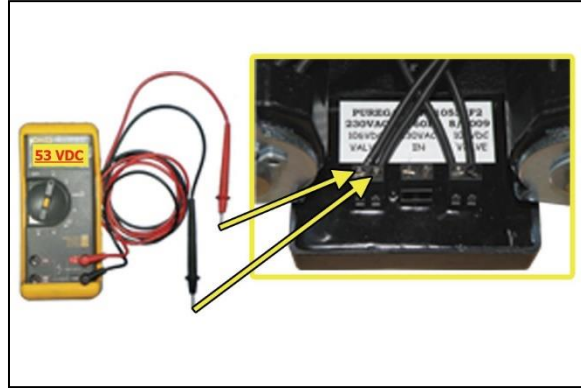

The voltage should measure:

- **53 VDC** for the P1500W, P1500WLP & P1500WHP models
- **106 VDC** for the P1502W, P1502WLP & P1502WHP models

9.8.4 Close Front Panel.


If the voltage does not measure as indicated above, this is an indication that the Cycle Timer is defective and should be replaced. See sections 11.3 for part detail and 11.5 for ordering information.

9.9 Testing Air Dryer Fan

NOTE: To test the fan, the cabinet temperature must be above 90° F.

9.9.1 Place your hand outside the dryer to feel for air being blown outwards.

NOTE: The fan will turn OFF when the cabinet temperature is below 80° F.

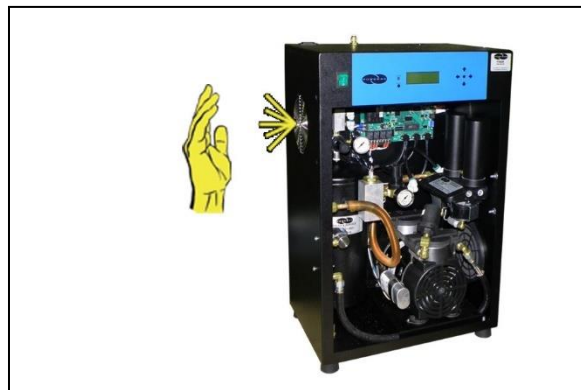

If the fan is not blowing air outwards as described:

- *Verify the cabinet temperature is above 90° F.*

- Check for loose wiring. Refer to the Wiring Diagram (section 14.1)
- Replace defective fan (see sections 11.1 for part detail and 11.5 for ordering information).
- Replace defective Control Board if fan does not respond properly to temperature changes (see sections 11.2 for part detail and 11.5 for ordering information).

9.10 Testing Safety Relief Valve

9.10.1 Open Front Panel (section 8.6).

9.10.2 Pull the ring handle on the Safety Relief Valve to verify air pressure is released.

9.10.3 Release ring handle and verify that no air is leaking from the valve.

9.10.4 Close Front Panel.



If the Safety Relief Valve fails either test described, it must be replaced. See sections 11.2 for part detail and 11.5 for ordering information.

9.11 Testing Compressor ON/OFF Cycling

9.11.1 Open Front Panel (section 8.6).

9.11.2 When the Unit Screen (8.2.5.1) appears on the display, press the **HOLD Button** on the Front Panel to freeze that screen.



With Compressor running:

- 9.11.3** Verify the Compressor shuts down when the tank pressure (**TANK**) reaches **90.0 PSI**.

*If the tank pressure (**TANK**) fails to reach 90 PSI, see section 0 for troubleshooting information.*

**With Compressor NOT****running:**

- 9.11.4** Pull the ring handle on the Safety Relief Valve to release air pressure from the air tank.

- 9.11.5** Verify the Compressor turns on when the tank pressure (**TANK**) falls to:

- **25.0 PSI*** for the P1500W, P1500WLP, P1502W, & P1502WLP models. *(50 PSI for Dryers using Firmware v2.84 and older)
- **60.0 PSI** for the P1500WHP & P1502WHP models



- 9.11.6** Close Front Panel

If the Compressor Cycling fails either test described, it indicates a problem with the Control Board which will need to be replaced. See sections 11.2 for part detail and 11.5 for ordering information.

9.12 Testing High Compressor Last Run Time Alarm


NOTE: For this test, allow the Display Screen to cycle through the information screens.

9.12.1 Open Front Panel (section 8.6).


9.12.2 Start timing when the Compressor turns on.

9.12.3 Pull the ring handle on the Safety Relief Valve (when necessary) to keep the Tank Pressure (**TANK**) from reaching **90 PSI**.

This prevents the Compressor from shutting down.

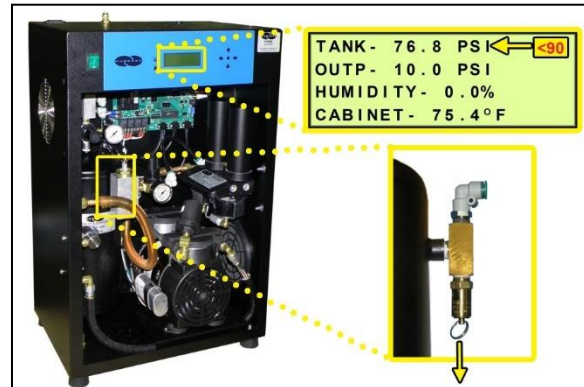

When the Compressor runs for 3:00 minutes (unless adjusted to a different Set Point by the user), a High Compressor Last Run Time (**LAST RUN**) alarm should appear on the System Screen.

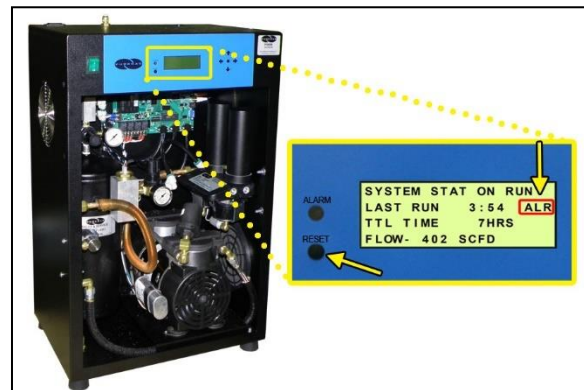

9.12.4 Press the **RESET Button**.


9.12.5 Close Front Panel.

*If you are unable to create a High Compressor Last Run Time (**LAST RUN**) alarm as described, see section 0 for troubleshooting information.*


9.13 Testing Humidity Alarm and System Shutdown

9.13.1 Power the air dryer **OFF**.


9.13.2 Open Front Panel
(section 8.6).

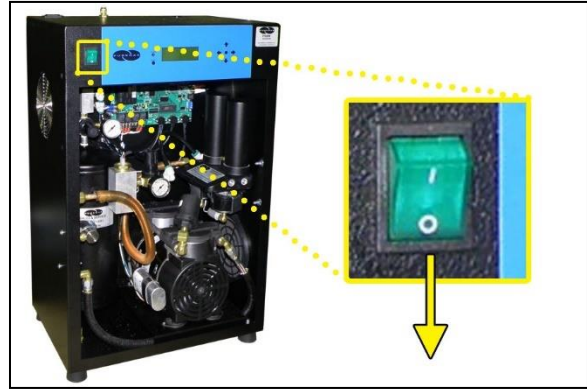


9.13.3 Depressurize the air dryer.

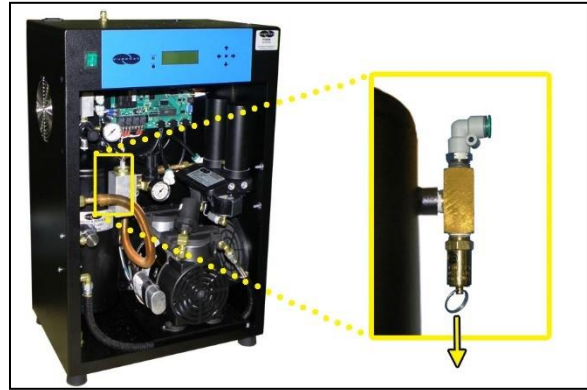

9.13.4 Unscrew and remove the
Humidity Sensor from the
Humidity Block.

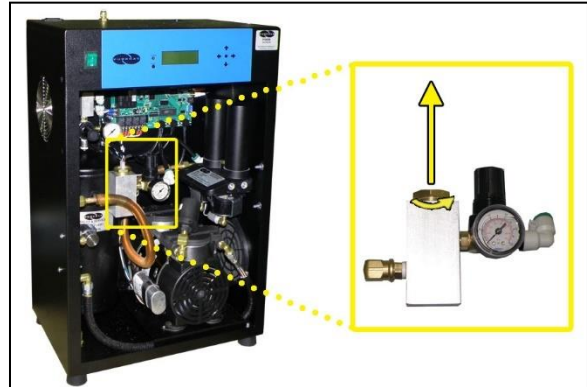


9.13.5 Power the air dryer **ON**.

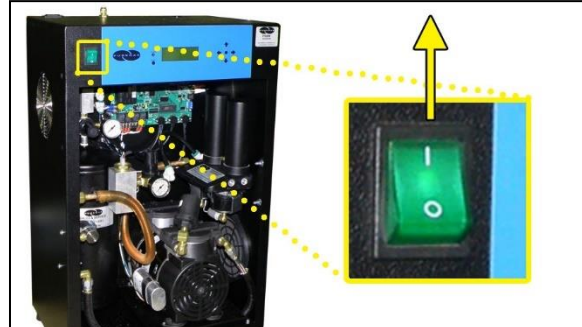


9.13.6 Allow the Humidity reading to rise over 10.0%

After three (3) minutes, verify that a Humidity Alarm appears and the dryer goes into **SHUTDOWN** mode.

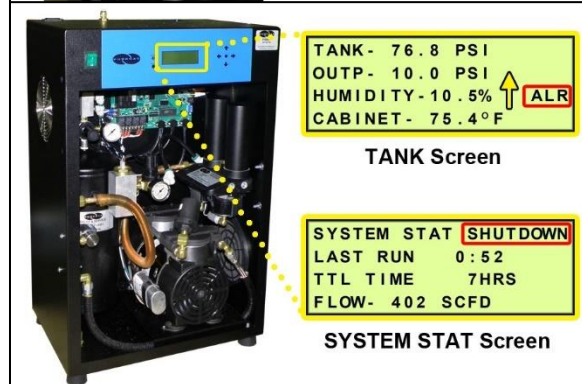


9.13.7 Replace the Humidity Sensor into the Humidity Block.

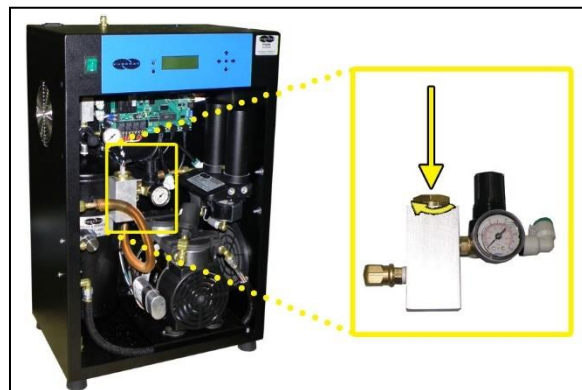

9.13.8 Press the **RESET Button** to clear the Humidity alarm.


9.13.9 Close Front Panel.

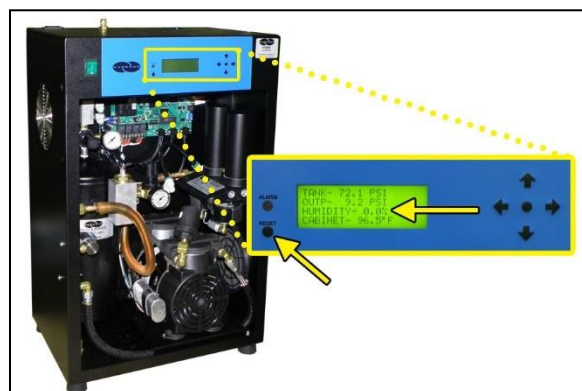

If you are unable to create a Humidity / Shutdown alarm as described, see section 13.10 for troubleshooting information.


9.14 Testing High Outlet Pressure Alarm

9.14.1 Make a note of the current Outlet Pressure (**OUTP**) reading.

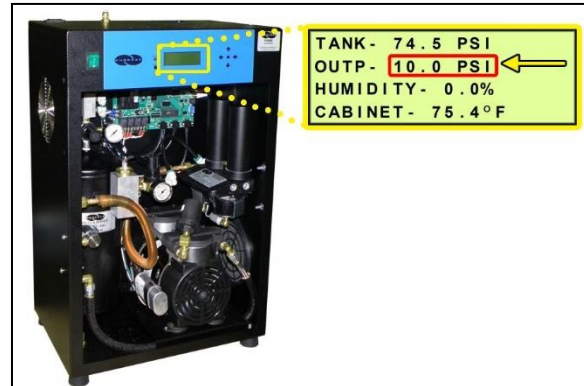

9.14.2 Open Front Panel (section 8.6).

9.14.3 Pull the Outlet Pressure Regulator knob out (or loosen the retaining nut – LP Models).

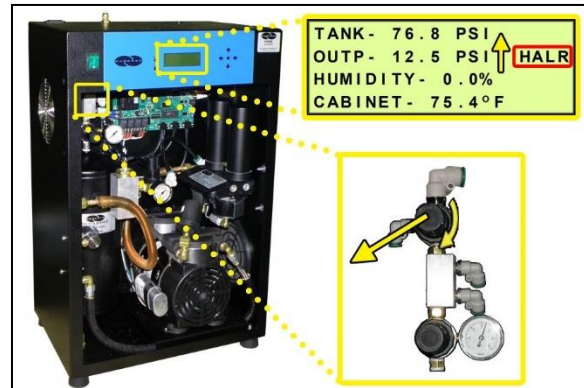

9.14.4 Turn knob clockwise until Outlet Pressure (**OUTP**) reading climbs **over:**

- **12.0 PSI** for P1500W & P1502W models
- **7.50 PSI** for P1500WLP & P1502WLP models
- **35.0 PSI** for P1500WHP & P1502WHP models

After one (1) minute, the High Pressure Alarm should appear on the display.

9.14.5 Turn Outlet Pressure Regulator knob counter-clockwise until Outlet Pressure (**OUTP**) reading lowers to the reading recorded in step 9.14.1



9.14.6 Push knob in to lock (or tighten the retaining nut – LP Models).

9.14.7 Press the **RESET Button**.

9.14.8 Close Front Panel.

If you are unable to create a High Outlet Pressure Alarm as described, see section 13.6 for troubleshooting information.


9.15 Testing Low Outlet Pressure Alarm

9.15.1 Make a note of the current Outlet Pressure (**OUTP**) reading.



9.15.2 Open Front Panel (section 8.6).

9.15.3 Pull the Outlet Pressure Regulator knob out (or loosen the retaining nut – LP Models).

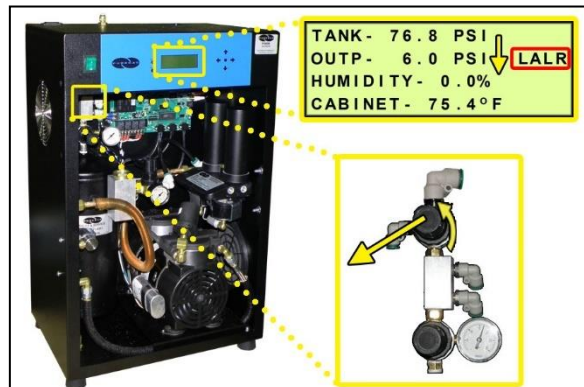

9.15.4 Turn knob counter-clockwise until Outlet Pressure (**OUTP**) reading drops **below:**

6.5 PSI for P1500W & P1502W models

0.30 PSI for P1500WLP & P1502WLP models

25.0 PSI for P1500WHP & P1502WHP models

After one (1) minute, the Low Pressure Alarm should appear on the display.

- 9.15.5** Turn Outlet Pressure Regulator knob clockwise until Outlet Pressure (**OUTP**) reading rises to the reading recorded in step 9.15.1



- 9.15.6** Push knob in to lock (or tighten the retaining nut – LP Models).

- 9.15.7** Press the **RESET Button**.

- 9.15.8** Close Front Panel.

If you are unable to create a Low Outlet Pressure Alarm as described, see section 13.8 for troubleshooting information.

9.16 Testing Air Fittings & Hoses for Leaks

NOTE: This is a general procedure that can be applied to any fitting or hose that has air pressure in it. **DO NOT SOAP TEST THE HUMIDITY SENSOR FITTING. DAMAGE TO THE SENSOR MAY OCCUR.**

With Compressor NOT running:

9.16.1 Listen for any 'hissing' sounds which may indicate a fitting or hose air leak.

With Compressor running:

9.16.2 Use a 1-inch paint brush to dab soapy water on the air fitting or hose connection to be tested.

If air bubbles appear at the connection, this indicates that air is leaking from the connection.



If any leaks are detected, take steps to seal them off (as necessary):

- *Tighten the fitting*
- *Re-connect the hose end*
- *Replace the fitting / hose / component*

10. Maintaining Your Dryer

In order to ensure that your P1500W Series Air Dryer continues to operate efficiently and reliably, ALTEC AIR recommends performing the following maintenance procedures at the specified Six Month and 8,000 Hour intervals.

It is also recommended that you print out the included *Six Month Maintenance (section 10.2)* and *8,000 Hour Maintenance (section 10.3)* log sheets and record all completed maintenance for historical tracking and reference purposes.

The log sheets include a Section reference column which indicates the User's Guide section containing the information about the specific procedure. Please refer to these sections for detailed procedural information.

NOTE: When operating at higher ambient temperatures, it is recommended that maintenance be performed more frequently.

NOTE: After 16,000 hours of run time, ALTEC AIR recommends sending in your Compressors and heatless dryers for a complete and comprehensive rebuild by our Service Department technicians. *See sections 12.1 and 12.2 for information on services and contacting ALTEC AIR.*

10.1 Safety & Warning Information



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.



WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.



CAUTION!

SHUT DOWN IMMEDIATELY FOR REPAIRS if the air Compressor shows any evidence of overheating or presents excessive noise.



CAUTION!

Depressurizing the air dryer may be necessary before performing certain procedures. **NEVER** remove pressure sensing tubes from the Control Board without depressurizing the air dryer first, or **damage to the Control Board will occur.**



IMPORTANT!

Performing routine maintenance as outlined in the *Maintaining Your Dryer* section will ensure optimal performance over the lifecycle of your air dryer.

**IMPORTANT!**

Performing procedures not described in this User's Guide or installing components not supplied by ALTEC AIR is NOT RECOMMENDED AND MAY VOID THE WARRANTY.

**IMPORTANT!**

After performing any maintenance, always soap test pressure fittings to check for air leaks. Also, check for any loose or disconnected wiring.

10.2 Six Month Maintenance

MODEL: _____

LOCATION NAME: _____

SERIAL NUMBER: _____

ADDRESS: _____

DATE INSTALLED: _____

Procedure	Section	Maintenance Interval (Months)				
		6	12	18	24	30
Install Six Month Maintenance Kit P011910	11.4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Read & Record Flow Rate (FLOW)	8					
Measure & Record Compressor Amp Draw	9.2					
Measure & Record Incoming Voltage: <ul style="list-style-type: none"> • 110 - 125 VAC for P1500W, P1500WLP & P1500WHP models • 208 - 230 VAC for P1502W, P1502WLP & P1502WHP models 	9.4					
Set System Pressure: <ul style="list-style-type: none"> • 80 PSI for P1500W, P1500WLP, P1502W & P1502WLP models • 90 PSI for P1500WHP & P1502WHP models 	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Set Static Pressure: <ul style="list-style-type: none"> • 17 PSI for P1500W, P1500WLP, P1502W & P1502WLP models • 60 PSI for P1500WHP & P1502WHP models 	6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Set Outlet Pressure	6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Consistent Heatless Dryer Cycling	9.6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Fan	9.9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Compressor ON/OFF Cycling	9.11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test High Compressor Last Run Time Alarm	9.12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Humidity Alarm & System Shutdown	9.13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test High & Low Outlet Pressure Alarms	9.14 & 9.15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Air Fittings for Leaks	9.16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Visually Inspect Inside & Outside of Unit for Loose Wiring or Hardware		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Maintenance Performed by:						
Date of Maintenance:						

NOTE: COPY OR PRINT THIS PAGE AND KEEP IT WITH THE AIR DRYER

10.3 8,000 Hour Maintenance

Under typical operating conditions:

8,000 hours of run time will occur between one (1) and two (2) years of use.

This will be identified by a **TTL TIME** Alarm on the display.

MODEL: _____

LOCATION NAME: _____

SERIAL NUMBER: _____

ADDRESS: _____


DATE INSTALLED: _____

Procedure	Section	Maintenance Interval (Hours)				
		8,000	16,000	24,000	32,000	40,000
Install 8,000 Hour Maintenance Kit P012252	11.4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Read & Record Flow Rate (FLOW)	8					
Measure & Record Compressor Amp Draw	9.2					
Set System Pressure: <ul style="list-style-type: none"> • 80 PSI for P1500W, P1500WLP, P1502W & P1502WLP models • 90 PSI for P1500WHP & P1502WHP models 	6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Set Static Pressure: <ul style="list-style-type: none"> • 17 PSI for P1500W, P1500WLP, P1502W & P1502WLP models • 60 PSI for P1500WHP & P1502WHP models 	6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Set Outlet Pressure	6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Consistent Heatless Dryer Cycling	9.6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Compressor ON/OFF Cycling	9.11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Air Fittings for Leaks	9.16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Reset TTL TIME Reading to Zero		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Visually Inspect Inside & Outside of Unit for Loose Wiring or Hardware		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Maintenance Performed by:						
Date of Maintenance:						

NOTE: COPY OR PRINT THIS PAGE AND KEEP IT WITH THE AIR DRYER


11. Replacement Parts & Accessories

11.1 Dryer Parts

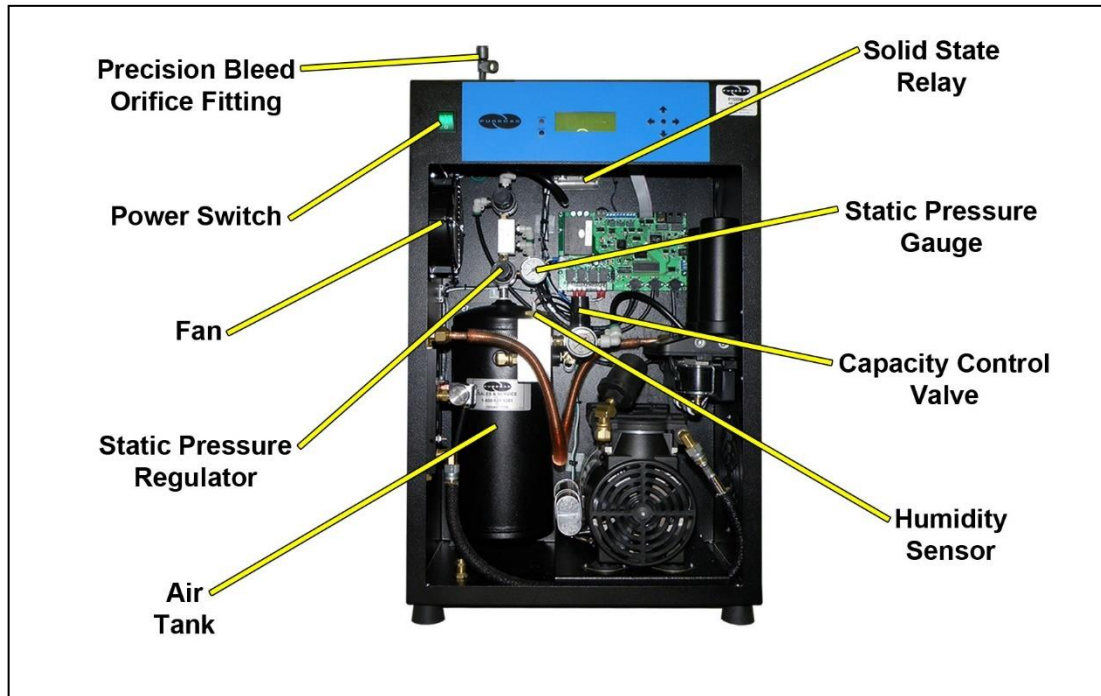


Description	Part Number	Quantity	Recommended Spare
Precision Bleed Orifice Fitting	P013349	1	
Power Switch	M038428	1	
Fan	P40801	1	
Static Pressure Regulator - W & WLP models WHP models	P010279 P010622	1	
Air Tank		1	
Solid State Relay	P05992	1	✓ (1)
Static Pressure Gauge - W & WLP models WHP models	P8345 P3197	1	
Capacity Control Valve	P010492	1	✓ (1)
Humidity Sensor	P013401	1	

11.2 Dryer Parts cont.

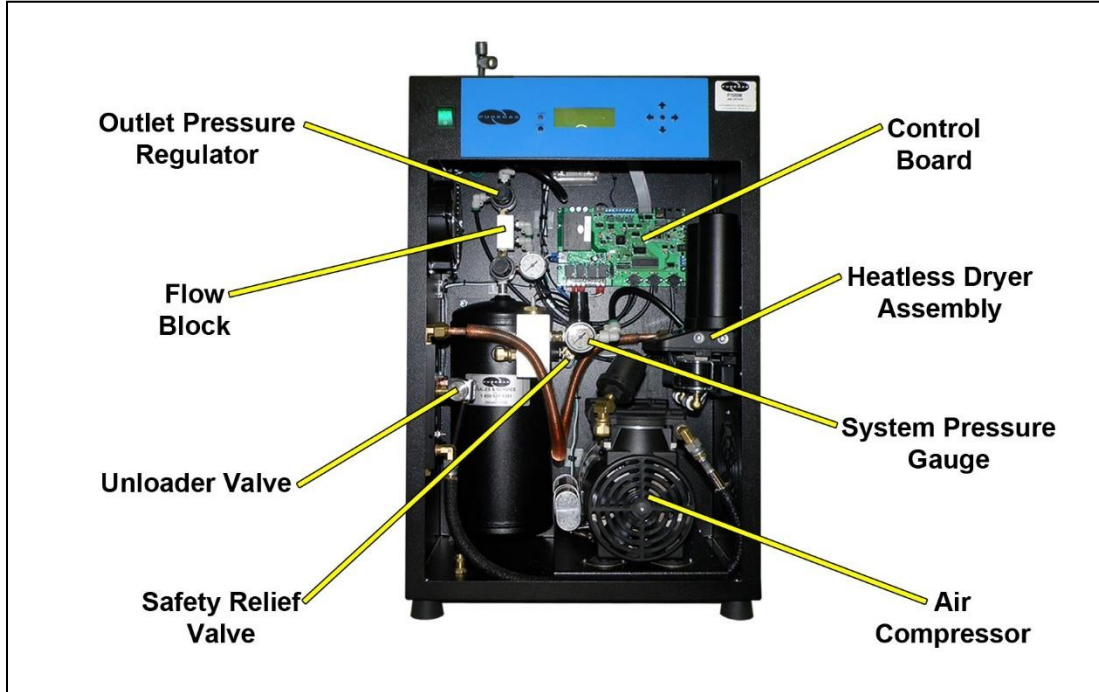





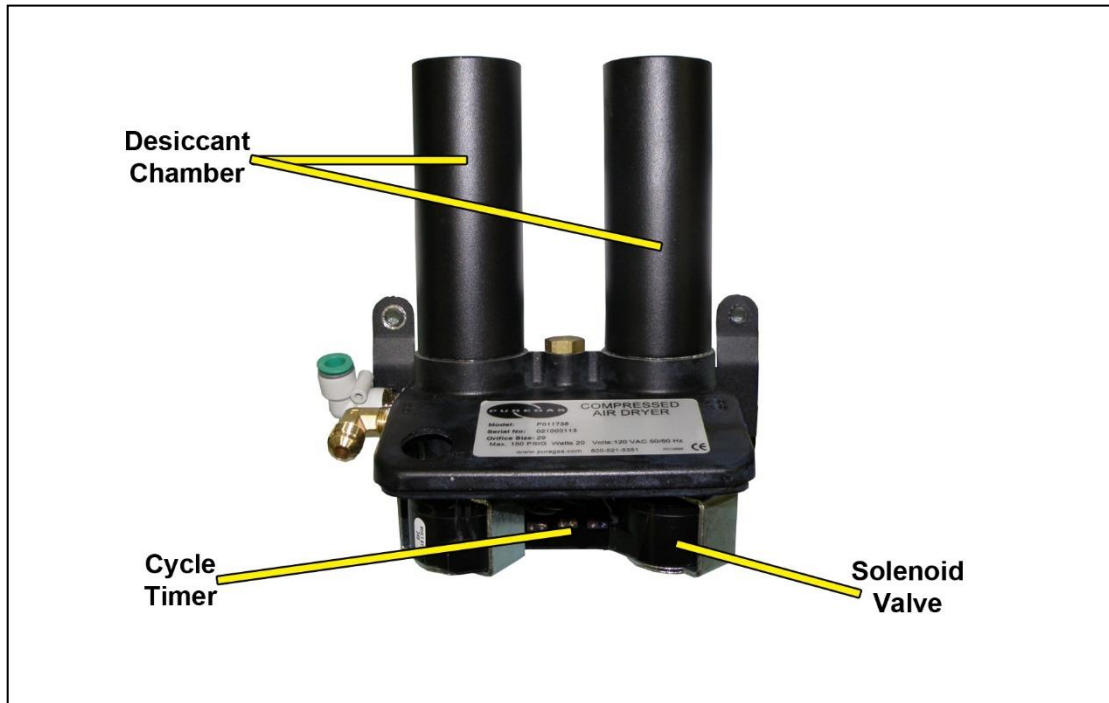

Description	Part Number	Quantity	Recommend Spare
Outlet Pressure Regulator – W models WLP models WHP models	P010279 P012316 P010622	1	
Flow Block		1	
Unloader Valve - P1500W Series (110 VAC) P1502W Series (220 VAC)	P011022 P010453	1	
Safety Relief Valve	P011777	1	
Control Board –	P013708	1	✓ (1)
Heatless Dryer Assembly	<i>See section 11.3 for detail.</i>		
System Pressure Gauge	P010695	1	
Air Compressor – P1500W Series (110 VAC) P1502W Series (220 VAC)	P011781 P011873	1	✓ (1)

11.3 Heatless Dryer Assembly Parts



Description	Part Number	Quantity	Recommend Spare
Heatless Dryer - P1500W Series (110 VAC) P1502W Series (220 VAC)	PHF2C106023 PHF2C20623	1	
Desiccant Chamber	P2004036	2	
Cycle Timer - P1500W Series (110 VAC) P1502W Series (220 VAC)	P010530F1 P010530F2	1	
Solenoid Valve Kit	<i>In Kit P012252. See section 11.4 for detail.</i>		

11.4 Accessories for Your Dryer

	Description	Part Number	Recommend Spare
	<p>Six Month Maintenance Kit Includes air intake filter, Compressor muffler</p>	P018302	✓ (2)
	<p>8,000 Hour Maintenance Kit Includes heatless dryer maintenance kit and Compressor maintenance kit.</p>	P012252	✓ (1)
	<p>Universal Rack Mounting Kit Includes mounting brackets and hardware for 19" or 23" racks.</p>	P011674	
	<p>Wall Mounting Kit Includes mounting brackets and hardware.</p>	P011773	
	<p>Cycle Kit Allows multiple dryers to be cycled.</p>	P08033W	
	<p>Cycle Kit Interface Kit</p>	PVDW34	

11.5 Ordering Parts from ALTEC AIR

Instruction for the replacement of individual listed components goes beyond the scope of this User's Guide and will not be covered. Please refer to the information included with the specific replacement part for this instruction.

Once you have identified your required parts and accessories, contact the ALTEC AIR Inside Sales / Service department to order:

(800) 521-5351 (**option 2**)

Fax – (303) 657-2205

sales@AltecAIR.com

parts@AltecAIR.com

12. Service & Repair

Only ALTEC AIR can offer factory direct rebuilds backed by a 6 month factory warranty.

- 2 week turnaround time
- Estimates available upon request
- Minimum service charge fee applies

12.1 Services Offered

- **Piston Compressor Rebuild**
 - Replace motor bearings, piston rod assemblies, and install a complete Compressor maintenance kit.
 - Test air flow, air pressure, and electrical performance
- **Heatless Dryer Rebuild**
 - Replace desiccant, o-rings, check valves, springs, and complete solenoid assembly
 - Test proper component operation
- **Desiccant Tower Repack**
 - Clean out tower and replace desiccant, filter, and o-ring
- **Circuit Board Repair** (Limited to current model boards only)
- **Complete Dryer Repair**

12.2 Initiating a Service Transaction

- Contact our Parts & Service Department at **1-800-521-5351 (option 3)** to obtain a Return Authorization (RA) number.
- Carefully package the item(s) to be returned.
- Mark the Return Authorization (RA) number on the outside of the shipping container.
- Include the main address and phone number of the individual to contact for related inquiry and follow-up information.
- Include the purchase order number.

13. Troubleshooting Your Dryer

13.1 Before You Call ALTEC AIR

PLEASE READ THIS SECTION FIRST. It is important that you use the following sections in order to diagnose and attempt to fix the problem with your air dryer before placing a call to ALTEC AIR Technical Support.

This troubleshooting guide is intended to simplify the isolation of problems, present possible causes, provide test procedures for verification, and suggest corrective actions to restore the air dryer back to normal operation. Each section begins with the most likely cause(s) of the issue. Otherwise, they start from the simplest possibilities and progress to more complicated ones.

This troubleshooting guide is designed to be easy to follow and very effective when used properly. It is suggested to always start at the beginning of the specific problem section and continue in sequence, following the procedures indicated.

13.2 Safety & Warning Information



WARNING!

For your safety, all the information in this User's Guide must be followed to minimize the risk of electrical shock, and prevent property damage or personal injury.



WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.



CAUTION!

Depressurizing the air dryer may be necessary before performing certain procedures. **NEVER** remove pressure sensing tubes from the Control Board without depressurizing the air dryer first, or **damage to the Control Board will occur.**



IMPORTANT!

Performing procedures not described in this User's Guide or installing components not supplied by ALTEC AIR is **NOT RECOMMENDED AND MAY VOID THE WARRANTY.**



CAUTION!

Do not test the Humidity Sensor with an ohm meter or apply any DC voltage. This will render the Humidity Sensor defective.

13.3 Air Dryer Won't Power ON

Possible Cause	Check	Corrective Action
POWER Switch in OFF position	Verify POWER switch is in the ON position	Turn POWER switch to the ON position
No incoming voltage to air dryer	Measure incoming voltage (section 9.4)	Troubleshoot facility power supply to air dryer

13.4 Display Screen Not Functioning

Possible Cause	Check	Corrective Action
Dryer experienced a power spike		Power the air dryer OFF for 15+ seconds. Power the air dryer ON .
Ribbon cable disconnected	Verify ribbon cable from the decal is connected at the display board	Reconnect the ribbon cable properly.

13.5 High Outlet Pressure Alarm

Possible Cause	Check	Corrective Action
Outlet Pressure set too high	Verify Outlet Pressure (OUTP) reading (section 8.2.5.1)	Adjust Outlet Pressure Regulator
High Outlet Pressure Alarm set point too low	Verify High Outlet Pressure Alarm set point	Raise High Outlet Pressure Alarm set point

13.6 Can't Create a High Pressure Alarm

Possible Cause	Check	Corrective Action
Defective Outlet Pressure Regulator	Verify that the Outlet Pressure Regulator can be adjusted	Replace Outlet Pressure Regulator if unable to adjust pressure (section 11.2)
High Outlet Pressure Alarm set point higher than default setting	Verify High Outlet Pressure Alarm set point	Adjust Outlet Pressure Regulator so that Outlet Pressure (OUTP) reading climbs over verified set point (section 9.14)
Defective Control Board	Verify that the Outlet Pressure (OUTP) reading is higher than the High Outlet Pressure Alarm set point (above)	Replace Control Board (section 11.2) if Outlet Pressure (OUTP) reading is over verified High Outlet Pressure Alarm set point for more than 1 minute and fails to create an alarm.

13.7 Low Outlet Pressure Alarm

Possible Cause	Check	Corrective Action
Outlet Pressure set too low	Verify Outlet Pressure (OUTP) reading (section 8.2.5.1)	Adjust Outlet Pressure Regulator
High Flow condition	Verify Flow Rate (FLOW) reading is not higher than expected	Troubleshoot High Flow condition (section 13.11)
Low Outlet Pressure Alarm set point too high	Verify Low Outlet Pressure Alarm set point	Lower the Low Outlet Pressure Alarm set point
Leak in the air system	With no outlet flow, test fittings and hoses for leaks (section 9.16)	Tighten any loose connections as required

13.8 Can't Create a Low Pressure Alarm

Possible Cause	Check	Corrective Action
Defective Outlet Pressure Regulator	Verify that the Outlet Pressure Regulator can be adjusted	Replace Outlet Pressure Regulator if unable to adjust pressure (section 11.2)
Low Outlet Pressure Alarm set point lower than default setting	Verify Low Outlet Pressure Alarm set point	Adjust Outlet Pressure Regulator so that Outlet Pressure (OUTP) reading drops below verified set point (section 9.15)
Defective Control Board	Verify that the Outlet Pressure (OUTP) reading is lower than the Low Outlet Pressure Alarm set point (above)	Replace Control Board (section 11.2) if Outlet Pressure (OUTP) reading is under verified Low Outlet Pressure Alarm set point for more than 1 minute and fails to create an alarm.

13.9 High Humidity



CAUTION!

Do not test the Humidity Sensor with an ohm meter or apply any DC voltage. This will render the Humidity Sensor defective.

Possible Cause	Check	Corrective Action
Low System Pressure	Verify System Pressure	Adjust System Pressure.
Low Flow Rate	Verify Flow Rate (FLOW) reading is low	Install the included Precision Bleed Orifice fitting to maintain a constant air flow. Raise capacity control setting to 90 PSI. (section 6.5.13)
High Humidity Alarm set point too low	Verify High Humidity Alarm set point If Flow Rate is low, allowing a higher alarm set point (up to 10%) will allow dryer to run within acceptable levels.	Raise High Humidity Alarm set point Over 10% not recommended
Defective Humidity Sensor	Perform the Testing Humidity Alarm and System Shutdown test (section 9.13)	Troubleshoot <i>Can't Create a High Humidity Alarm / Shutdown</i> condition (section 13.10)
Heatless Dryer not cycling between towers	Verify consistent Heatless Dryer cycling (section 9.6)	Troubleshoot <i>Inconsistent Heatless Dryer Cycling</i> condition (section 13.13)
Defective Control Board	Unplug Humidity Sensor from Control Board (see section 11.1 for Board location) Humidity reading should drop to 0%	If Humidity did not drop to 0%, replace Control Board (section 11.2)

13.10 Can't Create a High Humidity Alarm / Shutdown

These troubleshooting steps assume that the Humidity Element is removed from the Humidity Block during the *Testing Humidity Alarm and System Shutdown* (section 9.13) procedures.

Possible Cause	Check	Corrective Action
Humidity Sensor Cable disconnected	Verify that Humidity Sensor cable is connected to the Control Board	Connect Humidity Sensor cable
Defective Humidity Sensor	Verify that Humidity reading fails to climb higher than 15% or creates sporadic readings	Replace Humidity Sensor (section 11.1)
Defective Control Board	Verify that Humidity reading is over 15% for more than 1 minute	Replace Control Board if no alarm is created and system does not shut down (section 11.2)

13.11 High Flow Rate Alarm

Possible Cause	Check	Corrective Action
Air leak in downstream cable outside of dryer	Verify Flow Rate (FLOW) reading is not higher than expected	Fix downstream problem
Air leak inside of dryer	Test fittings and hoses for leaks (section 9.16)	Reconnect or replace bad fitting / hose
High Flow Alarm set point too low	Verify High Flow Alarm set point	Raise High Flow Alarm set point

13.12 High Cabinet Temperature Alarm

Possible Cause	Check	Corrective Action
Fan Failure	Verify fan is running (section 9.9)	Check for loose fan wiring (section 14.1) Replace defective fan (section 11.1)
High Ambient Temperature	Verify temperature of dryer operating location. Recommended ambient temperature is 40°-85°F.	Lower the ambient temperature of the dryer's operating location

13.13 Inconsistent Heatless Dryer Cycling

Possible Cause	Check	Corrective Action
Defective Solenoid Valve	Measure voltage going to the Heatless Dryer Solenoid Valves (section 9.8)	If voltage IS present, replace Solenoid Valves included in the 8,000 Hour Maintenance Kit (section 11.4)
Defective Cycle Timer	Measure voltage going to the Heatless Dryer Solenoid Valves (section 9.8)	If voltage IS NOT present, replace the Cycle Timer (section 11.3)

13.14 Compressor Doesn't Operate

Possible Cause	Check	Corrective Action
System is in Shutdown state	On the Display Panel, verify that the system is in SHUTDOWN state	Press the RESET Button
Defective Compressor	Measure Compressor voltage (section 9.3)	If voltage is good, replace Compressor (section 11.2) or send it in for repair (section 12.)
No power to Compressor	Measure Compressor voltage (section 9.3)	If voltage is not present or fluctuates, continue to next Possible Cause
Defective Solid State Relay	Measure AC voltages at Solid State Relay (section 9.5)	If measurements are bad, replace Solid State Relay (section 11.1)
Defective Control Board	Measure DC voltages at Solid State Relay (section 9.5)	If measurements are incorrect, replace Control Board (section 11.2)

13.15 Compressor Won't Build Pressure

Possible Cause	Check	Corrective Action
Low System Pressure	Verify System Pressure	Adjust System Pressure.
Defective Unloader Valve	Test Unloader Valve operation (section 9.7) If this is continuously flowing high amounts of air, the Unloader Valve is defective.	Replace Unloader Valve (section 11.2)
Leak in air system	Check all hoses and fittings between Compressor and Air Tank for air leaks (section 9.16)	Connect, tighten, or replace leaking component

13.16 Compressor Excessive AMP Draw

Possible Cause	Check	Corrective Action
Restriction in air line	Remove Discharge Hose from Compressor (hose to the heatless dryer) Re-measure Compressor AMP Draw (section 9.2)	If measurement is below the recommended amps, trace hoses from Compressor to Unloader Valve looking for restrictions or kinks
Compressor failing	Remove Discharge Hose from Compressor (hose to the heatless dryer) Re-measure Compressor AMP Draw (section 9.2)	If measurement is still above the recommended amps, replace the Compressor (section 11.2) or send it in for repair (section 12.)

13.17 High Compressor Last Run Time Alarm

Possible Cause	Check	Corrective Action
Low System Pressure	Verify System Pressure	Adjust System Pressure
High Flow condition	Verify Flow Rate (FLOW) reading is not higher than expected	Troubleshoot High Flow condition (section 13.11)
Defective Unloader Valve	Test Unloader Valve operation (section 9.7) If this is continuously flowing high amounts of air, the Unloader Valve is defective.	Replace Unloader Valve (section 11.2)
Defective Heatless Dryer Solenoid Valve	Verify consistent Heatless Dryer cycling (section 9.6) If either side is continuously flowing high amounts of air, the Solenoid Valve is defective.	Replace Solenoid Valves included in the 8,000 Hour Maintenance Kit (section 11.4)
Defective Solid State Relay	Measure AC voltages at Solid State Relay (section 9.5)	If measurements are bad, replace Solid State Relay (section 11.1)
Defective Control Board	Measure DC voltages at Solid State Relay (section 9.5)	If measurements are incorrect, replace Control Board (section 11.2)

13.18 Can't Create a High Compressor Last Run Time Alarm

Possible Cause	Check	Corrective Action
High Compressor Last Run Time Alarm Set Point higher than the default of 3:00 minutes	Verify High Compressor Last Run Time Alarm Set Point	Allow the Compressor to run longer than the verified set point (section 9.12)
Defective Control Board	Verify that the Compressor has run longer than the verified High Compressor Last Run Time Alarm Set Point (above)	Replace Control Board (section 11.2) if the Compressor runs longer than the verified High Compressor Last Run Time Alarm Set Point by 1 minute or more and fails to create an alarm.

13.19 Compressor Rapid ON/OFF Cycling

Possible Cause	Check	Corrective Action
Defective Solid State Relay	Measure AC voltages at Solid State Relay (section 9.5)	If measurements are bad, replace Solid State Relay (section 11.1)
Defective Control Board	Measure DC voltages at Solid State Relay (section 9.5)	If measurements are incorrect, replace Control Board (section 11.2)

13.20 Contacting ALTEC AIR Technical Support

Please read the *Before You Call ALTEC AIR* section (13.1)

Once you have exhausted all of the potential problems and solutions covered in the *Troubleshooting Your Dryer* section, and you still require further assistance to correct a problem, contact ALTEC AIR Technical Support:

(800) 521-5351 (**option 1**)

Have the following information available:

Trouble Ticket # (if following-up on a previous call): _____

Technician Name: _____ **Phone #:** _____


Model #: _____ **Serial #:** _____

Company Name: _____ **Location Name:** _____

City: _____ **State:** _____

14. Appendix

14.1 Wiring Diagram

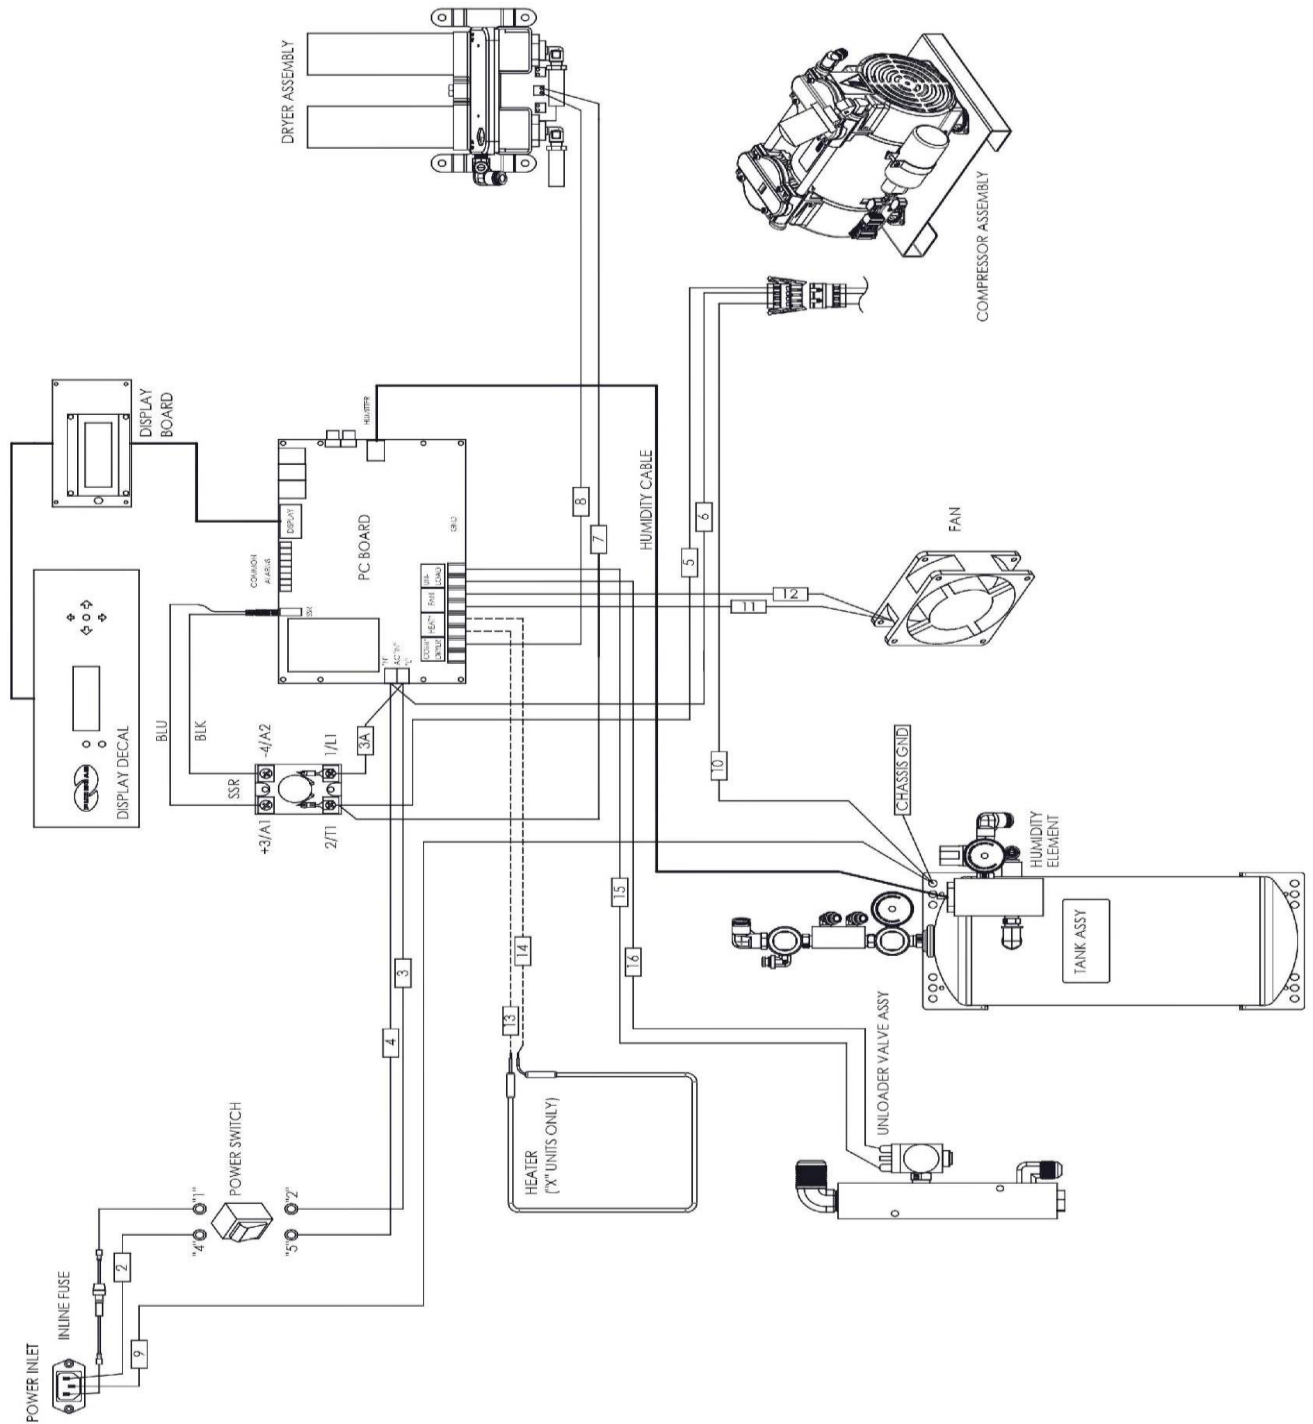

14.2 Set Point Limits and Defaults

14.2.1 System Adjustments

Description	Minimum Value	Maximum Value	Default Value	Unit of Measurement
System Pressure W & WLP models WHP models			80 90	PSI
Static Pressure W & WLP models WHP models			17 60	PSI
Outlet Pressure W models WLP models WHP models	2.0 0.30 2.0	15.0 7.50 60.0		PSI
Alarm Delay	OFF	ON	ON	
Startup Delay	0	10	0	Seconds

14.2.2 Alarm Set Points

Description	Minimum Value	Maximum Value	Default Value	Unit of Measurement	Shutdown
High Flow Rate Alarm W & WLP models WHP models	0 0	2000 1000	1500 1000	SCFD	
High Outlet Pressure Alarm W models WLP models WHP models	0.6 0.31 0.6	20.0 7.50 60.0	12.0 7.50 35.0	PSI	
Low Outlet Pressure Alarm W models WLP models WHP models	0.5 0.30 0.5	19.9 7.49 59.9	6.5 0.30 25.0	PSI	
High Humidity Alarm	3	15	10	%	YES
High Compressor Last Run Time Alarm	2:00	5:00	3:00	Minutes	
High Cabinet Temperature Alarm			120	Deg F	YES
Compressor Total Run Time Alarm			8000	Hours	

14.2.3 System Operations

Description	ON Value	OFF Value	Default Value	Unit of Measurement
Compressor W & WLP models WHP models	25.0* 60.0	90.0 90.0		PSI
Fan	90	80		Deg F

*(50 – 90 PSI for Dryers using Firmware v2.84 and older)

14.3 SNMP Parameters

Device Configuration Information

Device ID	Alphanumeric (Defined by Customer)
Device Model	Alphanumeric (Factory Preset)
Device Firmware Version	Numeric (Factory Preset)
Current Date/Time	Numeric (mm/dd/yy hh:mm)
IP Address	Numeric (xxx.xxx.xxx.xxx)
Subnet Mask	Numeric (xxx.xxx.xxx.xxx)
Gateway Address	Numeric (xxx.xxx.xxx.xxx)
SNMP Trap Server Address	Numeric (xxx.xxx.xxx.xxx)
SNMP Read Community String (also sets SNMP Trap Community String)	Alphanumeric (6-14 digits, Default = "public")
SNMP Write Community	Alphanumeric (6-14 digits, Default = "123456")

Status Readings (Read-Only)

Outlet Pressure Reading	Numeric (PSI)
Tank Pressure Reading	Numeric (PSI)
Humidity Reading	Numeric (%)
Flow Reading	Numeric (SCFD)
Cabinet Temperature Reading	Numeric (DEG F)
Compressor Total Run Time Reading	Numeric (Hours)
Compressor Last Run Time Reading	Numeric (Seconds)
System Status	ON / SHUTDOWN
Compressor Status	ON / OFF
Fan Status	ON / OFF
Heater Status (Outdoor Unit Only)	ON / OFF

Alarm Readings (Read-Only)

High Flow Alarm	OK / Alarm
High Outlet Pressure Alarm	OK / Alarm
Low Outlet Pressure Alarm	OK / Alarm
High Humidity Alarm	OK / Alarm
High Cabinet Temperature Alarm	OK / Alarm
High Compressor Last Run Time Alarm	OK / Alarm
Maintenance Required Alarm	OK / Alarm
Total Alarm	OK / Alarm

Configuration Settings (Read-Write)

High Flow Alarm Threshold	Numeric (SCFD)
High Outlet Pressure Alarm Threshold	Numeric (PSI)
Low Outlet Pressure Alarm Threshold	Numeric (PSI)
High Humidity Alarm Threshold	Numeric (%)
High Compressor Last Run Time Alarm Threshold	Numeric (Seconds)
Reset Compressor Total Run Time Reading	Numeric (Hours)
Start Up Delay	Numeric (Seconds)
Alarm Reset	RESET
Alarm Delay	ON / OFF

Alarm Traps Sent to SNMP Server

High Flow
High Outlet Pressure
Low Outlet Pressure
High Humidity
High Cabinet Temperature
High Compressor Last Run Time
Maintenance Required

15. Limited Warranty Agreement

ALTEC AIR products carry a one (1) year warranty against defective workmanship and material. This period starts at date of shipment. Not included are the components subject to normal replacement during a year's operating time.

No claims for labor in replacing defective parts or for consequential damages will be allowed. Replacement parts will be invoiced in the regular way, with invoices subject to adjustment after the parts claimed defective are examined at our factory. In addition, no material or parts will be accepted at our factory for in-warranty repairs or credit without previous authorization from ALTEC AIR.

Responsibility for damages incurred in transit will be borne by the user and the user in turn should file any damage claim against the carrier. All warranty items are F.O.B. Broomfield, Colorado. Freight charges are the responsibility of the user.

This warranty shall not apply to any ALTEC AIR product which shall have been repaired or altered in any way by anyone other than ALTEC AIR or authorized personnel so as to affect, in our judgment, its proper functioning or reliability, neither will it apply to any product which has been subject to misuse, negligence, or accident. The installation of unauthorized non ALTEC AIR parts will void the warranty on those ALTEC AIR products.

Registration Reminder

If you haven't already done so, please take a moment to register your ALTEC AIR P1500W Series Air Dryer. **Registering is necessary to activate this Limited Warranty on your product.** Once you register, you are eligible to receive free technical support, as well as updates concerning your ALTEC AIR products.

See Section 7. for details on Registering Your Dryer.

16. Contacting ALTEC AIR

16.1 General

ALTEC AIR, LLC
226A Commerce Street
Broomfield, Colorado 80020

(800) 521-5351

(303) 427-3700

Fax – (303) 657-2233

info@AltecAIR.com

www.AltecAIR.com

16.2 Sales

(800) 521-5351 (**option 2**)

Fax – (303) 657-2205

sales@AltecAIR.com

parts@AltecAIR.com

16.3 Service

(800) 521-5351 (**option 3**)

Fax – (303) 657-2205

16.4 Technical Support

(800) 521-5351 (**option 1**)

DON'T FORGET TO REGISTER YOUR DRYER!

See Section 7. for details on Registering Your Dryer.

